

Uputstvo za upotrebu (EN)

SENCOR kuhinjska vaga SKS 34RD

SENCOR



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/sencor-kuhinjska-vaga-sks-34rd-akcija-cena/>

Kitchen scale

User's manual

EN



SENCOR®

SKS 30WH / SKS 31GR / SKS 32BL
SKS 33OR / SKS 34RD / SKS 35VT
SKS 36YL / SKS 37GG / SKS 38RS

Translation of the original manual

Before first use, please read all instructions contained in this user's manual carefully, even if you are already familiar with using similar products. Only use this product in accordance with the instructions described in the user's manual. Please store this manual for later use.

Keep the original packaging, including the internal packing material, warranty card and proof of purchase receipt, at least for the duration of the warranty. If you need to ship this product, pack it in the original cardboard box to ensure maximum protection during transport (e.g., when moving or when you need to send this product for repair).

CONTENTS

IMPORTANT SAFETY NOTICE.....	3
DESCRIPTION.....	5
INSTRUCTIONS FOR USE.....	6
OVERLOAD INDICATOR.....	7
CHANGING THE BATTERIES.....	7
CLEANING AND MAINTENANCE.....	7
DISPOSAL OF USED BATTERIES.....	7
TROUBLESHOOTING.....	7
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS.....	8
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES.....	8
TECHNICAL SPECIFICATIONS.....	8

IMPORTANT SAFETY NOTICE

- Carefully unpack the product, and take care not to throw away any part of the packaging material before you have found all parts of the product.
- This product must not be used by persons (including children) with physical or mental impairments or by inexperienced persons, unless properly trained or schooled in the safe use of the product, or unless they have been properly supervised by a qualified person who will be responsible for their safety.
- Children must be supervised to ensure that they do not play with the product.
- Under no circumstances should you repair or alter the product yourself. Entrust all repairs and adjustments to a specialised company or service centre. Tampering with the product may void the warranty.
- Store and use the product away from flammable or volatile materials and substances.
- Keep the product away from extreme temperatures, direct sunlight and excessive humidity. Do not use in a dusty environment.
- Do not place the product near heaters, open fires or other sources of heat.
- This product is designed for household use. Do not use in industrial surroundings or outdoors!
- Do not use the product for purposes other than those intended.
- Do not spray the product with water or any other liquid. Do not submerge the product in water or any other liquid.

Kitchen scale

SKS 30WH / SKS 31GR / SKS 32BL / SKS 33OR / SKS 34RD / SKS 35VT/ SKS 36YL / SKS 37GG / SKS 38RS


- If you will not be using the product for an extended period of time, remove the batteries. Otherwise they may leak inside the product and cause irreparable damage.
- For plugging the product into the mains socket, use only the type of adaptor included with the product.
- It is not permitted to make construction changes to the product nor to attach HF amplifiers or antennas.
- The manufacturer is not responsible for damages caused by incorrect use of this appliance or its accessories. Such damages include food spoilage, injuries, burns, scalding, fire, etc.

Kitchen scale

SKS 30WH / SKS 31GR / SKS 32BL / SKS 33OR / SKS 34RD / SKS 35VT/ SKS 36YL / SKS 37GG / SKS 38RS

EN

DESCRIPTION

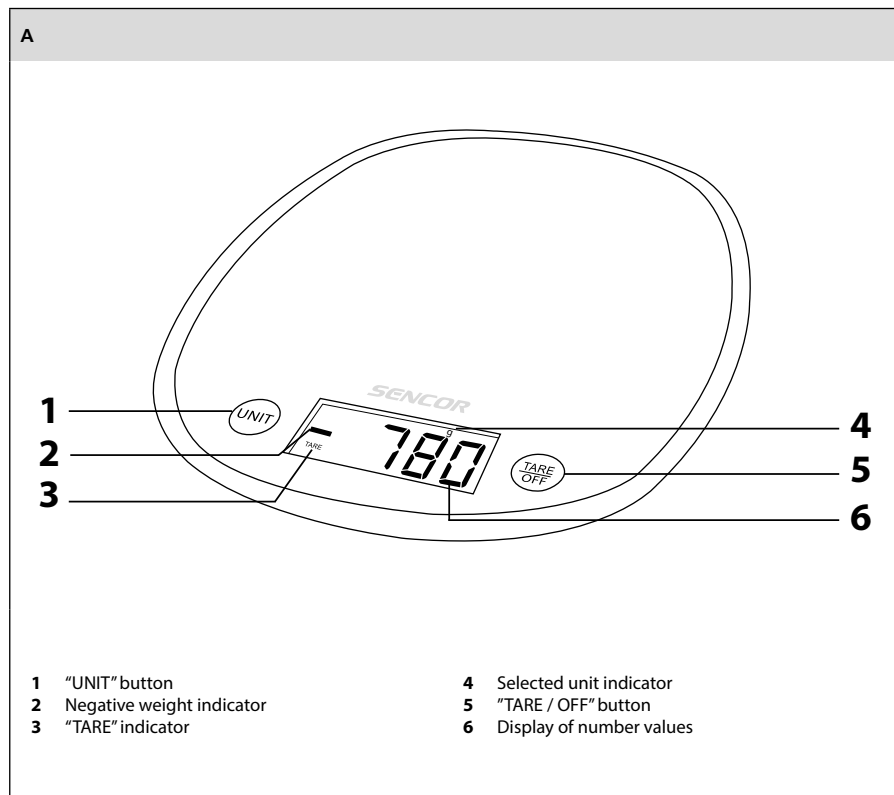

Kitchen scale

SKS 30WH / SKS 31GR / SKS 32BL / SKS 33OR / SKS 34RD / SKS 35VT / SKS 36YL / SKS 37GG / SKS 38RS

INSTRUCTIONS FOR USE

Turning the scale on and off



Attention

Before turning on the appliance for the first time, open the battery cover on the underside of the scale and remove the insulation strip that provides protection to the battery during transport.

- 1) This scale has a function "Auto-on" that automatically turns on the scale. To start the scale, use your hand to push down on the weighing platform or place the weighed item on it.
Note: We recommend starting the scale by pushing down on the weighing platform with your hand. The scale will only start automatically when a sufficiently heavy item is placed on it (usually approx. 0.5 kg). If you start the scale by placing an item on the weighing platform, the weight of 0 will be shown. This option is thus particularly suitable when you need to place a bowl in which the ingredients will be weighed on to the scale prior to weighing the actual ingredients.
- 2) Turn the scale off by pressing the "TARE / OFF" button.



Warning

The scale turns itself off automatically approximately one minute after displaying "0.0" on the LCD display or when it is idle. By turning it off after weighing using the "TARE / OFF" button you will save the batteries.

Switching units

While weighing you may switch between units (g -> ml -> lb:oz -> fl .oz) by pressing the "UNIT" button.

Weighing procedure

- 1) Carefully place the weighed food on the plate, the scale will be automatically activated.
- 2) If necessary select the weight unit (g -> ml -> lb:oz -> fl .oz).
- 3) The weight will be displayed on the display in the selected units.

Additional weighing function

- 1) Carefully place the weighed food/item on the weighing plate, the scale will be automatically activated.
- 2) If necessary select the weight unit (g -> ml -> lb:oz -> fl .oz).
- 3) As soon as the scale stabilises, press the "TARE / OFF" button. The current weight will be erased and the display will be reset to zero.
- 4) Place other foods on the scale. The display will display only the weight of the newly placed foods.
- 5) In this way you may continue to weigh additional foods by adding them step by step and repeating steps 4 and 5.

How to turn off the additional weighing function (TARE)

Remove all food from the scale. A negative value will be displayed on the display. Press the "TARE / OFF" button to reset the scale to zero.

OVERLOAD INDICATOR

If the scale is overloaded (max. capacity 5 kg), the display will show the symbol "EEEE". To prevent damaging the scale, immediately remove the weighed item / food.

CHANGING THE BATTERIES

If the display shows the dead battery icon "Lo", it is time to change the batteries.

- 1) Remove the battery compartment cover located on the underside of the scale.
- 2) Remove the old batteries.
- 3) Insert three 1.5V AAA batteries into the battery compartment, while ensuring that you adhere to the correct polarity direction as indicated in the battery compartment.



Warning

- if you will not use the scale for a long time, store it in a horizontal position. This position better protects the sensitive sensors located in the scale footings.
- Do not place or leave any objects on the scale that may place unnecessary stress on the sensors.
- Avoid using the scale in the vicinity of a strong magnetic field. Its effect may impact weighing accuracy.

CLEANING AND MAINTENANCE

To clean the outer parts of the appliance, use a soft cloth dipped in lukewarm water.

DISPOSAL OF USED BATTERIES

This product comes included with three 1.5V AAA batteries. Do not place used batteries into regular household waste. Instead, use the appropriate waste collection and recycling centres.

TROUBLESHOOTING

If the scale is displaying random values or if it is not turning off automatically, you need to restart it. In such cases, remove the batteries for about 10 seconds and place them back again. The scale should work normally again.

Kitchen scale

SKS 30WH / SKS 31GR / SKS 32BL / SKS 33OR / SKS 34RD / SKS 35VT/ SKS 36YL / SKS 37GG / SKS 38RS

TECHNICAL SPECIFICATIONS

Power supply	3× 1.5 V AAA batteries.
Max. measurable weight	5 000 g
Sensitivity weighing.....	1 g
Switching between units.....	g -> ml -> lb:oz -> fl .oz
Automatic shut off when idle	60 s
Dimensions (width × depth × height)	220 × 180 × 25 mm
Display dimensions (length × height)	56 × 25 mm
Weight	0.33 kg

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes in the text, design and technical specifications may occur without prior notice and we reserve the right to make such changes.

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Sencor, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/sencor-kuhinjska-vaga-sks-34rd-akcija-cena/>