

Uputstvo za upotrebu (EN)

ENERGY SISTEM bluetooth zvučnik Outdoor Box Splash portable

ENERGY  SISTEM



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/energy-sistem-bluetooth-zvucnik-outdoor-box-splash-portable-akcija-cena/>

ENGLISH

Introduction	3
Care and maintenance	3
Features	3
General features	3
Technical specifications	4
Audio	4
Bluetooth connectivity	4
Audio inputs	4
Battery	4
Other features	4
Product content	4
General overview	4
Switching on and off the device	5
Playback control	5
Bluetooth connection (BT)	6
True Wireless Stereo (TWS)	6
Auxiliary audio input (AUX)	6
Call control (hands-free function)	6
Voice assistant	6
Charging the battery	7
Warranty	7
Declaration of conformity	7



Introduction

- Thank you for trusting our company and buying the new *Outdoor Box Splash*. We hope you enjoy it.
- Before you start using your *Outdoor Box Splash* we strongly recommend reading this manual to get used to it.

Care and maintenance

- Use neither corrosive nor abrasive cleaning products.
- Do not disassemble the device. All repair works should be carried out exclusively by qualified staff of Energy Sistem Technology, S.A.
- Please make sure your *Outdoor Box Splash* is off when you are not using it. Do not store the device with an empty battery for long periods.
- When using your *Outdoor Box Splash* in salt water or in pool water, you will have to rinse it with clear water to remove any remains of chlorine or salt.
- When submerging your *Outdoor Box Splash* in the water, make sure that the charging connector and the audio covers are properly closed.
- Do not immerse your *Outdoor Box Splash** for more than 30 minutes.

Features

General features

- Portable speaker with 3 W power to enjoy music anywhere. Take it along to the beach or the swimming pool. You can also enjoy your music when you are out in mountains.
- The device features Bluetooth 5.0 and True Wireless Stereo technology to listen to music with twice as much power.
- You won't have to do without it if you run out of battery thanks to its quick charge (USB Type-C port) feature.

- Hang it on your backpack and take it with you anywhere using the strap.
- Rechargeable 1000 mAh battery providing over 14 hours of music non-stop.

Technical specifications

Audio

- Sound system: mono (1.0)
- Power: 3 W
- 1 full range speaker: 1.75", 3 W
- Frequency response: 50 Hz ~ 18 kHz
- Signal/Noise ratio: > 90 dB

Bluetooth connectivity

- Bluetooth 5.0, class 2
- Frequency band: 2.4 GHz
- Maximum output power: < 20.00 dBm
- Compatible Bluetooth profiles: HSP / HFPV / A2DP / AVRCP / GAVDP
- Up to 20 m distance range
- True Wireless Stereo (TWS) technology with a distance range of up to 20 m
- Hands-free function

Audio inputs

- 3.5 mm audio-in (analogue stereo input)

Battery

- Capacity: 1000 mAh / 3.7 V
- Type: lithium polymer
- Battery life at medium volume: 14 hours*
- Charging time: 1 hour 40 minutes
- Power supply: 5.0 V / 1 A
- Charging system: USB Type-C
- This value is approximate. The battery life depends on the selected volume and the type of music.


Other features

- It can be submerged under water, a metre deep, for a maximum of 30 minutes.
- Dustproof
- Shockproof

Product content

- Outdoor Box Splash
- Strap
- USB Type-C cable
- Audio cable: 3.5 mm
- Quick guide

General overview

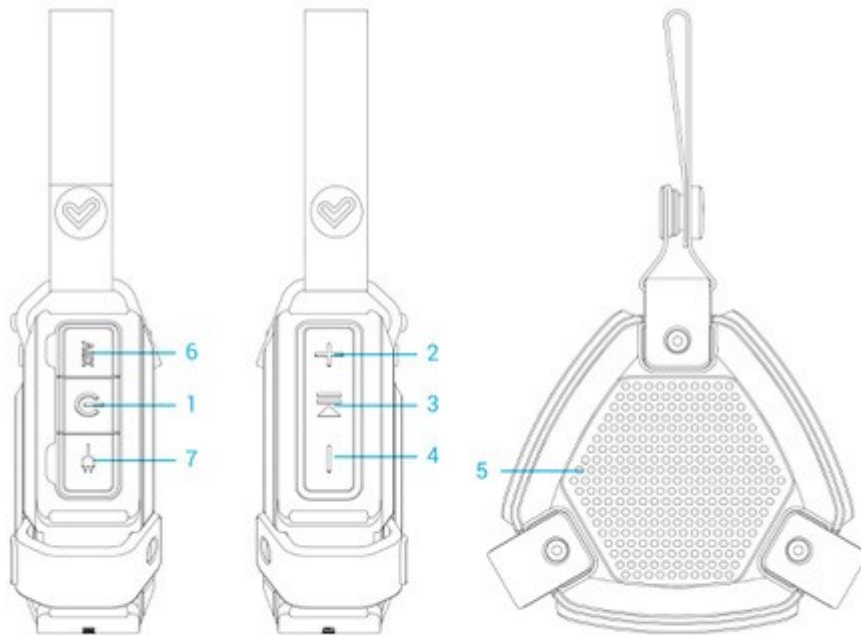

1. On/Off
2. Volume +/Next
3. Play/Pause/Calls/TWS
4. Volume -/Back
5. LED status indicator
6. 3.5 mm mini jack audio-in
7. USB Type-C charging port

Switching on and off the device

Press and hold *On/Off* (1) for 3 seconds to switch on your *Outdoor Box Splash*. At this point the *LED status indicator* (5) lights up. You will also hear a confirmation sound.

Press and hold *On/Off* (1) for 3 seconds to turn off your device. You will hear a confirmation sound. At this point the *LED status indicator* (5) switches off.

Playback control

Control all playback functions from your *Outdoor Box Splash*. Press *Play/Pause/Calls/TWS* (3) to play or pause a song.

Press *Volume +/Next* (2) or *Volume -/Back* (4) to adjust the volume level according to your preferences.

Press and hold *Volume +/Next* (2) or *Volume -/Back* (4) for 2 seconds to skip to the next or previous track.

Note: Bear in mind that you can only control playback from the connected music player while using AUX mode (audio-in).

Bluetooth connection (BT)

Switch on your *Outdoor Box Splash*. At this point the *LED status indicator (5)* blinks blue. You will also hear a sound. Enable Bluetooth on your smartphone or tablet and pair it with your *Outdoor Box Splash*. The devices will be connected without codes. After pairing the devices, you will hear a confirmation sound. The *LED status indicator (5)* lights up blue.

At this point you will be able to start music playback on your smartphone or tablet. The Bluetooth wireless connection range is up to 20 metres.

You can control playback from the speaker pressing *Play/Pause/Calls/TWS (3)*, *Volume +/Next (2)* and *Volume -/Back (4)*.

Your *Outdoor Box Splash* will be automatically paired when you turn it on once again, provided that Bluetooth is enabled on your smartphone or tablet.

True Wireless Stereo (TWS)

This technology makes it possible to wirelessly pair a second *Outdoor Box Splash* and hear music with twice as much power. This way, you will create a stereo sound system with separate left and right channels.

Switch on both *Outdoor Box Splash* and enable Bluetooth on both units. Press *Play/Pause/Calls/TWS (3)* on one of them and wait until both units are paired. You will hear a confirmation sound. Pair the second unit with your smartphone or tablet to play music via TWS.

You can control playback pressing the playback buttons on any of the paired speakers.

To end the TWS connection, press and hold *Play/Pause/Calls/TWS (3)* until both units disconnect from each other.

Auxiliary audio input (AUX)

You can also plug an external device into the *3.5 mm mini jack audio-in (6)* of your *Outdoor Box Splash* using the provided 3.5 mm mini jack audio cable. Your *Outdoor Box Splash* enables AUX mode automatically when plugging the audio cable.

NOTE: It is not possible to control music playback from the speaker while using this mode. To control playback functions, you will have to use the connected music player.

Call control (hands-free function)

Once the speaker and your smartphone are paired, you will be able to answer incoming calls from the speaker itself.

When receiving a call, the song you are listening to stops and the ringing tone sounds instead. Press *Play/Pause/Calls/TWS (3)* to answer an incoming call and press it once again to hang up. Press and hold *Play/Pause/Calls/TWS (3)* for 2 seconds to reject a call. The song will automatically resume afterwards.

Keep a distance of 30-50 cm from the speaker for a proper voice reception.

Voice assistant

You can activate your smartphone voice assistant, provided that your *Outdoor Box Splash* is paired with your smartphone via Bluetooth. To do so, press *On/Off (1)* twice. At this point, the voice assistant will be ready to receive commands.

Charging the battery

When the battery level is below 10%, you will hear a sound reminding you to charge it. Plug the USB Type-C end of the provided USB Type-C cable into the *USB Type-C charging port (7)* of your *Outdoor Box Splash* and the other USB end into any device with a USB charging port (PC, USB wall charger, car charger, etc) to charge the battery. The *LED status indicator (5)* lights up red and switches off once the charging process is complete. The charging time is approximately 2 hours.

Important:

- Use a 5 V 2 A power adapter.
- Do not leave your *Outdoor Box Splash* completely discharged for a long time.

Warranty

You can check the warranty terms here:

<https://www.energysistem.com/terms-warranty>

Declaration of conformity

Issuer's name: Energy Sistem Technology, S.A. - CIF: A53107488

Address: C/ Calpe, 1 - 03509 Finestrat, Alicante (Spain)

Tel: +34 966 830 324

We declare under our sole and exclusive responsibility that the product:

Description: Bluetooth speaker

Brand: Energy Sistem

Model: Outdoor Box Splash

Manufacturer: Energy Sistem Technology, S.A.

Manufacturing country: China

referred to in this declaration complies with the essential norms and standards:

EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013

EN 62479:2010

EN 301 489-1 V 2.2.0 (2017-03)

EN 301 489-17 V3.1.1 (2017-02)

EN 300 328 V2.1.1 (2016-11)

in conformity with the provisions of the Directive 2014/53/EU of the European Parliament and of the Council of 16th April 2014.

Finestrat, 1st June 2020



Javier Álvarez Rodríguez
Innovation and Technology Director



Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Energy Sistem, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/energy-sistem-bluetooth-zvucnik-outdoor-box-splash-portable-akcija-cena/>