

## Uputstvo za upotrebu

STELLA televizor S32D52



 
Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/stella-televizor-s32d52-akcija-cena/>



## UPUTSTVO ZA UPOTREBU

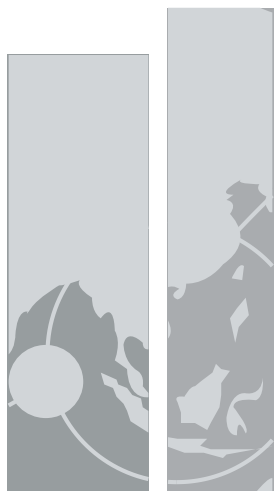

## LED TELEVIZORI

Model: S32D52



EN

SR

Molimo Vas da detaljno proučite ovo uputstvo pre  
upotrebe televizora i da ga čuvate radi kasnije upotrebe

# CONENTS

|                              |         |
|------------------------------|---------|
| SAFETY INSTRUCTION .....     | 2 - 4   |
| CONTROL KEYS .....           | 5       |
| TERMINAL CONNECTION .....    | 6       |
| REMOTE CONTROLLER .....      | 7 - 8   |
| CHANNEL .....                | 9 - 10  |
| PICTURE .....                | 10      |
| SCREEN .....                 | 11      |
| SOUND .....                  | 11      |
| TIME .....                   | 11 - 12 |
| LOCK .....                   | 12 - 13 |
| SETUP .....                  | 13 - 14 |
| USB .....                    | 15 - 17 |
| TROUBLE SHOOTING GUIDE ..... | 18      |
| SPECIFICATIONS .....         | 19      |

# SAFETY INSTRUCTION

## IMPORTANT SAFETY INSTRUCTIONS

### WARNING

- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE TO PREVENT BLADE EXPOSURE.
- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



This lightning flash with arrowhead symbol in an equilateral triangle alerts users to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

### CAUTION

**RISK OF ELECTRIC SHOCK  
DO NOT OPEN**

Warning: To reduce the risk of electric shock, do not remove cover(or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation mark within an equilateral triangle alerts users to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

This appliance should not be exposed to water and no object filled with liquid such as a vase should be placed on the unit.

### CAUTION

- Danger of explosion if batteries are incorrectly replaced.
- Replace with only equivalent type of battery.
- Do not expose battery to direct sunlight or any other source of heat.
- Ensure proper disposal of used batteries.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- To reduce the risk of electric shock, do not perform any servicing other than what is mentioned in the operating manual.
- There are no user-serviceable parts inside the TV; do not open the TV casing.

### IMPORTANT INFORMATION

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.



### Safe installation

Use the belt fixing the television to facilitate restraining the television from toping forward.



## SAFETY INSTRUCTION

 
1. **Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating instructions should be followed.



5. **Water and Moisture** - The appliance should not be used near water.
6. **Cart and Stands** - The appliance should only be used with a cart or stand that is recommended by the manufacturer.
7. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. **Ventilation** - The appliance should be well situated so that its location or position does not interfere with its proper ventilation.
9. **Heat** - This appliance should be placed away from heat sources such as radiators, heat registers and stoves.
10. **Power Sources** - The appliance should only be connected to a power supply as described in the operating instructions or as marked on the appliance.
11. **Grounding or Polarization** - Precautions should be taken.
12. **Power Cord Protection** - Power supply cord should be routed so that it is not likely to be walked on, pinched by items placed upon it against the cord and its end.
13. **Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
14. **Power Line** - An outdoor antenna should be located away from power lines.
15. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, the antenna system must be grounded so as to provide against voltages and built-up static charges.
16. **Non-use Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
17. **Object and Liquid Entry** - Care should be taken so that objects do not fall, and liquids are not spilled into the enclosure through openings.
18. **Conditions requiring Service** - The appliance should be serviced by qualified service personnel when:
  - The power-supply cord or the plug has been damaged.
  - Objects have fallen on or liquid has been spilled into the appliance.
  - The appliance has been exposed to rain.
  - The appliance does not appear to operate normally or exhibits a marked change in performance.
19. **The ventilation should not be impeded by covering the ventilation opening with items, such as newspapers, table-cloths, curtains, etc.**


No naked flame sources, such as lighted candles, should be placed on the apparatus.  
The apparatus shall be connected to mains socket outlet with a protective earthing connection.  
The appliance coupler regarded as disconnection device, the disconnect device shall remain readily operable.
20. **The equipment may be used in tropical and moderate climates.**

# SAFETY INSTRUCTION




## Warning

 High voltages are used in the operating of this product. Do not remove the back cover of the cabinet. Refer servicing to qualified service personnel.




## Warning

 To prevent fire or electrical shock hazard, do not expose the main unit to rain or moisture.



## Warning

 Do not drop or push objects into television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

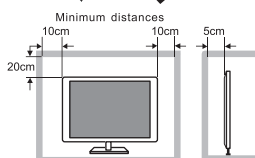

## Caution

If the television is to be built into a compartment or similarly enclosed, the minimum distances must be maintained.

 
Heat built up can reduce the service life of your television, and can also be dangerous.



## Caution

Never stand on, lean on, push suddenly the product or its stand.


You should pay special attention to children.

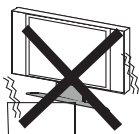

## Caution


Do not place the main unit on an unstable cart stand, shelf or table.

 Serious injury to an individual, and damage to the television, may result should it fall.



## Caution

 When the product is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

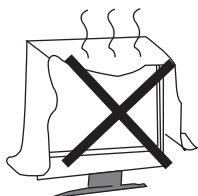

## Caution

Avoid exposing the main unit to direct sunlight and other sources of heat. Do not position television receiver directly on other products which give off heat. E.g. Video cassette players, audio amplifiers. Do not block the ventilation holes in the back cover. Ventilation is essential to prevent electrical failure. Do not squash power supply cord under the main unit.



## Caution

The panel used in this product is made of glass. It can break when the product is dropped or applied with force. Individuals should execute caution when dealing with broken glass should the panel break.



## CONTROL KEYS

### CONTROL KEYS:

| BUTTON NAME         | BUTTON ICON TYPE |                                                                                   |                                                                                   |         | BUTTON INSTRUCTION                          |
|---------------------|------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|---------|---------------------------------------------|
|                     | 1                | 2                                                                                 | 3                                                                                 | 4       |                                             |
| SOURCE BUTTON       | INPUT            |  |  | INPUT   | To display source menu.                     |
| MENU BUTTON         | MENU             |  |  | MENU    | To select menu.                             |
| VOLUME UP BUTTON    | VOL+             |  |  | ▲VOL    | To increase the sound volume level          |
| VOLUME DOWN BUTTON  | VOL-             |  |  | VOL▼    | To decrease the sound volume level          |
| PROGRAM UP BUTTON   | CH+              |  | C/P ▲                                                                             | ▲CH     | To select the next higher programme number. |
| PROGRAM DOWN BUTTON | CH-              |  | C/P ▼                                                                             | CH▼     | To select the next lower programme number.  |
| STANDBY BUTTON      | POWER            |  |  | STANDBY | Switch ON/OFF the TV when at standby mode.  |

### NOTE:

1. All these control buttons designs are common use for our TV models, and please refer to that under your real product.
2. This control keys quantity can be different according to models, and please refer to your real product in hand.

### NOTE:

If your program on tv will be included by cable televisions,  
Please check your earning and potential evaluation on the cable of your cable operator.  
For these information contact your cable operator

## TERMINAL CONNECTION

 
| PORT NAME                 | PORTS ICON TYPE |   |   | PORT INSTRUCTION            |
|---------------------------|-----------------|---|---|-----------------------------|
|                           | 1               | 2 | 3 |                             |
| AV IN                     |                 |   |   | AV input port               |
| COMPONENT IN              |                 |   |   | YPbPr signal input port     |
| AV OUT                    |                 |   |   | AV output port              |
| AUDIO OUT                 |                 |   |   | AUDIO output port           |
| TERMINAL ANTENNA (75 OHM) |                 |   |   | TV signal input port        |
| TERMINAL ANTENNA (75 OHM) |                 |   |   | Satellite signal input port |
| VGA                       |                 |   |   | RGB signal input port       |
| VGA AUDIO IN              |                 |   |   | VGA audio input port        |
| HDMI                      |                 |   |   | HDMI signal input port      |
| USB IN                    |                 |   |   | USB input port              |
| EARPHONE OUT              |                 |   |   | Earphone output port        |
| AUDIO IN                  |                 |   |   | AUDIO input port            |
| VIDEO OUT                 |                 |   |   | VIDEO output port           |
| COAXIAL OUT               |                 |   |   | Coaxial output port         |
| OPTICAL                   |                 |   |   | Optical output port         |
| SCART                     |                 |   |   | SCART signal input port     |
| PCMCIA                    |                 |   |   | PCMCIA input port           |
| RJ45 IN                   |                 |   |   | RJ45 input port             |
| TF IN                     |                 |   |   | TF input port               |

### NOTE:

1. All these terminal connection icons are commonly used for our TV models, and please select designated ports.
2. This connection ports quantity can be different according to models, and please refer to your actual product.

# REMOTE CONTROLLER

The remote controller cannot be used unless it is within the receivable range. Before you use the remote control, please make sure there's no obstacle between the remote control and the receiver.

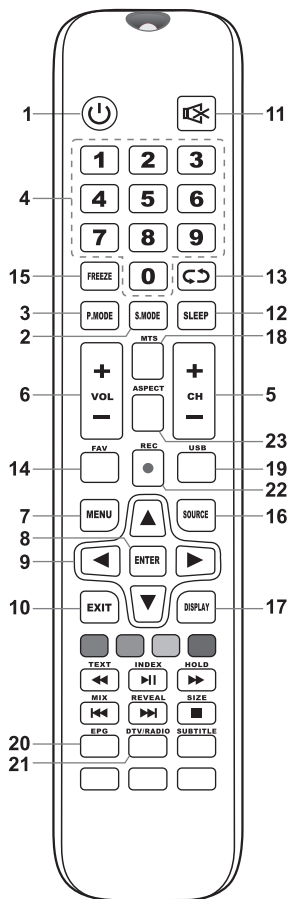

## 1. POWER BUTTON

Switch On/Off the TV when at standby mode.

## 2. S.MODE BUTTON

Sound effect selection.

## 3. P.MODE BUTTON

Picture effect selection.

## 4. NUMBER BUTTONS

Press these buttons to select the TV program you want to enter or input password.

## 5. CH+/CH- BUTTON

Press two buttons to directly the TV program.

## 6. VOL+/VOL- BUTTON

Press two buttons to directly to turn up or turn down the sound volume level.

## 7. MENU BUTTON

Press the button to open the main menu, press again or use Exit to close.

## 8. OK/ENTER BUTTON

Press the button to confirm or enter sub menus.

## 9. UP, DOWN, LEFT, RIGHT ARROW BUTTONS

Press these buttons to select or adjust the desired item on the TV menu.

## 10. EXIT BUTTON

Press the button to exit.

## 11. MUTE BUTTON

Press the button to turn off the volume. Press it again to turn on the volume.

## 12. SLEEP BUTTON

Press the button to set up the TV auto turn off time.

## 13. RETURN BUTTON

Press the button to toggle between the current and the previous program you were viewing.

## 14. FAV BUTTON

Display favourite of program list.

## 15. FREEZE BUTTON

Freeze picture.

## 16. SOURCE BUTTON

Press the button display Source menu.

## 17. DISPLAY BUTTON

Press to display the source and channel's information.

## 18. MTS BUTTON

Press the button on select stereo,mono or second audio programming.

## 19. USB BUTTON

Directly into the USB mode.

## 20. EPG BUTTON

Open/Close Electronic program guide.

## 21. DTV/RADIO BUTTON

Switch DTV program and radio program.

## 22. REC BUTTON

Hotkey of PVR.

## 23. ASPECT BUTTON

Press the button to display and select available aspect modes.

**Note:** EPG, DTV/RADIO, REC are only effective in DTV mode.

# REMOTE CONTROLLER

## TELETEXT FUNCTION (Optional)

### 1) TEXT BUTTON

Press the TEXT button to change the viewing from TV to Teletext if TV stations in your local have teletext broadcasting.

### 2) REVEAL BUTTON

This is a toggle function key to display hidden characters.

### 3) MIX BUTTON

This is a toggle function button to display TV picture and teletext together or teletext only.

### 4) RED/GREEN/YELLOW/BLUE BUTTONS

These 4 Colour keys in teletext mode can quickly enter the pre-captured teletext pages.

### 5) ▲ / ▼ BUTTON

These keys can be used as a page up/down key in teletext mode.

### 6) 0, 1, 2, ..., 9 BUTTON

Using the 0, 1, 2, ..., 9 keys, the required Teletext pages are selected.

### 7) HOLD BUTTON

Some Teletext information is contained on more than one page, the pages automatically changing after a given reading time. Press the HOLD key to stop the page changing. Press the HOLD key again to allow the page to change.

### 8) SIZE BUTTON

This key is to expand character size and display half teletext page. Each press will display upper .... tower .... Normal page.

### 9) INDEX BUTTON

Press the INDEX key to view Index page in teletext mode.

## USB FUNCTION

### 1) ◀ / ▶ BUTTON

Skip a scene or music.

### 2) ◀◀ / ▶▶ BUTTON

Go back to the previous or skip to the next.

### 3) ▶|| BUTTON

Play / Pause.

### 4) ■ BUTTON

Stop playback.

### 5) SUBTITLE BUTTON

In the USB playback movies, open or closed subtitle function(Need streaming support)

#### Note:

A USB device must already be connected.

## BATTERY INSTALLATION OF REMOTE CONTROL UNIT

 
1.Open the battery compartment cover.

2.Insert two . AAA\_ (pencil size) 1.5V batteries. Make sure the polarity (+ or -) of the batteries matches the polarity marks inside the unit.

3.Close the battery compartment cover.

#### Note:

- Recommend use alkaline type batteries. The life time of the batteries may last up to one year, depending on how often the remote control is used. For the best performance, the batteries should be replaced on a yearly basis, or when remote operation becomes erratic.
- Be sure to place the batteries in the correct direction, as shown left.
- Do not mix old and new batteries, or different types.
- Old batteries may leak chemical and damage the remote control. Always remove batteries as soon as they become weak.

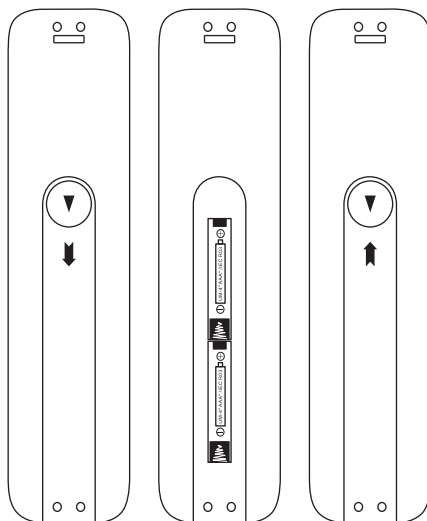


# CHANNEL

## CHANNEL menu

Press "MENU" and "◀/▶" buttons to select the CHANNEL menu.

Press "▼/▲" button to select the items.

 Press ok button to enter the submenu.

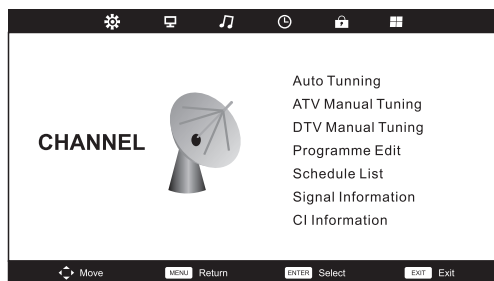

**Auto Tuning:** Press [▶] or [OK] to start auto tuning of both ATV and DTV channels.

 
**ATV Manual Tuning:** Press [▶] or [OK] to enter "ATV Manual Tuning" submenu.

**Current CH:** Press [◀/▶] to select the channel number you want to store.

**Color System:** Press [◀/▶] to change the color system as Auto, SECAM, PAL.

**Sound System:** Press [◀/▶] to change the sound system as DK, I, BG, L.


**Fine-Tune:** Press [◀/▶] to scan current program within a frequency range accurately and store the result manually.

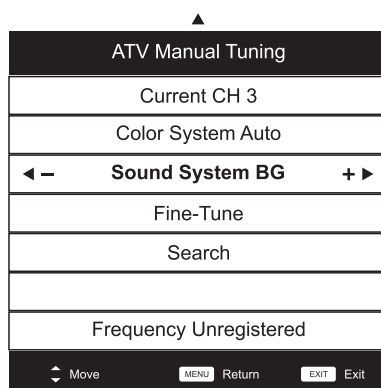

**DTV Manual Tuning:** Press [▶] or [OK] to enter "DTV Manual Tuning" submenu.

Press [◀/▶] to select channel, then press [OK] to search programs.

 **Note:** Only channels with sufficient signal strength will be tuned in ; check your antenna if channels are missing after Auto Tuning.

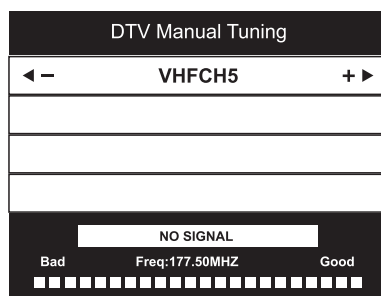

## CHANNEL

**Programme Edit:** Press [▶] or [OK] to enter "Programme Edit" submenu. This option has five functions:

1. Press Red button to delete the current channel.
2. Press Yellow button and [▲/▼] to move the current channel.
3. Press Blue button to skip the current channel.
4. Press [FAV] to set the current channel to your favorite channel, there will be a red heart at the behind of the channel selected. If the current channel is already be one of your favorite channel, press it again will set it to a normal one.

### Schedule List

 
Display Schedule List and Recorded List.

### Signal Information:

Display the signal information in DTV mode.

### CI Information:

Please contact your "pay per view" provider who can supply a viewing card and cam unit with instructions for their use.

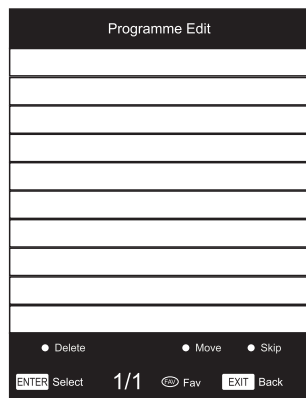


## PICTURE

### PICTURE menu

Press "MENU" to display the main menu.

 Press [◀/▶] to select "PICTURE" in the main menu, then press [▼] or [OK] to enter.

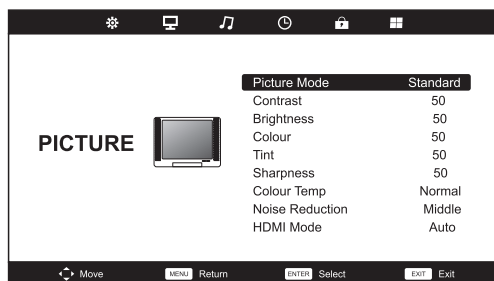

**Picture Mode:** Press [◀/▶] or [OK] to enter "Picture Mode" submenu. Press [▲/▼] to change the picture mode in sequence: Dynamic → Standard → Mild → Personal.

You can press [P. MODE] repeatedly on the remote control to change the picture mode directly.

**Contrast:** Press [◀/▶] or [OK] to enter submenu. Press [◀/▶] to set the picture's contrast intensity.

**Brightness:** Press [◀/▶] or [OK] to enter submenu. Press [◀/▶] to set the picture's brightness.

**Colour:** Press [◀/▶] or [OK] to enter submenu. Press [◀/▶] to set the picture's colour intensity.

**Tint:** Press [◀/▶] or [OK] to enter submenu. Press [◀/▶] to set the picture's tint.

(Available for NTSC video signal only).

**Sharpness:** Press [◀/▶] or [OK] to enter submenu. Press [◀/▶] to set the picture's sharpness.

**Colour Temp:** Press [◀/▶] or [OK] to enter "Colour Temp" submenu. Press [▼/▲] to change the colour temperature in sequence: Cold → Normal → Warm.

**Noise Reduction:** Press [◀/▶] or [OK] to enter "Noise Reduction" submenu.

Press [▼/▲] to change the noise reduction in sequence: Off → Low → Middle → High → Default.

## SCREEN

Press the “SOURCE” button on the remote control to enter the OSD menu, then press “▲/▼” button to select “SCREEN” item. Press “OK” button to enter “SCREEN” mode.

 
**SCREEN** (Only available when connected via SCREEN to a PC) Automatic adjust the picture of the right size.

Press “▲/▼” button to select “Auto Adjust” or “Position Reset” item.

Press [▶] or [OK] button to Adjust.

Press “▲/▼” button to select “H-Offset”, “V-Offset”, “Size” or “Phase” of the project.

Press “◀/▶” button to adjust.

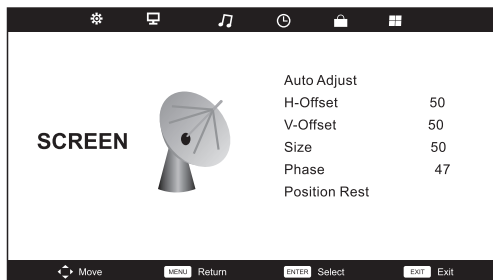

## SOUND

### SOUND menu

Press “MENU” to display the main menu.

 
Press [◀/▶] to select “SOUND” in the main menu, then press [▼] or [OK] to enter.

**Sound Mode:** Press [◀/▶] or [OK] to enter “Sound Mode” submenu. Press [▲/▼] to change the sound mode in sequence: Standard → Music → Movie → Sports → Personal.

You can press [S.MODE] repeatedly Treble:

Press [◀/▶] or [OK] to enter submenu.

Press [◀/▶] button to adjust.

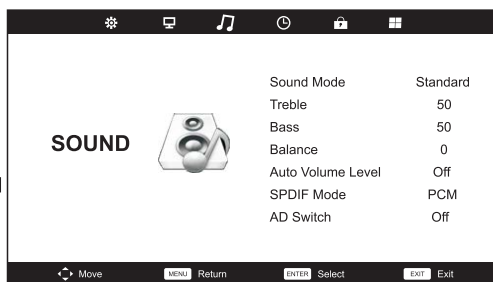

**Balance:** Press [◀/▶] or [OK] to enter Bass: Press [◀/▶] or [OK] to enter submenu. Press [◀/▶] button to adjust speaker's balance.

**Auto Volume Level:** Press [◀/▶] or [OK] to set the automatic volume level to “On” or “Off”.

**SPDIF Mode:** Press [◀/▶] or [OK] to set the SPDIF mode to “Auto”, “Off” or “PCM”.


**AD Switch (For DTV only):** Press [▶] or [OK] to enter submenu. Press [◀/▶] to select the audio descriptor to “On” or “Off” as well as adjust the volume of the AD.

## TIME
 
### TIME menu

Press “MENU” to display the main menu.

Press [◀/▶] to select “TIME” in the main menu, then press [▼] or [OK] to enter.

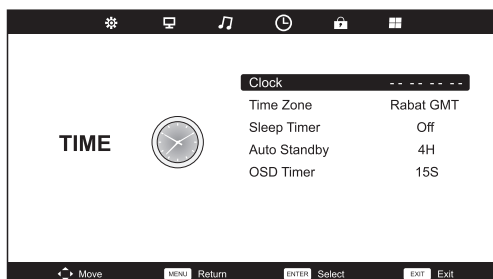

## TIME

**Clock:** Use the ◀/▶ buttons to select the position, and use the ▲/▼ buttons to set the time.

**Note:** User can not change time manually during DTV mode, for time is from signal source directly.

 
**Time Zone:** Press [OK] to enter submenu. Press [▲ ▼ ◀ ▶] to select items, press [OK] to confirm.

**Sleep Timer:** Press [▶] or [OK] to enter "Sleep Timer" submenu. Press [▲/▼] to change the sleep timer as Off, 15Min, 30Min, 45Min, 60Min, 90Min, 120Min, 240Min.

You can press [SLEEP] repeatedly on the remote control to change the sleep timer directly.

**Auto Standby:** Press [OK] to enter submenu. Press [▲/▼] to select Off, 3H, 4H, 5H, press [OK] to confirm.

**OSD Timer:** Press [▶] or [OK] to enter submenu. Press [▲/▼] to change the OSD timer as 5 Seconds 15 Seconds, 30 Seconds.

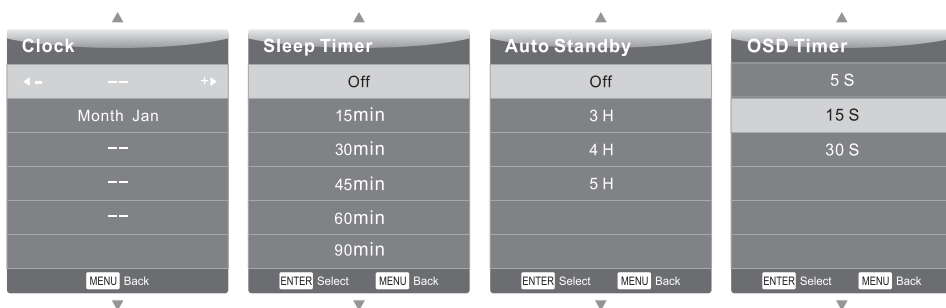


## LOCK

### LOCK menu

Press "MENU" to display the main menu.

 Press [◀/▶] to select "LOCK" in the main menu, then press [▼] or [OK] to enter

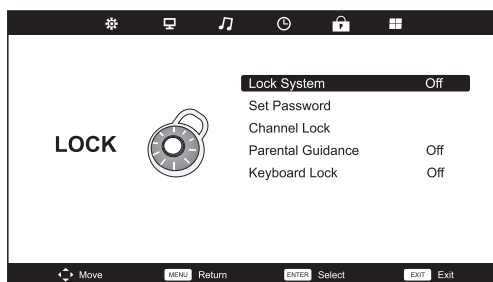

## LOCK

**Password:** Enter the default password “0000” to go to the LOCK function menu if you have set “Lock System” to “On”.

**Lock System:** Set the lock system to “On” or “Off” which enables or disables below lock functions.

Please enter password

◀ Clear Cancel ▶

**Set Password:** Press [▶] Or [OK] to enter submenu to set new password.

Please enter old password

Please enter new password

Confirm new password

◀ Clear Cancel ▶

You can change the password by entering the old and a new password and then re-entering it to confirm the new one.

**Channel Lock:** Press [OK] to display Channel Lock menu.

**Parental Guidance:** Press [OK] to display submenu, press [▲/▼] to select Off, 3,4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18. Press [OK] to confirm.

**Keyboard Lock:** Press [OK] to select Off or On.

## SETUP

### SETUP menu

Press [MENU] to display the main menu.

Press [◀/▶] to select “SETUP” in the main menu, then press [▼] or [OK] to enter.

SETUP

OSD Language English

TT Language West

Audio Languages English

Subtitle Language English

Hearing Impaired Off

PVR File System

Scale 16:9

Blue Screen On

First Time Installation

Reset

Software Update(USB)

◀ Move MENU Return ENTER Select EXIT Exit

### OSD Language

Press OK button to enter and [◀/▶/▼/▲] button to select OSD language. Press “MENU” button to return to the previous menu.

## SETUP

**TT Language:** Press [OK] to enter submenu, press [▼/▲] to select items. Press [OK] to confirm.

**Audio Languages/Subtitle Language:** Press [OK] to enter submenu, press [◀▶▼▲] to select items. Press [OK] to confirm.

**Hearing Impaired (For DTV only):**

Press [◀/▶] or [OK] to set the hearing impaired to “On” or “Off”.

**PVR File System (For DTV only):**

Press [▶] or [OK] to enter the submenu to check the USB connected and provide with the recording function.

**Scale:** Press [OK] to enter submenu, press [▼/▲] to select the aspect ratio mode.

Press [OK] to confirm.

**Blue Screen:** Press OK button to select On or Off.

 
**First Time Installation:** Press [▶] or [OK] to enter relevant options including OSD Language and Country.

**Reset:**

This will reset all settings to default. Press OK button to start - you will be asked to confirm (see screenshot right)

Press “◀/▶” button to select Yes or No.

Press “MENU” or “EXIT” button to return.



**Software Update(USB):** Press [▼/▲] to select Software Update item.


Press [OK] to confirm.

*Note: User only on advice from Customer Support.*


## USB

 Press "SOURCE" button to POP-UP the input source menu.

Press "▲ / ▼" button to select "Media" and press "OK" button to enter the interface, as shown below:

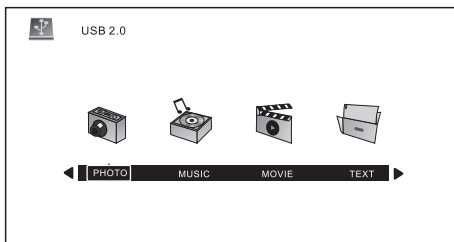


 
Press "◀ / ▶" button to select among the "PHOTO", "MUSIC", "MOVIE" and "TEXT" icons. Press "OK" button to confirm and enter the next menu, as shown below:

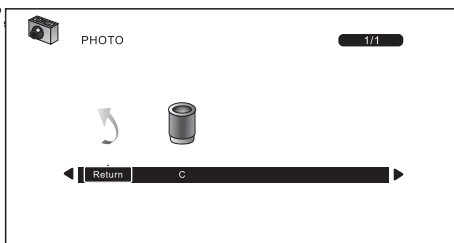

### PHOTO

Press OK to select files (indicated with a checkmark) for selective playback (see 6 below).

  1. Press "◀/▶" button to select "PHOTO".
2. Press "OK" button to enter the disk selection menu.
3. Press "◀/▶" button to select disk to enter the submenu.  
Select item to return to the previous menu.
4. Press "▲▼◀▶" button to select the image file you want to play.  
Press OK to select files (indicated with a checkmark) for selective playback,  
Press red button, you will enter the submenu to delete the file.
5. Press "PLAY" button to play photo slideshow (of checkmarked files; if no files are ticked, all pictures will play), press "OK" button to display menu.

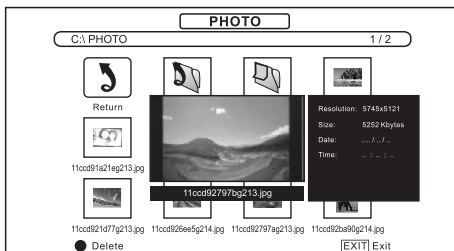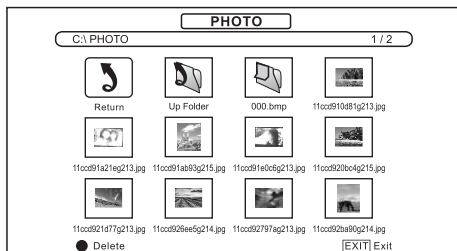

## Pause

Press "PAUSE" button to pause the slideshow.

## Play

Press "PLAY" button to play the selected photo.

## Stop

Press "STOP" button to stop and return.

## Next/Prev.

Press "NEXT" or "PREV." button to skip to view the photo which are selected the photo.

## Exit

 
Press "EXIT" button to exit.





## Music

1. Press "◀/▶" button to select "MUSIC".

2. Enter the music interface, press "▲▼◀▶" button to preview the music, as shown below:

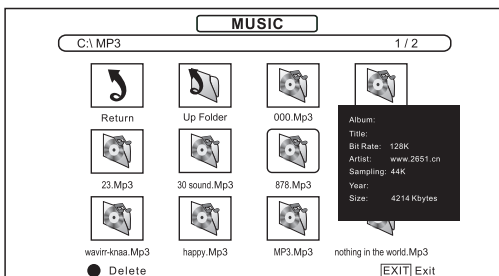

  3. Press "PLAY" button into music player and playing the selected music, as shown below:

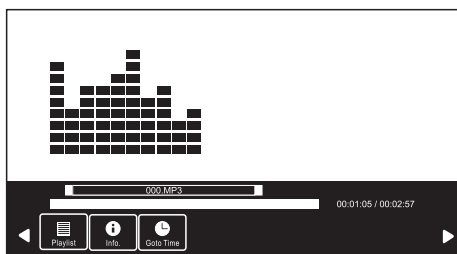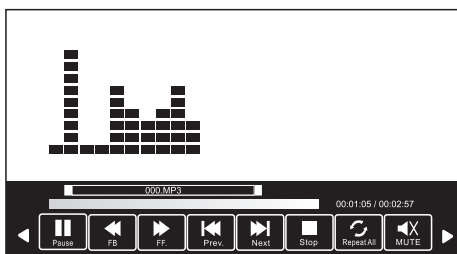

## Pause

Select "Pause" to pause the playing music.

## Play

Select "Play" to play music.

## FB

Select "FB" to fast reverse among 2X, 4X, 8X and 16X modes.

## FF

Select "FF" to fast forward among 2X, 4X, 8X and 16X modes.

## Prev.

Select "Prev." to skip to previous track.

## Next

Select "Next" to skip to next track.

## Stop

Select "Stop" to stop and return.

## Repeat All

Select "Repeat All" to repeat play music ( ↺ repeat 1, ↺ repeat all, ↺ repeat none).

## Mute

Select "Mute" to turn off the sound.

## USB

### Playlist

Select "Playlist" to display play list.

### Info.

Select "Info." to display the music information.

 
### Goto Time

Select "Goto Time" to setup play time.

### MOVIE

1. Press "◀/▶" button to select "MOVIE".

2. Enter the movie interface, press "▲▼◀▶" button to preview the files, as shown below:

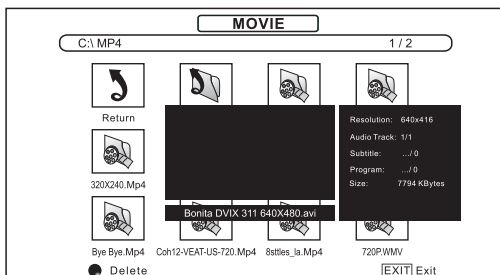

3. Press "PLAY" button to play the movie, Press OK button to display menu.

Press the "PLAY" button once more to play the movie full-screen.

Press the "PAUSE" button to pause the playing movie.


Press "PREV." or "NEXT" button to skip the backward or forward.

Press "FB" or "FF" button to fast reverse or fast forward, press "STOP" or "EXIT" button to return.

### TEXT

 1. Press "◀/▶" button to select "TEXT" (to view text documents stored on USB).

2. Enter the text interface, press "▲▼◀▶" button to preview the files, as shown below:

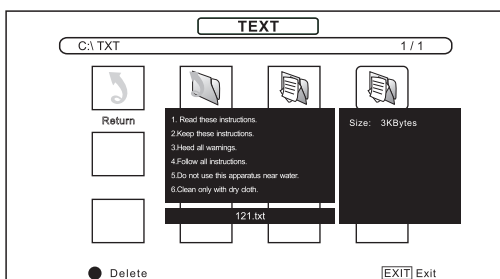


3. Press "PLAY" button to open and play the file, press OK button to display menu, as shown below:

Select "Prev Page" to view a next page.

Select "Next Page" to view a previous page.

Select "STOP" to return.

 Select "Music" to listen to music while reading.

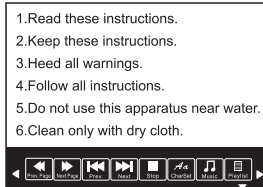

## TROUBLE SHOOTING GUIDE

Many apparent malfunctions are caused slight misadjustments of the regular controls of your unit or equally simple causes. If any difficulty arises through normal use of your unit, check the list of common problems in the list below.

If the problem persists, unplug your unit and contact your dealer.

| SYMPTOM                                                      | METHODS OF CHECKING OR ADJUSTING                                                                                                                                                                                                     |
|--------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No picture or sound                                          | Check the AC plug is in the socket.<br>Check house circuit breaker is in the ON position.                                                                                                                                            |
| Picture normal but no sound                                  | Check that the volume is not at its minimum setting or on MUTE.                                                                                                                                                                      |
| Remote control not working                                   | Check that TV set power is ON.<br>Check batteries are operational and inserted correctly.<br>Make sure infrared receiving window on TV is not exposed to strong lighting or blocked in any way.                                      |
| Cannot receive any TV signal                                 | Ensure SOURCE switch is set to TV.<br>Check aerial location and connection.<br>Re-check your tuning method.                                                                                                                          |
| No program signals output from external source               | Check SOURCE button to make sure it is in the correct position for reception.                                                                                                                                                        |
| Contrast and brightness problems                             | Make necessary adjustments to relevant settings.                                                                                                                                                                                     |
| Intermittent poor contrast and colour fading on all channels | Check aerial positioning                                                                                                                                                                                                             |
| Dotted lines or stripes appear on screen                     | There may be Interference from another electrical product.<br>Move appliance if it persists.                                                                                                                                         |
| Snow on screen                                               | Check aerial for broken circuit, loose connection or any visible damage.                                                                                                                                                             |
| Double images or 'ghosting'                                  | Check aerial location and direction - strong winds may cause it to move. Also check whether mountains or tall buildings may be the problem. Minor adjustment of the direction of your antenna should keep the ghosting to a minimum. |

**Note:** External rooftop/antenna adjustment should be left to a suitably qualified person.

## SPECIFICATIONS

|                   |                               |
|-------------------|-------------------------------|
| Aspect Ratio      | 16:9                          |
| System            | PAL/SECAM BG/DK, I DVB-T/C+T2 |
| Base impedance    | 75Ω (Unbalance)               |
| Receiving TV Band | All Channels Receiveable      |
| AC Supply Voltage | 100-240V~ 50/60Hz             |

**Note:** Part of the design and the specification may be changed without prior notice.

### INFRA-RED REMOTE CONTROL

**Features:** Full function remote control

**Effective Distance Power:** 8 metres

**Power Supply:** DC 3V (Two batteries, size AAA, recommend use alkaline type batteries)

 


Manufactured under license from Dolby Laboratories.

Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.



## UPUTSTVO ZA UPOTREBU

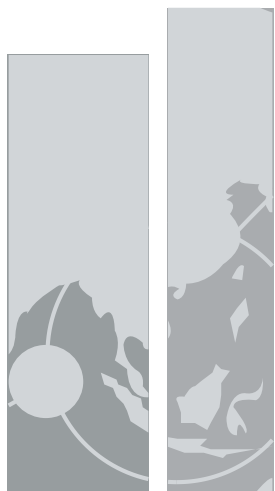

## LED TELEVIZORI

Model: S32D52



EN

SR

Molimo Vas da detaljno proučite ovo uputstvo pre  
upotrebe televizora i da ga čuvate radi kasnije upotrebe

# SADRŽAJ

|                                           |         |
|-------------------------------------------|---------|
| BEZBEDNOSNE INFORMACIJE .....             | 2 - 4   |
| NAZIV TASTERA .....                       | 5       |
| OPIS KONTROLNIH TASTERA I KONEKTORA ..... | 6       |
| DALJNSKI UPRAVLJAČ .....                  | 7 - 8   |
| CHANNEL - KANAL .....                     | 9 - 10  |
| PICTURE - SLIKA .....                     | 10      |
| SCREEN - EKRAN.....                       | 11      |
| SOUND -ZVUK.....                          | 11      |
| TIME - VREME.....                         | 11 - 12 |
| LOCK - ZAKLJUČAVANJE .....                | 12 - 13 |
| SETUP - PODEŠAVANJE .....                 | 13 - 14 |
| USB .....                                 | 15 - 17 |
| PROBLEMI .....                            | 18      |
| SPECIFIKACIJA .....                       | 18      |

# BEZBEDNOSNE INFORMACIJE

## VAŽNA BEZBEDONOSNA UPUTSTVA

### UPOZORENJE

KAKO BISTE SPREČILI POŽAR ILI ELEKTRIČNI UDAR NEMOJTE KORISTITI PRODUŽNI KABL, DUPLI UTIKAČ ILI DRUGE DODATKE NA UTIČNICI OSIM ONIH KOJI BI MOGLI DA SPREČE IZAZIVANJE STRUJNOG UDARA. KAKO BISTE SPREČILI POŽAR ILI ELEKTRIČNI UDAR NE IZLAŽITE OVAJ UREĐAJ VLAZI ILI KIŠI.

|                                                                                                                                                                                                                                                                                       |                                                                                                                                                                                                                                                                                        |                                                                                                                                                                                                                                                          |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <p>Ovaj simbol munje u jednakokraničnom trouglu upozorava korisnike na prisustvo opasnog i ne izolovanog napona unutar kućišta proizvoda koji može biti dovoljan da stvori rizik STRUJNOG UDARA</p> | <b>CAUTION</b><br>RISK OF ELECTRIC SHOCK<br>DO NOT OPEN<br><p>Upozorenje: Da biste smanjili rizik od strujnog udara nemojte skidati pok-lopac (ili zadnju stranu). Unutra nemadelova koje korisnik može sam dazameni. Za obavljanje servisa zatražite pomoć kvalifikovanog osoblja</p> |  <p>Znak uzvika unutar jedna-kostraničnog trougla u ovom uputstvu upozorava korisnika na prisustvo važnih instruk-cija za rad i održavanje (servisiranje ) uređaja.</p> |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

Ovaj aparat ne treba izlagati vodi, a predmete ispunjene tečnošću poput vaza ne treba da budu postavljeni na i oko uređaja.

### OPREZ

Postoji opasnost od eksplozije ako se baterija nepropisno zameni.

Zamenite postojeću sa samo odgovarajućom vrstom baterije.

Nemojte izlagati bateriju direktnoj sunčevoj svetlosti ili bilo kojem drugom izvoru toplote.

Obezbedite pravilno odlaganje istrošenih baterija.

Ostavite lako dostupnim mesto gde je utikač ili nastavak za prekid napajanja.

Da biste smanjili rizik od strujnog udara, ne obavljajte bilo kakvo servisiranje osim onih koje se pominju u ovom uputstvu.

### VAŽNE INFORMACIJE

Ako televizor nije postavljen na dovoljno stabilnom mestu, može postojati potencijalna opasnost od pada.

Mnoge povrede, posebno dečije, mogu se izbeći primenom jednostavnih mera opreza kao što su:

Korišćenje elemenata ili stalaka koje je preporučio proizvođač televizora.

Korišćenje samo onog nameštaja koji može sigurno izdržati uređaj.

Obezbeđivanje uređaja tako da ne prelazi ivicu nameštaja.

Nemojte postavljati TV-a na visok nameštaj (na primer, ormare ili police) bez predhodnog pričvršćivanja kako nameštaja tako i uređaja na odgovarajuću površinu.

Ne pokrivajte televizora krpom i ne stavljajte drugi materijal između televizora i nameštaja na kom stoji.



#### Sigurna instalacija

Koristite pojas za fiksiranje televizora kako bi sprečili uređaj od pada unapred.



 
## BEZBEDNOSNE INFORMACIJE

1. **Pročitajte uputstva**- Sve napomene o sigurnosti i načinu rada treba pročitati pre uključivanja aparata.
2. **Sačuvajte uputstva** – Uputstva za sigurnost i uputstvo za upotrebu treba da se sačuvaju za buduće potrebe.
3. **Imajte u vidu Upozorenja** – Treba se pridržavati svih upozorenja na aparatu i svih uputstava za upotrebu.
4. **Pratite uputstva**- Treba pratiti sva uputstva.




5. **Voda i vlažnost** – Aparat ne treba koristiti u blizini vode.
6. **Nosač i postolje** – Aparat treba koristiti samo sa nosačem ili postoljem koje preporučuje proizvođač.
7. **Montaža na zid ili plafon** – Aparat treba da se montira na zid ili plafon samo po preporuci proizvođača.
8. **Ventilacija** – Aparat treba da bude dobro postavljen, tako da lokacija ili pozicija aparata ne ometaju njegovo provetranje.
9. **Toplota** – Ovaj aparat treba postaviti dalje od izvora toplote kao što su radijatori i peći.
10. **Napajanje** - Aparat treba povezati samo na napajanje kao što je opisano u uputstvima za upotrebu ili onako kako je naznačeno na uređaju.
11. **Uzemljenje ili polarizacija** – Treba preduzeti mere predostrožnosti.
12. **Zaštita kabla za napajanje** – Naponski kabl treba da bude usmeren tako da je malo verovatno da se može gaziti, priklještit stvarama na njemu i njegovom kraju.
13. **Čišćenje** – Aparat bi trebalo čistiti samo po preporuci proizvođača.
14. Napajanje spoljne antene treba da se nalazi daleko od dalekovoda.
15. **Uzemljenje spoljne antene** – Ako je spoljna antena povezana na prijemnik, antenski sistem mora biti uzemljen kako bi se obezbedila zaštita od naponskog i izvornog statičkog elektriciteta.
16. **Kada ga dugo ne koristite** – napajanje uređaja trebalo bi da bude isključeno iz utičnice kada se ne koristi duži vremenski period.
17. **Upad predmeta i tečnosti** – Treba paziti da predmeti ne upadnu, a tečnost ne prospe u kućište kroz otvore.
18. **Kada je potreban servis** – Aparat treba da servisira kvalifikovano servisno osoblje kada su:
  - Kabal za struju ili utikač oštećeni.
  - Kada predmeti upadnu ili kada se tečnost prolje po uređaju
  - Kada je aparat izložen kiši
  - Kada aparat ne radi normalno ili pokazuje značajnu promenu u radu.
19. Ventilacioni otvori ne bi trebalo da budu pokriveni predmetima, kao sto su novine, tkanine, zavese itd.
20. Izvore otvorenog plamena, kao sto su upaljene sveće, ne bi trebalo da stoje na aparatu
21. Aparat će biti povezan sa mrežnom utičnicom sa zaštitnim uzemljenjem. Utičnica ili nastavak za prekid napajanja trebaju da budu lako dostupni.

## BEZBEDNOSNE INFORMACIJE




### UPOZORENJE

 Visok napon se koristi u napajanju ovog proizvoda. Ne uklanjajte zadnjepoklopac. Obratite se kvalifikovanoj osobi za obavljanje servisa.




### UPOZORENJE

 Da biste sprečili požar ili strujni udar, nemojte izlagati uređaj kiši ili vlazi.



### UPOZORENJE

 Nemojte ispuštati i gurati predmete u kućište TV-a ili u otvore. Nikad nemojte prosipati tečnost na TV prijemnik.

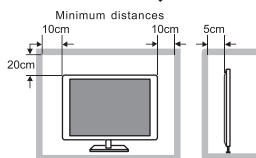

### OPREZ

Ako televizor treba da se ugradi u zatvoreni odeljak ili na sličan način, morate se pridržavati dela uputstva o mini-malnim udaljenostima. Toplota može smanjiti životni vek televizora, a takođe može biti povećan rizik od požara.



### OPREZ

Nikada nemojte da stanete ili se oslonite ili gurnete uređaj ili stalak na kom se uređaj nalazi. Treba obratiti posebnu pažnju na decu.



 
### OPREZ

Ne stavljajte glavnu jedinicu na nestabilno postolje, policu ili sto. Usled pada može doći do ozbiljne povrede lica ili štete na televizoru.



### OPREZ

Kada se proizvod ne koristi duži vremenski period, preporučljivo je da isključite mrežni kabl iz utičnice.

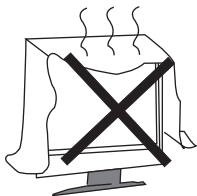

### OPREZ

Izbegavajte izlaganje glavne jedinice direktnom suncu i drugim izvorima toplote. Ne postavljajte televizor na druge proizvode koji emituju toplotu. Na primer: Video uređaj, audio pojačala. Ne blokiraj otvore za ventilaciju u zadnjem poklopcu. Ventilacija je od suštinskog značaja za sprečavanje električnih kvarova. Ne stavljajte kabl za napajanje ispod glavne jedinice.



### OPREZ

Panel (ekran) koji se koristi u ovom proizvodu napravljen je od stakla. Može se slomiti padom uređaja ili nasilnim udarcem. Pojedinci treba oprezno da rade sa razbijenim staklom ekrana.



## NAZIV TASTERA

### NAZIV TASTERA

| NAZIV DUGMIĆA       | VRSTA TASTERA |                                                                                   |                                                                                   |                                                                                   | INSTRUKCIJE ZA UPOTREBU                                                                                          |
|---------------------|---------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|
|                     | 1             | 2                                                                                 | 3                                                                                 | 4                                                                                 |                                                                                                                  |
| SOURCE BUTTON       | INPUT         |  |  | INPUT                                                                             | PRIKAZIVANJE GLAVNOG MENIJA ZA IZBOR FUNKCIJA TV UREĐAJA (DIGITALNI, ANTENSKI, SMART, OPCIJA, MEDIA - USB, HDMI) |
| MENU BUTTON         | MENU          |  |  | MENU                                                                              | PRIKAZIVANJE MENIJA TV UREĐAJA                                                                                   |
| VOLUME UP BUTTON    | VOL+          |  |  |  | POJAČAVANJE ZVUKA                                                                                                |
| VOLUME DOWN BUTTON  | VOL-          |  |  |  | UTIŠAVANJE ZVUKA                                                                                                 |
| PROGRAM UP BUTTON   | CH+           |  | C/P ▲                                                                             |  | PREBACIVANJE NA VIŠI KANAL                                                                                       |
| PROGRAM DOWN BUTTON | CH-           |  | C/P ▼                                                                             |  | PREBACIVANJE NA NIŽI KANAL                                                                                       |
| STANDBY BUTTON      | POWER         |  |  | STANDBY                                                                           | UKLJUČIVANJE/ISKLUČIVANJE TV UREĐAJA DOK JE U REŽIMU MIROVANJA                                                   |

#### NAPOMENA

1. Kontrolni tasteri su prilagođeni za upotrebu na našim TV modelima. Molimo da ih koristite u skladu sa namenom.
2. Broj i raspored kontrolnih tastera može biti drugačiji u zavisnosti od modela. Molimo da ih koristite u skladu sa Vašim uređajem i njihovom namenom.

#### NAPOMENA

Ukoliko program pratite putem kablovske televizije proverite da li je propisno izvedeno Uzemljenje i izjednačavanje potencijala na kablu vašeg kablovskog operatera.

Za ove Informacije kontaktirajte vašeg kablovskog operatera.

 
# OPIS KONTROLNIH TASTERA I KONEKTORA

| NAZIV ULAZA/IZLAZA                                  | VRSTA IKONICE ZA ULAZ/IZLAZ |   |   | INSTRUKCIJE ZA UPOTREBU                                                       |
|-----------------------------------------------------|-----------------------------|---|---|-------------------------------------------------------------------------------|
|                                                     | 1                           | 2 | 3 |                                                                               |
| AV IN                                               |                             |   |   | AUDIO/VIDEO ULAZ                                                              |
| COMPONENTIN                                         |                             |   |   | YPBPR ULAZ, ZA POVEZIVANJE EKSTERNIH UREĐAJA ( DVD, PLAYER, KUĆNI BIOSKOP...) |
| AV OUT                                              |                             |   |   | AUDIO/VIDEO IZLAZ                                                             |
| AUDIO OUT                                           |                             |   |   | AUDIO IZLAZ ZA POVEZIVANJE EKSTERNIH ZVUČNIKA                                 |
| TERMINAL ANTENNA (75OHM), TV SIGNAL INPUT PORT      |                             |   |   | POVEZIVANJE ANTENE ZA ZEMALJSKE KANALE ( KROVNA/SOBNA ANTENA )                |
| TERMINAL ANTENNA (75OHM), SATELIT SIGNAL INPUT PORT |                             |   |   | POVEZIVANJE SATELITSKE ANTENE                                                 |
| AUDIO IN                                            |                             |   |   | AUDIO ULAZ                                                                    |
| VIDEO OUT                                           |                             |   |   | VIDEO IZLAZ                                                                   |
| COAXIAL OUT                                         |                             |   |   | DIGITALNI IZLAZ ZA EKSTERNE ZVUČNIKE                                          |
| VGA                                                 |                             |   |   | VGA ULAZ ZA POVEZIVANJE RAČUNARA I TV UREĐAJA                                 |
| VGA AUDIO IN                                        |                             |   |   | VGA ULAZ ZA AUDIO POVEZIVANJE                                                 |
| HDMI                                                |                             |   |   | HDMI ULAZ ZA POVEZIVANJE RAZNIH EKSTERNIH UREĐAJA                             |
| USB IN                                              |                             |   |   | USB ULAZ ZA POVEZIVANJE RAZNIH EKSTERNIH UREĐAJA I MEMORIJA                   |
| EARPHONE OUT                                        |                             |   |   | IZLAZ ZA POVEZIVANJE SLUŠALICA                                                |
| SCART                                               |                             |   |   | SCART ULAZ ZA POVEZIVANJE RAZNIH EKSTERNIH UREĐAJA                            |
| OPTICAL                                             |                             |   |   | OPTIČKI IZLAZ ZA POVEZIVANJE UREĐAJA KOJI KORISTE OPTIČKI KABL                |
| RJ45 IN                                             |                             |   |   | ZA POVEZIVANJE TV UREĐAJA NA INTERNET ( LAN MREŽA )                           |
| DC IN, OPTIONAL                                     |                             |   |   | OPCIONO – ULAZ ZA POVEZIVANJE NA ADAPTER OD 12V                               |
| TF IN                                               |                             |   |   | ULAZ ZA OČITAVANJE MEMORIJSKE KARTICE                                         |
| PCMCIA                                              |                             |   |   | ULAZ ZA CI ( CI+)                                                             |

- 1.Svi ulazi / izlazi su prilagođeni za upotrebu na našim TV modelima. Molimo da ih koristite u skladu sa namenom.
- 2.Broj ulaza/izlaza može biti drugačiji u zavisnosti od modela. Molimo da ih koristite u skladu sa Vašim uređajem i njihovom namenom

# DALJINSKI UPRAVLJAČ

Prilikom upotrebe daljinskog upravljača, usmerite ga ka prijemniku signala daljinskog upravljača. Predmeti koji se nađu između daljinskog upravljača i prijemnika signala mogu da onemoguće normalno funkcionisanje.

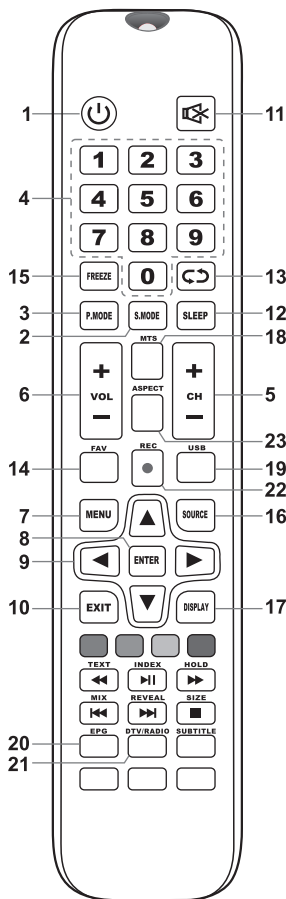

## 1. POWER TASTER

uključivanje/isključivanje TV uređaja

## 2. S.MODE TASTER

taster za podešavanje zvučnih efekata

## 3. P.MODE TASTER

taster za odabir efekata slike

## 4. NUMBER (NUMERIČKI) TASTERI

direktno biranje kanala ili unošenje lozinke

## 5. Taster za prog. kanala

direktno biranje TV-programa

## 6. Taster za izbor jačine zvuka

pojačavanje ili smanjivanje intenziteta zvuka.

## 7. MENU (MENI) TASTER

ulazak u glavni meni, za izlaz, pritisnite ponovo ili koristite dugme "EXIT"

## 8. OK/ ENTER TASTER

potvrđivanje izbora ili ulazak u podmeni

## 9. UP, DOWN, LEFT, RIGHT ARROW (STRELICE GORE, DOLE, LEVO, DESNO) TASTER

kretanje kroz meni

## 10. EXIT (IZLAZ) TASTER

izlaz iz trenutnog menija

## 11. MUTE (ISKLJUČIVANJE ZVUKA) TASTER

pritisnite za isključenje zvuka. Ponovnim pritiskom vraćate zvuk na predhodnu jačinu

## 12. SLEEP (AUTO-ISKLJUČIVANJE) TASTER

podešavanje automatskog isključivanja TV uređaja u određeno vreme

## 13. RETURN (POVRATAK) TASTER

povratak na kanal koji ste predhodno gledali

## 14. FAV (OMILJENO) TASTER

prikazivanje omiljene programske liste

## 15. Dugme "zamrzni"

"zamrzni" prikaz na ekranu

## 16. SOURCE (IZVOR SIGNALA) TASTER

izbor funkcije TV uređaja (digitalni, antenski, smart opcija, media-USB, HDMI)

## 17. Taster informacija

prikazuje informacije o izvoru i trenutnom programu

## 18. Taster MTS

izbor stereo, mono ili nekog trećeg audio program

## 19. Taster USB

direktno u USB režim.

## 20. EPG (ELEKTRONSKI PROGRAMSKI VODIČ) TASTER

otvaranje/zatvaranje EPG-a (samo u DTV režimu rada)

## 21. DTV/RADIO TASTER

prelazak sa DTV na radio program i obrnuto

## 22. REC (SNIMANJE) TASTER

snimanje trenutnog programa (radi samo u DTV režimu rada)

## 23. ASPECT (FORMAT PRIKAZA) TASTER

izbor formata prikaza slike na ekranu

## Napomena:

EPG, DTV/RADIO, REC funkcije imaju efekta samo u DTV modu

## DALJINSKI UPRAVLJAČ

### TELETEXT FUNKCIJA (Opciono)

#### 1) TEXT TASTER

pritisnite taster za prelazak sa TV slike na Teletext, ukoliko TV stanica podržava isti.

#### 2) REVEAL TASTER

Za prikazivanje skrivenih karaktera.

#### 3) MIX TASTER

Taster za prikazivanje Teletexta i TV slike zajedno ili samo Teletext slike. Ovaj taster omogućava korisniku da unese 4 digitalne podstrane za trenutnu stranu. Ukoliko sledeće digitalne strane nisu unešene za 5 sekundi, predhodni broj strane će biti ponovo pozvan i prikazan na ekranu.

#### 4) RED/GREEN/YELLOW/BLUE TASTER

Ova 4 tastera u Teletext modu služe za brzo prebacivanje (zumiranje, prebacivanje na sledeću stranu...)

#### 5) UP/DOWN TASTER

Pomeranje stranice gore/dole u teletext modu

#### 6) 0,1,2...9 TASTER

Izbor određene stranice uz pomoć numerisanih tastera.

#### 7) HOLD TASTER

Neke teletext informacije se nalaze na više stranica koje se automatski menjaju nakon određenog vremena. Pritisnite taster HOLD da zadržite promenu strana. Za nastavak promene strane, pritisnite ponovo HOLD

**8) SIZE TASTER** Taster za povećanje dimenzije karaktera i prikazivanje pola teletext strane. Svaki pritisak će prikazivati više i više do normalne strane

#### 9) INDEX TASTER

Pritisnite ovaj taster kako biste videli index stranu u teletext modu. Prikaz teletext vremena.

### USB FUNKCIJA (Opciono)

#### 1) ◀/▶ TASTER

Premotajte scenu ili muziku

#### 2) ⏮/⏭ TASTER

Vraćanje na predhodni ili prelazak na naredni fajl

#### 3) ▶▶ TASTER

početak / pauza

#### 4) ■ TASTER

Zaustavljanje. Pritisnite da potvrdite akciju (Na primer: kopiraj, nalepi itd.) Ponavljanje scene ili muzike u reprodukcijifilmova na USB-u.

#### 5) SUBTITLE TASTER

Otvara ili zatvara funkciju titla ( titl mora biti preuzet sa interneta i mora biti identičan kao fajl, kao i kompatibilna fajlom koji podržava)

 
**Napomena:** USB uređaj već mora biti povezan.

### INSTALACIJA BATERIJA U DALJINSKI UPRAVLJAČ

1. Otvorite poklopac odeljka za baterije
2. Stavite dve AAA baterije ( uske ) od 1.5V. Budite sigurni da se polaritet baterija ( + i - ) podudara sa polaritetom unutar odeljka.

#### Napomena:

- Preporučujemo upotrebu alkalnih baterija
- Rok trajanja baterija može biti i duže od jedne godine, u zavisnosti od toga koliko često se daljinski upravljač koristi. Za najbolje performanse, baterij treba menjati bar jednom godišnje ili onda kada počnu da ometaju rad daljinskog upravljača.
- Budite sigurni da su baterije okrenute u dobrom pravcu, kao na slici.
- Nemojte mešati stare i nove baterije ili različite vrste baterija.
- Stare baterije mogu iscureti i oštetiti daljinski upravljač. Uvek uklonite oslabljene baterije.
- Ne bacajte baterije u vatru, ne puniti i ne rasklapajte ih. Naročito nemojte puniti, sklapati i rasklapati, zagrevati ili sagorevati upotrebljene baterije. poštujujte odgovarajuće propise o zaštiti okoline u vezi sa upotrebljenim baterijama.

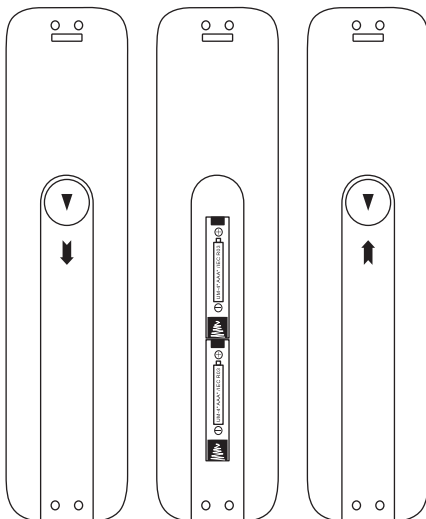


## CHANNEL - KANAL

### Podešavanje kanala

Pritisnite "MENU" i tastere "◀/▶" da izaberete KANAL menu.

Pritisnite "▼/▲" taster da izaberete podmeni.

 Pritisnite OK taster da uđete u pod meni.

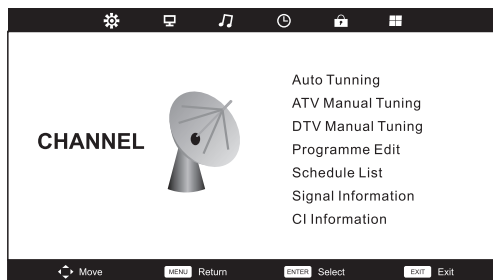

**Auto pretraživanje:** Pritisnite [▶] ili OK da započnete auto pretragu za oba ATV i DTV kanale

 
**ATV ručno pretraživanje:** Pritisnite [◀/▶] ili OK da započnete ATV ručno pretraživanje podmeni.

**TREKUTNI CH:** Pritisnite [◀/▶] da izaberete broj kanala koji želite da memorišete.

**Color system:** Pritisnite [◀/▶] da promenite kolor sistemna Auto, SECAM, PAL.

**Sound system:** Pritisnite [◀/▶] da promenite zvučni system na DK, I, BG, L.


**Fine-Tune:** Pritisnite [◀/▶] da skenirate trenutni program na datoj frekvenciji i da snimite rezultat ručno.

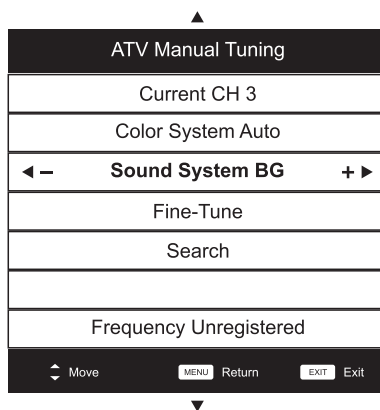

**DTV ručno pretraživanje:** Pritisnite ili OK da uđete u "DTV ručna pretraga" podmeni.

Pritisnite [◀/▶] da izaberete kanal, zatim pritisnite OK da pretražite programe.

 **Napomena:** samo kanali sa dovoljno jakim signalom biće pronađeni, proverite svoju antenu ako nedostaju kanali posle auto pretrage.

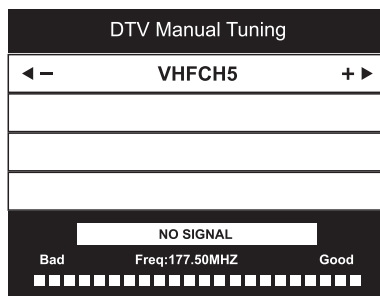

## CHANNEL - KANAL

Programme Edit - Uređenje programa:

1. Pritisnite crveni taster da obrišete trenutni kanal.
2. Pritisnite žuti taster i "▼/▲" da premeste trenutni kanal.
3. Pritisnite plavi taster da označite trenutni kanal kao omiljeni.
4. Pritisnite FAV da označite trenutni kanal kao omiljeni, biće crveno srce u pozadini izabranog kanala. Ako je trenutni kanal izabran već kao omiljeni, pritisnite još jedanom i biće podešen kao normalan.

### Lista rasporeda

 
Prikaz liste rasporeda i liste snimaka

### Signal informacije

Prikaz informacije o signalu u DTV modu.

### CI informacije


Molimo kontaktirajte vašeg provajdera da vam obezbedi karticu i modul.

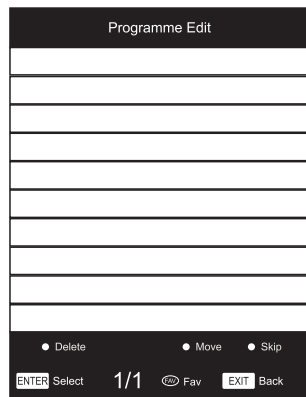

## PICTURE - SLIKA

### SLIKA:

 Pritisnite MENU za prikaz glavnog menija. Pritisnite [◀/▶] Pritisnite da izaberete "SLIKA" u glavnom meniju, zatim OK da potvrdite.

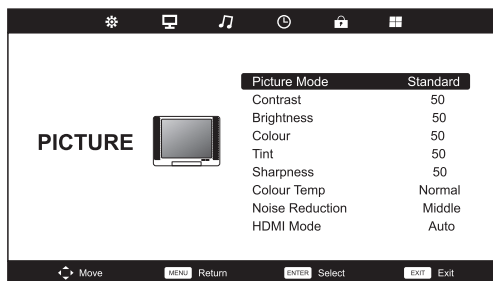

**Mod slike:** Pritisnite [◀/▶] ili OK da uđete u "Picture Mode" podmeni. Pritisnite [▼/▲] da promenite mod slike: Dynamic → Standard → Mild → Personal.

Pritisnite **P.MODE** ponavljajući da promenite mod slike direktno na daljinskom upravljaču

**Contrast:** Pritisnite [◀/▶] ili OK da uđete u podmeni. Pritisnite [◀/▶] da podesite nivo kontrasta.

**Brightness:** Pritisnite [◀/▶] ili OK da uđete u podmeni. Pritisnite [◀/▶] da podesite svetlinu slike.

**Colour:** Pritisnite [◀/▶] ili OK da uđete u podmeni. Pritisnite [◀/▶] da podesite intenzitet boje.

**Tint:** Pritisnite [◀/▶] ili OK da uđete u podmeni. Pritisnite [◀/▶] da podesite nijansu slike.

**Sharpness:** Pritisnite [◀/▶] ili OK da uđete u podmeni. Pritisnite [◀/▶] da podesite oštrinu slike.

**Colour Temp:** Pritisnite [◀/▶] ili OK da uđete u podmeni. Pritisnite [▼/▲] da promenite toplinu sveukupan ton slike: Cold → Normal → Warm

**Redukcija šuma:** Pritisnite [◀/▶] ili OK da uđete u podmeni. Pritisnite [▼/▲] da promenite redukciju šuma: Off → Low → Middle → High → Default.

## SCREEN - EKRAN

Pritisnite MENU taster na daljinskom upravljaču da uđete u OSD meni, zatim Pritisnite "▼ / ▲" taster da izaberete "EKRAN". Pritisnite OK taster da uđete u "EKRAN" mod.

 
**EKRAN** (dostupno samo kad je povezan preko EKRAN sa PC) Automatsko podešavanje veličine slike.

Pritisnite "▼ / ▲" da izaberete podešavanje slike horizontalno.

Pritisnite [▶] OK taster da uđete u podešavanje slik vertikalno.

Pritisnite "▼ / ▲" da izaberete stavke.

Pritisnite "◀ / ▶" taster da podesite.

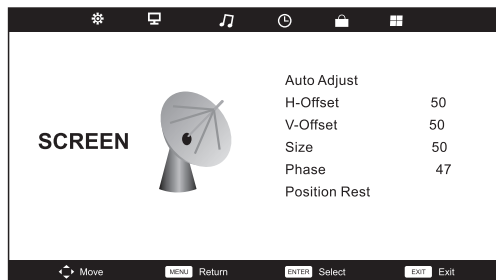

## SOUND - ZVUK

### MENI ZVUKA:

Pritisnite "MENU" za prikaz glavnog menija.

Pritisnite [◀ / ▶] da izaberete "ZVUK" u glavnom meniju, zatim OK da potvrdite.

**Mod zvuka:** Pritisnite [◀ / ▶] ili OK da uđete u "Mod zvuka" podmeni. Pritisnite [▼ / ▲] da promenite mod.

**zvukz:** Standard → Music → Movie → Sports → Personal.

 
Možete da pritisnete S.MODE ponavljajući na daljinskom upravljaču da promenite mod zvuka direktno.

**Balans:** Pritisnite [◀ / ▶] ili OK da uđete u podmeni. Pritisnite [◀ / ▶] da postavite odgovarajuću vrednost levog i desnog zvučnika.

**Auto jačina:** Pritisnite [◀ / ▶] ili OK da podesite automatsko postavljanje jačine zvuka.

**SPDIF Mod:** Pritisnite [◀ / ▶] ili OK da podesite SPDIF mod na "Auto", "Off" ili "PCM".

**AD promena** (Za DTV samo): Pritisnite [▶] ili OK da uđete u podmeni. Pritisnite [◀ / ▶] audio opis na "On" ili "Off" kao i podešavanje nivoa jačine za AD.

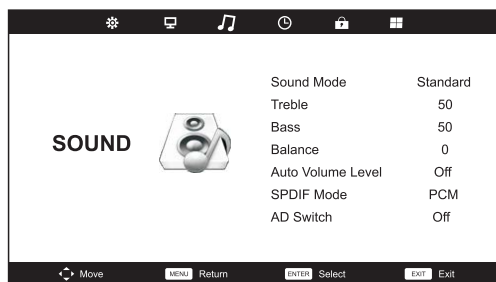


## TIME - VREME

### VREME MENI:

Pritisnite MENU za prikaz glavnog menija.

 Pritisnite [◀ / ▶] da izaberete "VREME" u glavnom meniju, zatim OK da potvrdite.

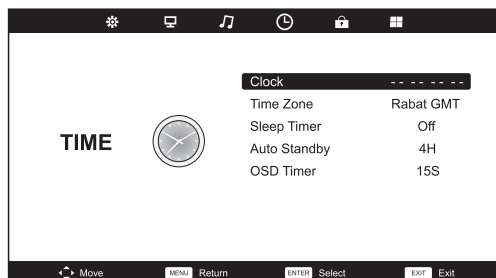

## TIME - VREME

**Sat:** koristite [◀/▶] tastere da se izabere pozicija, i koristite [▼/▲] da podesite vreme.

 
**Vremenska zona:** Pritisnite OK da uđete u podmeni. Pritisnite [▼/▲/◀/▶] da se izabere. Pritisnite OK

**Sleep Timer:** Pritisnite [▶] ili OK da uđete u "Sleep Timer" podmeni. Pritisnite [▼/▲] da promenite sleep tajmer sa/na Off, 10 min, 20 min, 30 min, 60 min, 90 min, 120 min, 180 min, 240 min.

Možete pritisnuti SLEEP više puta na daljinskom upravljaču da promenite direktno.

**Auto Standby:** Pritisnite OK da uđete u podmeni. Pritisnite [▼/▲] da se izabere Off, 3H, 4H, 5H, pritisnite OK.

**OSD tajmer:** Pritisnite [▶] ili OK da uđete u podmeni. Pritisnite [▼/▲] da promenite OSD tajmer za 5 sekundi, 10 sekundi, 15 sekundi, 20 sekundi, 25 sekundi, 30 sekundi.

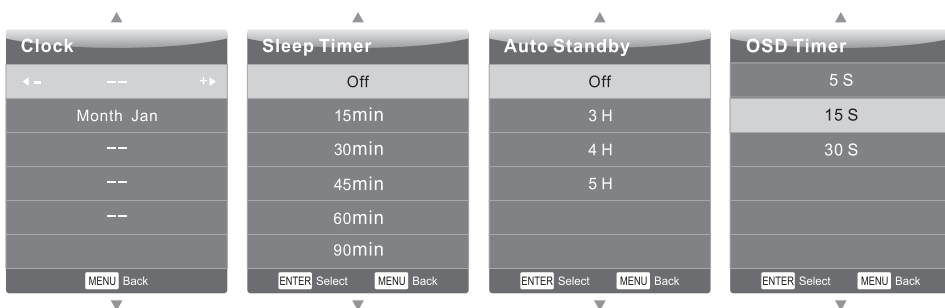


## LOCK - ZAKLJUČAVANJE

### ZAKLJUČAVANJE:

Pritisnite MENU za prikaz glavnog menija.

 Pritisnite [◀/▶] da izaberete "LOCK" u glavnom meniju, zatim OK da potvrdite.

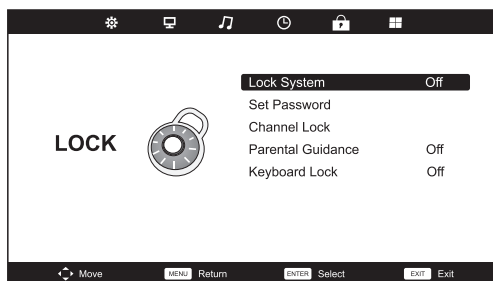

## LOCK - ZAKLJUČAVANJE

**Šifra:** unesite početnu šifru "0000" da uđete u MENI funkcije ako hoćete da promenite "Lock System u "On"

**Sistem zaključavanja:** Podesi sistem na "On" ili "Off" koji vam omogućava ili onemogućava funkcije dole.

**Podesite šifru:** Pritisnite [◀/▶] ili OK da uđete u podmeni da podesite novu šifru.

Možete da promenite šifru tako što unesete staru, zatim novu šifru i ponovite novu šifru.

**Blokirati program:** Pritisnite OK da prikaže Blokiraj program meni.

**Parentak Guidance:** Pritisnite OK za podmeni, Pritisnite [▼/▲] da se izabere Off, 4,5,6,7,8,9,10,11,12, 13,14,15,16,17,18. Pritisnite OK.

**Zaključavanje tastature:** Pritisnite OK da se izabere Off ili On

## SETUP - PODEŠAVANJE

### PODEŠAVANJE:

Pritisnite MENU za prikaz glavnog menija. Pritisnite [◀/▶] da izaberete "SETUP" u glavnom meniju, zatim OK da potvrdite.

| OSD Language            | English |
|-------------------------|---------|
| TT Language             | West    |
| Audio Languages         | English |
| Subtitle Language       | English |
| Hearing Impaired        | Off     |
| PVR File System         |         |
| Scale                   | 16:9    |
| Blue Screen             | On      |
| First Time Installation |         |
| Reset                   |         |
| Software Update(USB)    |         |

### OSD Jezik

Pritisnite Ok da izaberete [◀/▶] [▼/▲] zatim taster da se izabere OSD jezik. Pritisnite "MENU" za povratak na predhodni meni.

## SETUP - PODEŠAVANJE

**TXT jezik:** Pritisnite OK da uđete u podmeni. Pritisnite [▼/▲] da se izabere stavka. Pritisnite OK da potvrdite.

Audio Jezik/ Jezik titla: Pritisnite OK da uđete i podmeni. Pritisnite [◀/▶] [▼/▲] da se izabere stavka. Pritisnite OK.

### **Za oštećen sluh** (samo za DTV)

Pritisnite [◀/▶] ili OK da se podesi "oštećen sluh" ON ili Off.

### **PVR sistem datoteka** (samo za DTV)

Pritisnite [▶] ili OK da uđete u podmeni, proverite da li je USB povezan.

### **Razmera ekrana:**

Pritisnite OK da uđete u podmeni. Pritisnite [▼/▲] da se izabere 4:3, 16:9, Zoom1, Zoom2.

Pritisnite OK

### **Plavi ekran**

Pritisnite OK taster da se izabere On ili Off.

### **Prva instalacija:**

 
Pritisnite [▶] ili OK da pokrenete odgovarajuće opcije kao i OSD Jezik i zemlju.

### **Reset**

Ovo će da resetuje sva podešavanja na fabričko. Pritisnite OK taster za početak - bićete pitani da potvrdite za početak (vidi sliku desno).

Pritisnite [◀/▶] taster da se izabere Yes ili No.


Pritisnite MENU ili EXIT taster za izlazak.

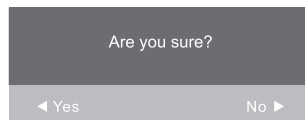


**Software Update (USB):** Pritisnite [▼/▲] da se izabere Software Update. Pritisnite OK.

USB

 Pritisnite "SOURCE" taster da izađe SOURCE meni.  
Pritisnite [▼/▲] taster da se izabere "Media" i pritisnite  
OK da uđete u sledeći meni.


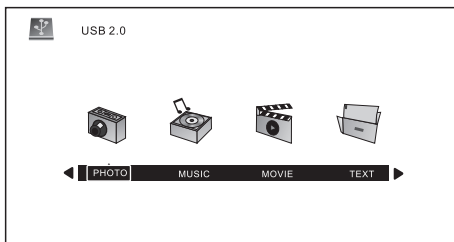


 Pritisnite [◀/▶] taster da se izabere "PHOTO", "MUSIC", "MOVIE" i "TEXT" ikone. Pritisnite OK taster da potvrdite i aktivirate sledeći meni:

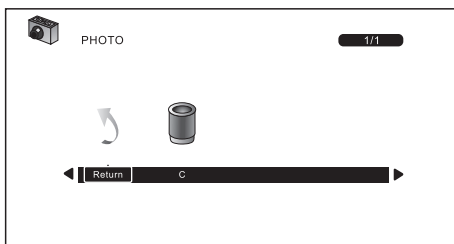

## PHOTO

  1. Pritisnite [◀/▶] taster da se izabere "PHOTO".
2. Pritisnite OK taster da uđete u disk meni.
3. Pritisnite [◀/▶] taster da se izabere disk. Uđite u podmeni.
4. Pritisnite taster da obeleži fajlove. Pritisnite OK da se izaberu fajlovi (označeno kvačicom) za selektivnu reprodukciju. Pritisnite crveni taster, ući ćete u podmeni da izbrisete fajl.
5. Pritisnete OK taster da pregledate fajl kao na slici ispod.
6. Pritisnite PLAY taster da pustite slide show (od izabranih fajlova);  
Ako nijedan fajl nije izabran reprodukuvaće se svi fajlovi. Pritisnite OK da se aktivira meni.

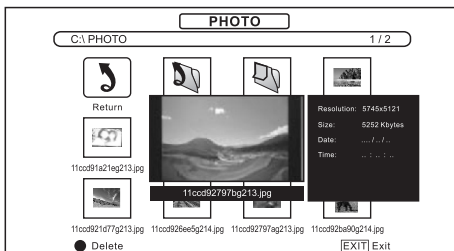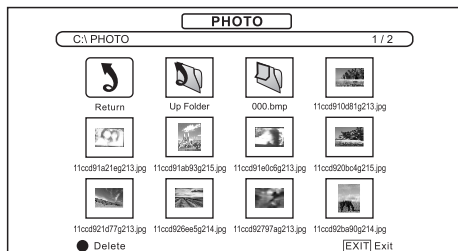

## USB

### Pauza

Pritisnite "PAUSE" taster da zaustavite slide show.

### Play

Pritisnite "PLAY" taster da reprodukuje izabrane fajlove

### Stop

Pritisnite "STOP" taster za zaustavljanje i reprodukovanje

### Next/Prev

Pritisnite "NEXT" ili "PREV". taster da preskočite pregled izabranog fajla.

### Exit

 
Pritisnite EXIT taster za izlazak.





## MUZIKA

1. Pritisnite [◀/▶] taster da se izabere "MUZIKA"

2. Uđite u interfejs MUZIKA, pritisnite [▶] taster za pregled muzike kao što je prikazano ispod:

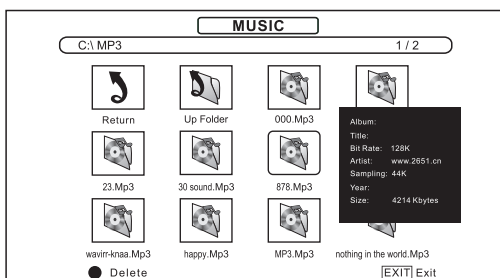

  3. Pritisnite PLAY taster u muzičkom plejeru i pustite izabranu muziku kao što je prikazano ispod:

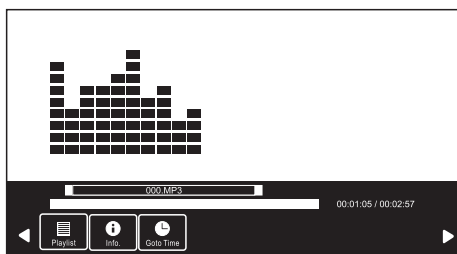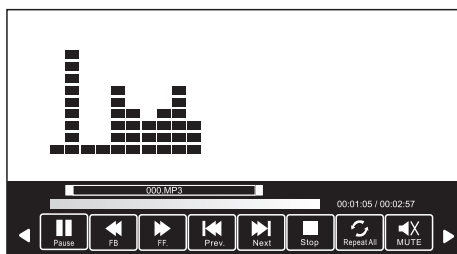

### PAUSE

Izaberite PAUSE da zaustavite muziku

### PLAY

Izaberite PLAY da pustite muziku

### FB

Izaberite FB da vratite 2X, 4X, 8X ili 16X

### FF

Izaberite FF da ubrzate 2X, 4X, 8X ili 16X

### PREV

Izaberite PREV da vratite predhodni fajl

### NEXT

Izaberite NEXT da pređete na sledeći fajl

### STOP

Izaberite STOP da zaustavite i vratite se

### Repeat

Izaberite "O" da se ponovi reprodukcija jednog fajla,

### ALL

Ponoviti sve izabrane fajlove

### MUTE

Izaberite MUTE da ugasiite zvuk

## USB

**Play list:** Izaberite "Play list" da se prikaže plej lista.

 
**Info:** Izaberite "Info" da se prikažu informacije o fajlu.

**Goto Time:** Izaberite "Goto Time" da podesite vreme.

### MOVIE

1. Pritisnite [◀/▶] taster da se izabere "MOVIE".

2. Uđite u movie interfejs. Pritisnite [◀/▶] taster za pregled fajlova kao na slici ispod:

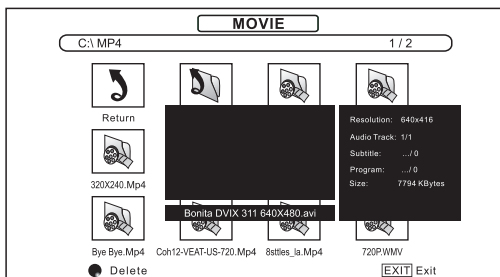

3. Pritisnite "PLAY" taster da reprodukujete film. Pritisnite OK taster za prikaz menija.

Pritisnite "PLAY" taster još jednom za prikaz u punom ekranu.

Pritisnite "PAUSE" taster da pauzirate film.

Pritisnite "PREV." ili "NEXT" taster da preskočite unapred ili unazad fajl.


Pritisnite "FB" ili "FF" taster da premotate nazad ili napred.

Pritisnite "STOP" ili "EXIT" taster da izađete.

### TEXT

 1. Pritisnite [◀/▶] taster da se izabere "TEXT" (za pregled tekstualnih dokumenata na USB-u).

2. Uđite u Text interfejs. Pritisnite [◀/▶] [▼/▲] taster za pregled fajlova kao što je prikazano na slici:

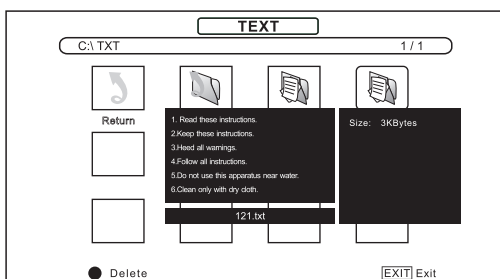

3. Pritisnite "PLAY" taster da otvorite fajl. Pritisnite OK taster da prikazete meni kao na slici:

Izaberite "PREV PAGE" za pregled predhodne stranice.

Izaberite "NEXT PAGE" za pregled sledeće stranice.

Izaberite "STOP" za povratak.

Izaberite "MUSIC" da slušate muziku dok čitate.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.



## PROBLEMI

### VODIČ ZA REŠAVANJE PROBLEMA

Mnogi kvarovi su prouzrokovani neodgovarajućim i nepravilnim podešavanjem i uglavnom su jednostavni za otkloniti. Ukoliko imate poteškoća sa rukovanjem, prvo pogledajte sledeću listu uobičajnih grešaka i njihovih rešenja

### SIMPTOMI I METODA PROVERAVANJA I PODEŠAVANJA

#### Nema slike ili zvuka.

Proverite da li je naponski kabl ispravno priključen u utičnicu.

#### Slika je normalna ali bez zvuka.

Proverite da nije slučajno zvuk podešen na nečujno (MUTE). Ukoliko jeste pojačajte zvuk.

#### Daljinski upravljač ne radi.

Proverite da li je TV uključen.

Proverite da li su baterije ispravno postavljene.

Uverite se da infracrveni odašiljač na daljinskom ili TV-u nije izložen velikoj svetlosti ili da nije blokiran na bilo koji način.

#### Ne primete nikakav TV signal.

Proverite da li je SOURCE prekidač postavljen na TV-u. Proverite i podešavanje za lokaciju i povezanost. Pokušajte da ponovo pretražite kanale i proverite metod pretrage.

#### Bez signala sa spoljašnjeg izvora.

Proverite da li je taster SOURCE podešen na ispravnu poziciju za prijem signala.

#### Problem sa kontrastom i osvetljenjem.

Napravite potrebne i željene izmene.

#### Slab kontrast i blede boje na svim kanalima.

Proverite podešavanje za lokaciju prijema signala.

#### Linije ili tačke po celom ekranu.

Proverite lokacijska podešavanja, kratak spoj, prekinuta konekcija ili bilo koja vidljiva oštećenja.

#### Dupla slika ili zamagljenost.

Proverite podešavanja za lokaciju i uopšte položaj antene ili uređaja. Jak vetar može da izazove takve probleme. visoke zgrade ili planine takođe. Malo podešavanje antene može u mnogo čemu da popravi sliku.

### NAPOMENA:

Spoljna ili krovna antena treba da bude postavljena od strane ovlašćenog osoblja.

## SPECIFIKACIJA

|                               |                               |
|-------------------------------|-------------------------------|
| Proporcija ekrana             | 16:9                          |
| Sistem                        | PAL/SECAM BG/DK, I DVB-T/C+T2 |
| Impedansa k oaksijalnog kabla | 75 $\Omega$                   |
| Prijem TV kanala              | Ceo opseg kanala              |
| Napajanje, voltaža            | 100-240V~ 50/60Hz             |

**Napomena:** Delovi i specifikacije mogu da budu promenjene bez predhodne najave.



Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Stella, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/stella-televizor-s32d52-akcija-cena/>