

Uputstvo za upotrebu

FOX televizor 43WOS635F



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/fox-televizor-43wos635f-akcija-cena/>



UPUTSTVO ZA UPOTREBU

LED TELEVIZORI

Model: 43WOS635F

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne

podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici **FOX televizora** mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.

EN

SR

Content

Warning and Precautions	1
Important Safety Instructions.....	2
Remote Control Operation	4
TV Buttons and Terminal Interface	5
Remote Control	6
First Time Installation	7
Home page	10
TV Setting.....	12
Quick Settings	12
Picture Mode	13
Sound Mode.....	13
Sound Out	13
Game Optimiser	14
Network.....	14
Picture	15
Sound	16
General	18
Media	24
Photo and Video	24
Photo	24
Video	25
Music.....	25
LG ThinQ.....	26
Help.....	30

Warning and Precautions



Warning
Risk of electric shock.
Do not open.



Warning: To avoid the risk of electric shock, do not remove cover (or back).
No user-serviceable parts inside.
Refer servicing to qualified service personnel.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to a person.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

CAUTION: TO ENSURE PERSONAL SAFETY, OBSERVE THE FOLLOWING RULES REGARDING THE USE OF THIS UNIT.

1. Operate only from the power source specified on the unit.
2. Avoid damaging the AC plug and power cord.
3. Avoid improper installation and never position the unit where good ventilation is unattainable.
4. Do not allow objects or liquid into the cabinet openings.
5. In the event of trouble, unplug the unit and call a service technician. Do not attempt to repair it yourself or remove the rear cover.

Changes or modifications not approved by could void the warranty.

- * When you don't use this TV set for a long period of time, be sure to disconnect both the power plug from the AC outlet and antenna for your safety.
- * To prevent electric shock do not use this power plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

Do not attempt to service the product yourself

Caution

To prevent electrical shock, do not open the TV casing.
There are no user serviceable parts inside.
Please refer to qualified service personnel for repairs.

Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this unit near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table-cloths, curtains etc. There must be a minimum distance of 5cm clear space around the unit at all times to ensure proper ventilation.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat. No naked flame sources such as lit candles, should be placed on or near the unit.
- 9) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where they exit from the unit.
- 10) Only use attachments/accessories specified by the manufacturer.
- 11) Use only with a cart, stand, tripod, bracket or table specified by the manufacturer or sold with the unit. When a cart is used, use caution when moving the cart/unit combination to avoid injury from tip-over.
- 12) Unplug this unit during lightning storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, the unit has been exposed to rain or moisture, does not operate normally or has been dropped.
- 14) The unit should not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on the unit.
- 15) Place the television on a stable, flat surface. Failure to do so can result in the television falling, causing injury.
- 16) Do not allow young children to play around or on the television. Do not hang from the unit. Failure to do so can result in the television falling, causing injury.
- 17) Do not allow young children to play with the plastic bag that came with the television when you unpacked it. Failure to do so can result in suffocation, which may lead to death.
- 18) Avoid improper installation and never position the unit where good ventilation is impossible. When installing this unit, distance recommendations must be maintained between the set and the wall, as well as inside a tightly enclosed area or piece of furniture. Keep to the minimum distance guidelines shown for safe operation.
- 19) **Cautions for installation**
 - Do not tilt the unit towards the left or right or towards the back.
 - Ensure the power cord is out of the path of foot traffic.
 - The unit will generate a slight amount of heat during operation. Ensure that sufficient space is available around the unit to allow satisfactory cooling.
 - Have two people remove the unit from the box with the screen facing away from you. It's possible your clothing (such as a belt buckle or button) may scratch the front of the unit. Do the same when moving the unit to another location.



- 20)** This unit shall be connected to a mains socket outlet with a protective earthing connection.
- 21)** Make enough room for inserting and removing the power plug. Place the unit as close to the outlet as possible. The main power supply for this unit is controlled by inserting or removing the power plug. Physically disconnecting the power plug is the only way to completely disconnect the unit from the mains power source.
- 22)** Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- 23)** When this unit is connected to the wall outlet, it is always on standby even when all the LED lamps are not lit. To shut down the unit, unplug the unit from the wall outlet.
- 24)** If the supply cord is damaged, it must be replaced before further use by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 25)** Always place the TV on furniture that can safely support the TV. Make sure the ends of the TV do not overhang the edge of the supporting furniture.
- 26)** Do not place the TV on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the TV to a wall or other suitably strong support.
- 27)** Do not stand the TV on cloth or other materials placed between the TV and the supporting furniture.
- 28)** Where the mains plug is used as the disconnect device, the disconnect device shall remain readily operable.

IMPORTANT INFORMATION

 
Televisions that are not positioned in sufficiently stable locations can present potential falling hazards. To avoid injuries, particularly to children, take the following simple precautions:

- Place this television only on furniture that can safely support it.
- Use only a cabinet or stand recommended by the manufacturer of the television.
- Ensure the television does not hang over the edge of supporting furniture.
- Do not place the television on tall furniture (such as cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Do not place cloth or other materials between the television and the supporting furniture.
- Do not let children climb on furniture to reach the television or its controls.

Remote Control Operation


Installing Batteries

1. Slide in the direction shown by the arrow in Image 1 below to open the cover of the batteries on the back of the remote control.
2. Load two AAA alkaline batteries in the compartment.
3. Replace the cover of the batteries.

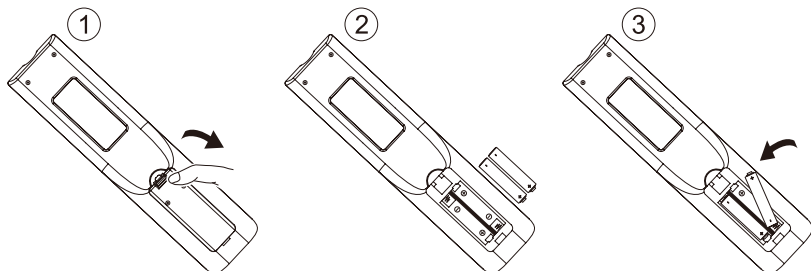


Precautions

 
Make sure that there is no obstacle between the remote control and television set.

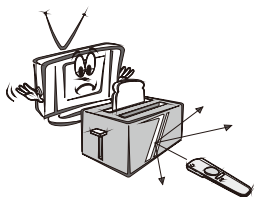

 
Keep the remote control away from heat sources and humid areas to ensure effective performance of the remote control.

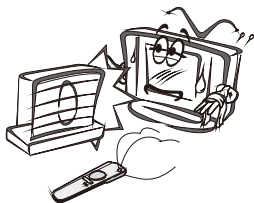

 As strong light may interfere with the signals, change your position to operate the remote control if the television cannot be turned on or off as you expect.

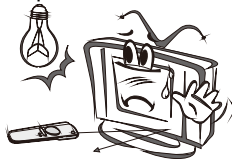

 Make sure that two AAA 1.5V alkaline batteries are loaded correctly.

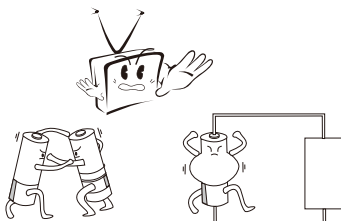

TV Buttons And Terminal Interface

TV Buttons

Note: The following is only functional schematic, And the actual position and arrangement of different models may be different.



:Turn ON/OFF Power.

SOURCE:External Signal Input Selection.

 
 
MENU:Display Main MENU And Confirm MENU Item Selection.

CH+/-:Selecting Channel.


VOL+/-:Adjusting Volume.

Terminal Interface

Note: The following are the various terminal interface, the actual position and arrangement, the number of different models may be different.

	AV input External AV Signal Input And Relevant Right/Left Sound Channel		EARPHONE output When earphones are plugged in, speakers are disabled (Some models without this interface)
	HDMI input Digital signal input from HDMI video connector.		USB input Connect a USB device here to play its media files
	ANT 75 Connect the antenna/cable tv input (75/VHF/UHF)		OPTICAL Optical audio output, for audio signal transmission without loss of quality.
	RJ45 Connect the Internet.		

 Remote Control

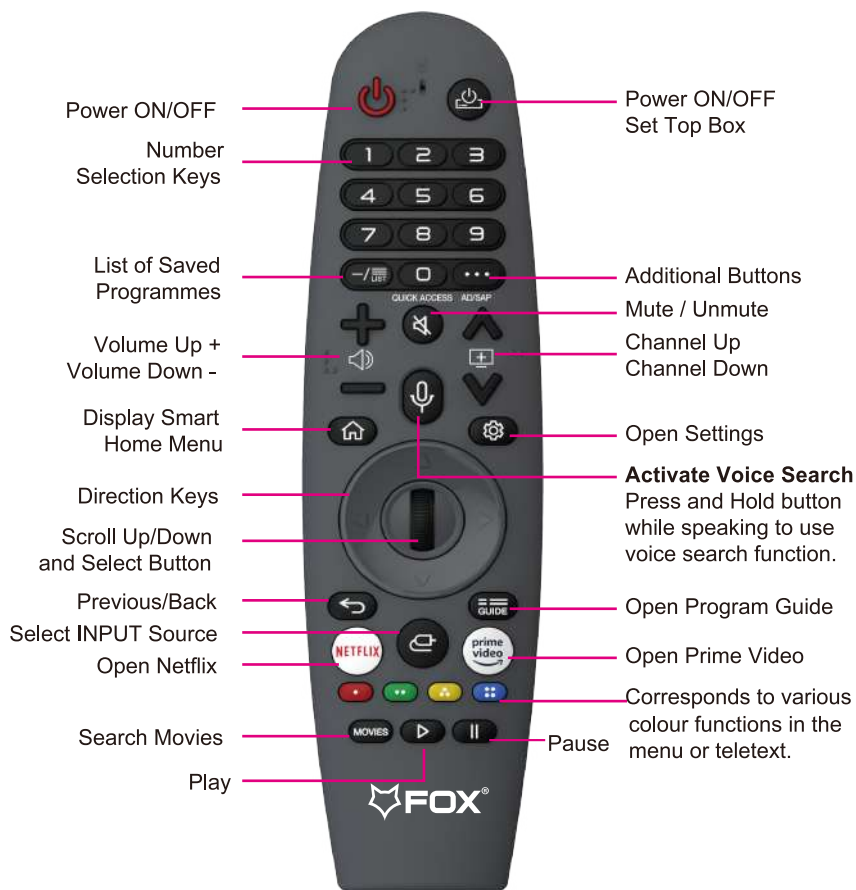


Note:


- 1) The picture is only for reference.
- 2) The image, buttons or functions of remote control may vary depending on the region, model or source.

First Time Installation

 Enter the Home page after First Time install.

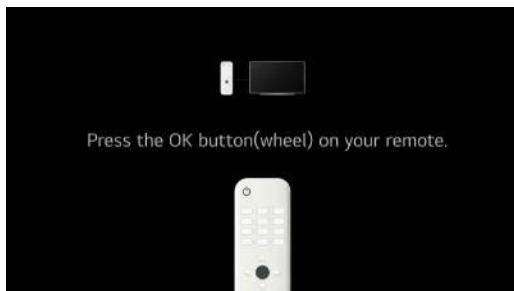

 Press [◀] / [▶] button to Installation method.

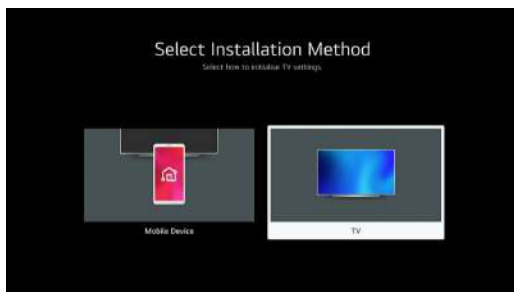

Press [▼] / [▲] button to select Language.

 
 
Press [▼] / [▲] button to select Country.




Press [▼] / [▲] button to select Internet Connection.





Press [▼] / [▲] button to select the way to watch TV.

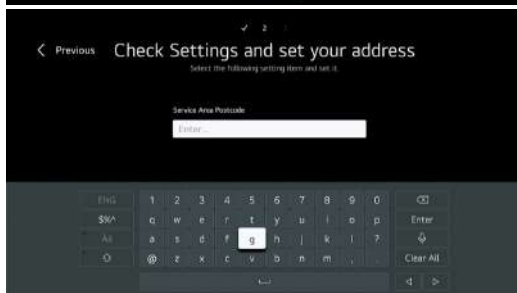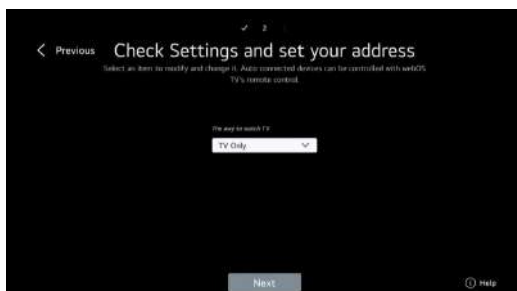

 Press [◀] / [▶] button to select TV Type.

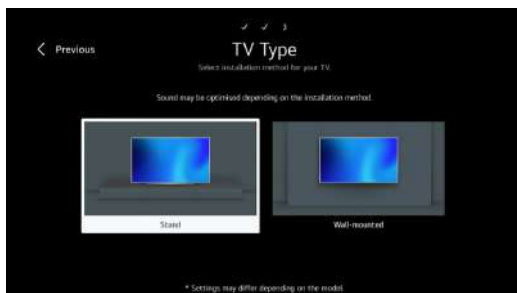

  
Press **【▼】 / 【▲】** button to select Programme Tuning.

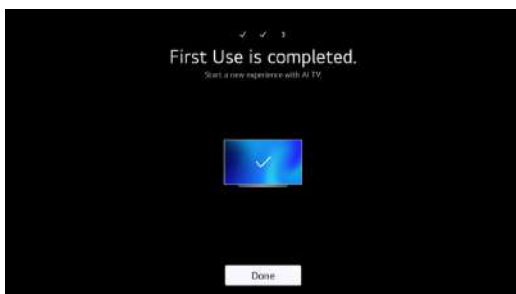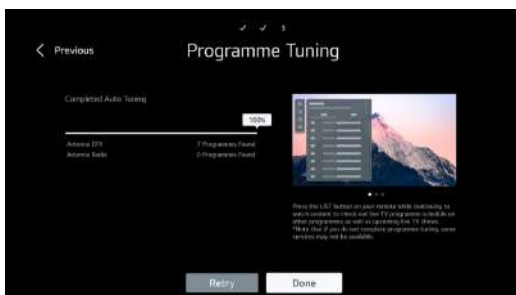

Home page

Enter the Home page after First Time install.

 
In the list of apps, select the app you want to enter

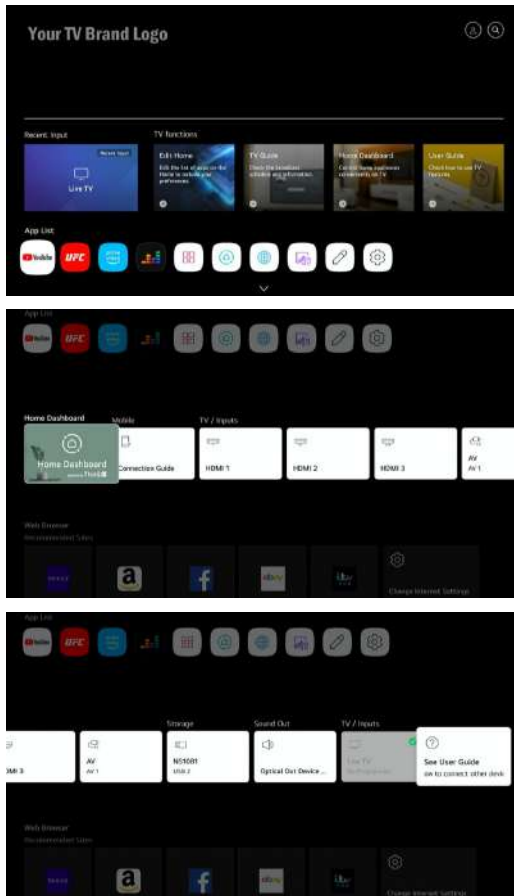

Using Home Dashboard

You can select or control a device (mobile, external device, Home IoT Devices, etc.) connected to the TV.

 Press ▼ / ▲ / ◀ / ▶ button to select .

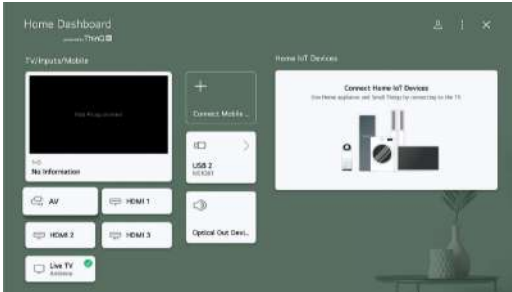

TV/Input/Mobile

1. You can play sound from a smart device connected via Bluetooth.

Please refer to Connecting External Devices → Playing Sound from a Smart Device through the TV's Speakers in User Guide for more information on the action.

2. You can check and select the external device connected through the external input port or network.

Connect Mobile Device

You can check and select the smart device connected with the LG ThinQ app.

Please refer to Connecting External Devices → Connecting Smart Devices in User Guide for more information on the action.

USB2

You can view and select the connected storage device.

Optical Out Device+TV Speaker

The currently selected output speaker is displayed, and you can navigate to the output speaker settings screen.

Home IOT Devices

You can check and control the device connected via the Home IoT.

Please refer to Connecting External Devices → Connecting Home IoT Devices in User Guide for more information on the action.



You can easily control your device by presetting the desired operations.



Exit the Home Dashboard.

TV Setting

Press **MENU** button to enter the TV Setting.

Press ◀ / ▶ button to highlight the desired menu icon , and press OK button to select.

Quick Settings



- ① You can set **Picture Mode**.
- ② You can set **Sound Mode**.
- ③ You can choose **Sound Out**.
- ④ You can set **Game Optimiser**.
- ⑤ Move to the **Connection** screen.

⑥ You can set more options.

⑦ You can add/delete the quick setting items or change their order.

Picture Mode

Press ▼ / ▲ button to select Vivid/Standard/Eco/Cinema/Sports.

Vivid Sharpens the image by increasing the contrast, brightness and sharpness.

Standard The default mode, to make users experience high-quality images under normal light.

ECO The Energy Saver feature changes settings on the TV to reduce power consumption.

Cinema Is suitable for watching TV or movies in a dark room.

Sports Suitable picture for sports games. Sharpens the image of rapid movements such as kicking or throwing a ball.

Press ◀ / ▶ button to adjust.

Sound Mode

Press ▼ / ▲ button to select Standard/ Cinema/ Clear Voice / Sports/ Music/.

Standard Optimises the sound for all types of content.

Cinema Optimises the sound for cinemas.

Clear Voice Boosts voice clarity.

Sports Optimises the sound for sports games.

Music Enhance the high pitch and reduce the bass .

Sound Out

Press ▼ / ▲ button to select Internal TV Speaker/ Bluetooth Device/ Mobile Device/ Optical Device/ HDMI ARC Device/ Wired Headphones/ Optical Out Device+ Internal TV Speaker/ Wired Headphones + TV Speaker.

Press ◀ / ▶ button to select and press OK button to setup.

Game Optimiser

 
Press ▼ / ▲ button to select Game Optimiser.

Network

If you configure settings for the network, you can use various services such as online contents and applications.

Wired Connection(Ethernet)

Press ▼ / ▲ button to select Wired Connection(Ethernet).Press **OK** button to enter sub-menu and setup.

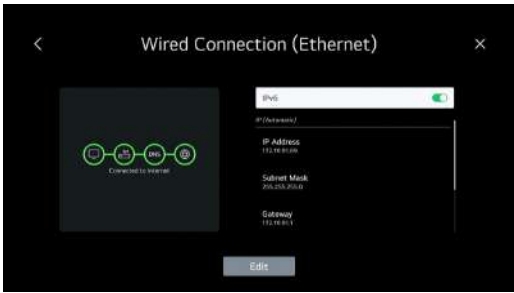

Wi-Fi Connection

Press ▼ / ▲ button to select Wi-Fi Connection.Press **OK** button to enter sub-menu and setup.



 
All Settings

Press ▼ / ▲ button to select Picture/Sound/General/Support.

Picture

Press ▼ / ▲ button to select Picture. Press **OK** button to enter sub-menu and setup.

(option: Select Mode/Aspect Ratio/Advanced Settings)

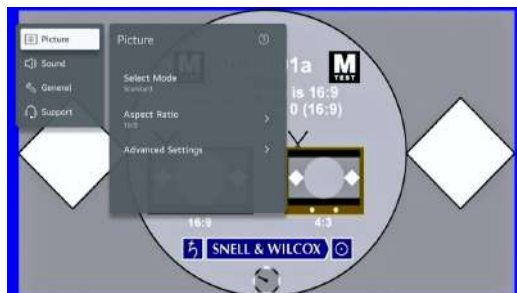

Select Mode

Press ▼ / ▲ button to select Vivid/Standard/Eco/Cinema/Sports.

Aspect Ratio

You can change the screen size according to the type of content you are watching.

Press ▼ / ▲ button to select Aspect Ratio/ Just Scan.

User Selection

Press ▼ / ▲ button to select Aspect Ratio.

(Optional: 16:9/ Original/ Full Wide/ 4:3/ Vertical Zoom/ 4-Way Zoom)

Just Scan

Press ▼ / ▲ button to select Just Scan.

If you turn this feature **On**, you can view the content in the aspect ratio that is in the broadcast signal or content source. If the edge of the screen is not clean, please turn it **Off**

 
Advanced Settings

Press ▼ / ▲ button to select Brightness/Colour/Clarity/Apply to all inputs/Reset.

Sound

Press ▼ / ▲ button to select Sound. Press **OK** button to enter sub-menu and setup.

(Optional: Select Mode/Sound Out/Advanced Settings)

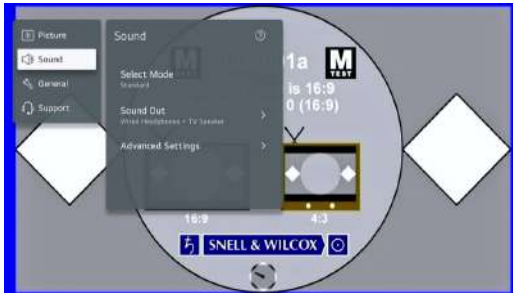

Sound Mode

Press ▼ / ▲ button to select Standard/ Cinema/ Clear Voice / Sports/ Music/.

Sound Out

Press ▼ / ▲ button to select Internal Use TV Speaker/Use Wired Speaker/Use Wireless Speaker/Use External Speakers with TV Speaker.

Advanced Settings

Balance

Balanced left and right channels.

Press **OK** button to select Balance. Press ▼ / ▲ button to adjust.

Equalizer

Press ▼ / ▲ button on to select Equalizer.

Press **OK** button to enter sub-menu then press ▼ / ▲ ◀ / ▶ button to adjust.

Apply to All Inputs

Press ▼ / ▲ button on to select Apply to All Inputs.

Reset

You can reset the sound effect settings.

Press ▼ / ▲ button to select Reset.

TV Installation Type

Press ▼ / ▲ button on to select TV Installation Type.

Press ▼ / ▲ button to select Stand/ Wall-mounted.

Automatic Volume Adjustment

Press ▼ / ▲ button on to select Auto Volume. Press **OK** button to select On/Off.

DTV Audio Setting

Press ▼ / ▲ button on to select DTV Audio Setting.

(Optional: MPEG/ Dolby Digital/ Dolby Digital Plus/ HE-AAC/Auto)

Setting Match Screen and Sound

Press ▼ / ▲ button on to select Setting Match Screen and Sound.

(Optional: TV Speaker Delay/ Bypass)

HDMI Input Audio Format

Press ▼ / ▲ button on to select HDMI Input Audio Format.

You can set the audio format for each HDMI input. When the voice delivered through the HDMI port is not synchronized, set it to **PCM**.

LG Sound Sync

Press ▼ / ▲ button on to select LG Sound Sync.

Connect the LG Sound Sync device to the optical digital input port and set Sound Out to Optical.

By setting this feature to On, you can adjust the volume of the connected LG Sound Sync device using a TV remote control.

Digital Sound Out

Press ▼ / ▲ button on to select Digital Sound Out.

(Optional: PCM/Auto/Pass Through)

eARC Support

Press ▼ / ▲ button on to select eARC Support.

General

Highlight the item and press OK button to enter the sub-menu.

Press ▼ / ▲ button to select General.



AI Service

You can enable the recommended services based on the usage history.

Press ▼ / ▲ button to select AI Service. Press OK button to enter sub-menu.

 
Game Optimiser

Press ▼ / ▲ button on to select Game Optimiser.

Programmes

Press ▼ / ▲ button on to select Programmes.


(Optional: Programme Tuning&Settings/Programme Manager/Dual Mono/CI Information/Copy Programmes/HbbTV)

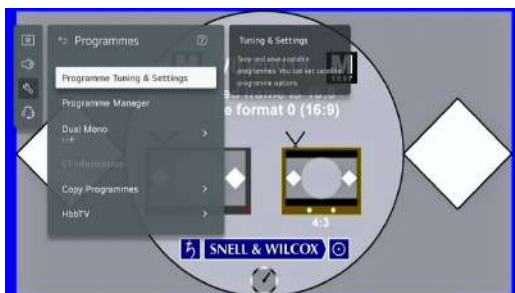

Location

You can change the location setting of your Smart TV.

 Press ▼ / ▲ button to select Location. Press OK button to enter sub-menu.

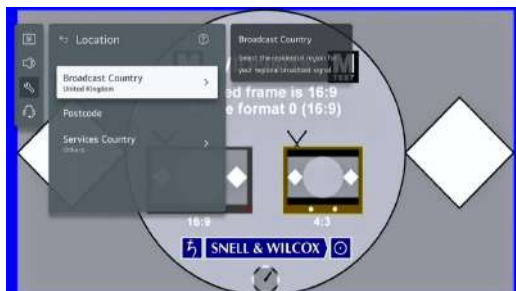

Broadcast Country

You can set the broadcast country on your TV.

Postcode

This function is used to set the broadcast location of the TV by entering your postcode.

Services Country

If you don't set the Set Automatically, you can select the country manually.

Time & Timer

You can check the time or configure related settings.

Press ▼ / ▲ button to select Time. Press OK button to enter sub-menu.



Set Automatically

The TV time is automatically set to the time of digital broadcasting information sent from the broadcasting station or the time sent from the server.

Press ▼ / ▲ button to select Set Automatically. Press **OK** button to select On/Off.

Time / Date / Time Zone

You can manually set the time and date if the automatically set current time is incorrect.

Press ▼ / ▲ button to select Set Time / Date / Time Zone. Press **OK** button to select.

Custom Time Zone

When select the **Custom** in **Time Zone**, **Custom Time Zone** menu is activated.

Press ▼ / ▲ button to select Custom Time Zone. Press **OK** button to select.

Timers

Press ▼ / ▲ button to select Timers. Press **OK** button to enter sub-menu.

Safety

Press ▼ / ▲ button to select Safety. Press **OK** button to enter sub-menu.



 
All the Options are available only when the Safety select On.

The initial password is set as "0000".

Press ▼ / ▲ button to select the option then press **OK** button to setup.


LG Account

Press ▼ / ▲ button to select LG Account, Press OK button to enter sub-menu.

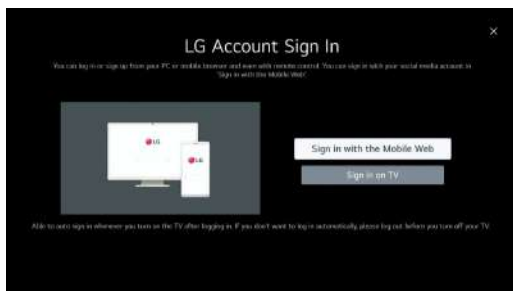

Additional Settings

 Press ▼ / ▲ button to select Additional Settings, Press OK button to enter sub-menu.

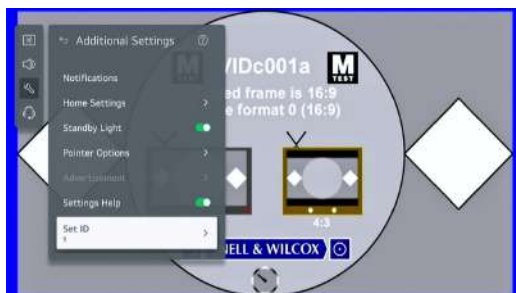


Reset to Initial Settings

Press ▼ / ▲ button to select Reset to Initial Settings, Press OK button to enter sub-menu.

Return TV to its initial settings. This will revert all settings to their default values.

After reset, the TV will automatically turn off and on.

 Note: If Safety is set to On, you should type the password to Reset to Initial Settings.

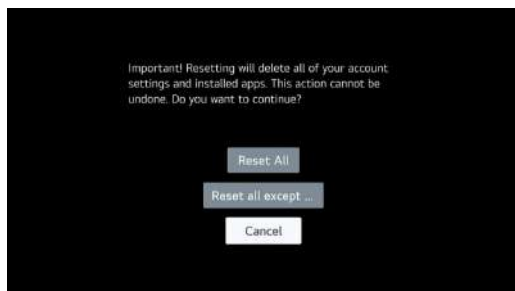

Support

Highlight the item and press OK button to enter the sub-menu.

Press ▼ / ▲ button to select Support.



Software Update

Uses software update to check and obtain the latest version.

Press ▼ / ▲ button to select Software Update. Press **OK** button to enter sub-menu.

Then press ▼ / ▲ button to select and setup.

User Guide

Press ▼ / ▲ button to select User Guide. Press **OK** button to enter sub-menu.

Then press ▼ / ▲ button to select and setup.

Privacy & Terms

Press ▼ / ▲ button to select Privacy & Terms. Press **OK** button to enter sub-menu.

Then press ▼ / ▲ button to select and setup.

Media

Connect a USB storage device (USB HDD, USB stick) to the USB port on the TV to enjoy the content files stored on the USB storage device on your TV.

Press ▼ / ▲ button on to select Photo & Video/Photo/Video/Music.


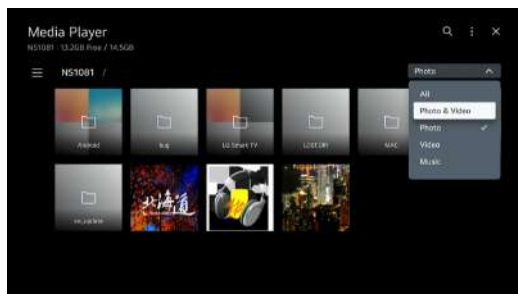 


Photo and Video

 You can view photos and videos using the Photo & Video app.

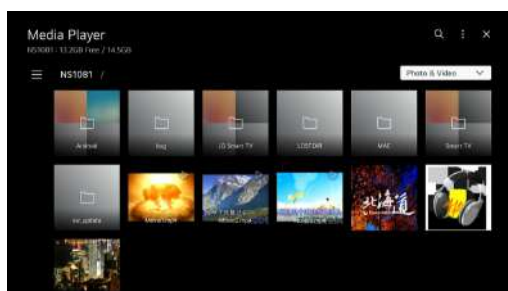

Photo

Selecting a photo in the Photo & Video app runs the photo player. You can view your saved photos.



 
Video

Selecting a photo in the Photo & Video app runs the photo player. You can view your saved videos.



Music

You can play music conveniently by selecting the music files saved in the Music app or by selecting the music player icon during content playback in apps such as Photo & Video.

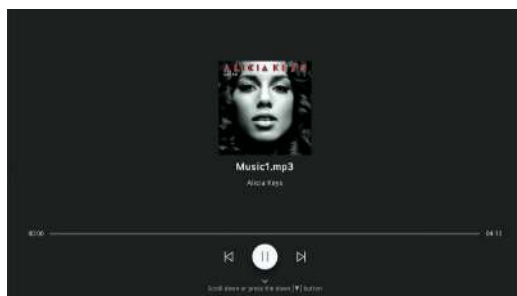

LG ThinQ

You can check and select the smart device connected with the LG ThinQ app and log in/out to and from the LG ThinQ account you created on mobile.

Check your phone's Internet connection and try again.



Retry

Whenever, wherever

Control your home appliances remotely with LG ThinQ.



Skip

Next

ThinQ does it all even while you are out

With the ThinQ, you can live a convenient life with everything running automatically.



Skip

Next

The right information at the right time.

The ThinQ informs you of the current state of your appliances. It keeps you updated with immediate notifications for events such as the end of a wash cycle.



Skip

Next

Get the status report of your appliances.

Get the state of your product smartly assessed in detail. You can also receive a troubleshooting guide tailored to the diagnosis results.



Sign In

Welcome to LG ThinQ.



Sign in with LG

[Another account >](#)

Discover how a connected life with ThinQ makes your life easier.

Connect your washer, air conditioner, TV, and other appliances to the ThinQ app.

Get away from the busy routine and enjoy a relaxing home life with smart ThinQ.

■ Get immediate notifications

The ThinQ app will keep you informed with all notifications you need so that your laundry will not smell musty or your pizza in the oven will not get overcooked. ThinQ will periodically diagnose the state of your products by itself.

■ Control your home from anywhere

You can check the indoor temperature of your house and turn on your air conditioner even while you are out. You can also remotely run your washer from outside and proceed with the drying process right after coming back home.

■ TV remote control in my smartphone

Change TV channels and adjust the sounds with the ThinQ app. You can enjoy your mobile content in your smartphone gallery on a TV screen. You can also use the Magic Remote feature with your app.

※ The availability of products and services may vary depending on the models you own or the region/country you reside in.

■ ThinQ will automatically access the current state of your products

Get the state of your products smartly assessed in detail. Smart Diagnosis will catch problems and help you troubleshoot them.

The following access permissions are necessary for the ThinQ app.

Outgoing Calls/Call Settings

To contact the LG Service Centre

Contacts

To verify user information when signing in to the app

Location

To obtain the device connecting Wi-Fi info when adding devices

To set and save the home location in Manage Home

To search for the weather information of the current location

Camera

To take a profile picture

To scan QR codes and share homes or accounts

To take photos and attach them to the 1:1 Support section

To take a picture of the purchase receipt and save it when registering additional information about the product

Photos, Media & Files

To use the storage capacity of your smartphone when downloading product information

To take photos and attach them to the 1:1 Support section

To take a picture of the purchase receipt and save it when registering additional information about the product

Microphone

To check product status via Smart Diagnosis

Local Network

To obtain the device connecting Wi-Fi info when adding devices

Bluetooth

To use the Scan Nearby feature

HomeKit

To add IoT-based products

Tracking

To provide personalised information

 
Remote Control

Power on & check the product status whenever and wherever you want




Status Alerts

Get status report alerts for products as soon as they happen

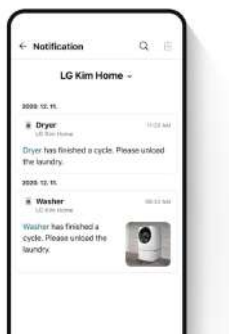

Smart Diagnosis

 Get the state of your product smartly assessed in detail

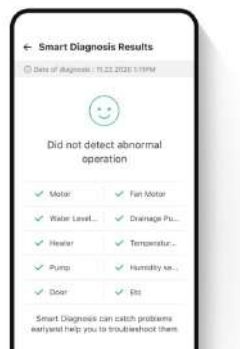


TV Remote

The ThinQ app is reborn
as a TV remote



Working in Modes

 The right feature goes to work
in the right situation mode

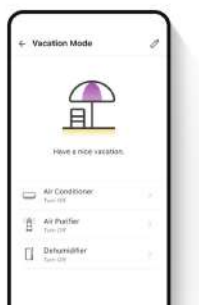

Help

No Power	Check the AC cord of TV is plus in or not. If still no power, please pull out the plug and replug in after 60 seconds. And open the TV again
Signal receive not properly	• To cause double image or phantom if there has high building or high mountain round TV. You can adjust image effect by manually operation: consult instruction of vernier regulation or change the direction of external antenna. • If you use the indoor antenna, under certain circumstance, receive will be more difficult. So you can change the direction of the antenna to adjust the image effect. If can't change image receiving effect either, you have to use external antenna.
No picture	• Check the antenna at the back of TV is connected properly or not. • Try to select other channels and check whether the TV problem itself or not
but, Video is ok without audio	• Increase the volume. • Check the TV is in mute mode or not, and please press the mute button to make sound resume.
but, Audio is ok color error or no picture	• Increase contrast and brightness.
Snow statics picture and noise	• Check the antenna at the back of TV is connected or not.
Level broken line	• Vacuum, such as hair drier, Maybe has electrical appliance interfere, please turn off these kinds of electrical appliance, cleaner and so on.
Image or-Dual "simulacrum" The TV no response with the Remote	• Perhaps the location for the antenna is not good. Use the tall beamed antenna can be improved quality of the display image. • Operate the remote direct to the remote sensor on the TV. If still no response for the TV, please check if the plastic bag on the remote take or not. And check if the location for the battery is correct. Change the new battery. • The TV will shift to the STAND BY if no response from the remote in the few minutes.
NO Video In (PC Mode)	• Please check if the display cable connect to the VGA correcte. • Please check if there has the bend on the display cabl.
Vertical twinkling (PC Mode)	• Enter the main menu. Use the clock regulator for the video display noise to eliminate the vertical line.
Horizontal ripping (PC Mode)	• Adjust the Audio sound horizontal in the main menu to clear the horizontal ripping line.
The screen is too bright or too dark (PC Mode)	• Adjust the contrast ratio or brightness in the main menu.
PC Function no response	• Check the computer setting in the state of compatible display resolution
Ripping line in RCA connecting	• Please use good quality connecting cable.
Problem still exist	• Unplug the power cable and wait for 30 seconds, then connect. If there is some problem with our TV, do not repair it by yourself, please contact with the customer service center.

There will be complete picture and the brightness will come down if the TV is in Note. So please do not keep the TV in a state of same, the static picture for too long time. Menu or same picture that has much difference in brightness and contrast ratio for too long time.



USER MANUAL

LED TELEVISION

Model: 43WOS635F

Thank you for purchasing this device.

FOX LED televisions are known for their great performance, as for modern, functional and elegant design. Besides that, we constantly improve our customer support, we have highly efficient and wide network of services, that make our proud customers feel safe.

You made a right choice.

Now it's time for instructions, they are not complicated, but you have to follow them.

EN

Sadržaj

Upozorenja i mere opreza	1
Važna bezbednosna uputstva	2
Rad na daljinskom upravljaču	4
TV dugmad i interfejs terminala	5
Daljinsko Upravljanje	6
Prva Instalacija.....	7
Početna Stranica.....	10
TV Setting	12
Brza Podešavanja	12
Režim slike	13
Režim zvuka.....	13
Izgovori.....	13
Optimizator igara.....	14
Mreža	14
Slika	15
Zvuk.....	16
General.....	18
Mediji	24
Foto i video	24
Photo.....	24
Video	25
Muzika.....	25
LG ThinQ	26
Pomoć.....	30
Napomena: Slike i sadržaj proizvoda su samo za referencu, a specifične su za stvarnu robu.	

Upozorenja i mere opreza

	Upozorenje Rizik od strujnog udara. Ne otvaraj.	
--	--	---

Upozorenje: Da biste izbegli rizik od strujnog udara, nemojte skidati poklopac (ili poledinu). Unutra nema delova koje korisnik može servisirati. Servisiranje se obratite kvalifikovanom servisnom osoblju.



Simbol munje sa vrhom strelice, unutar jednakokraničnog trougla, ima za cilj da upozori korisnika na prisustvo neizolovanog „opasnog napona“ unutar kućišta proizvoda koji može biti dovoljne veličine da predstavlja rizik od strujnog udara za osobu.



Uzvičnik unutar jednakokraničnog trougla ima za cilj da upozori korisnika na prisustvo važnih uputstava za rad i održavanje (servisiranje) u literaturi koja prati uređaj.

UPOZORENJE: DA BISTE SPREČILI OPASNOST OD POŽARA ILI ŠOKA, NE
IZLAŽITE OVU JEDINICU KIŠI ILI VLAGI.
OPREZ: DA BISTE OBEZBEDILI LIČNU BEZBEDNOST, POŠTOVAJTE
SLEDEĆA PRAVILA U VEZI KORIŠĆENJA OVE JEDINICE

1. Radite samo iz izvora napajanja koji je naveden na jedinici.
2. Izbegavajte oštećenje AC utikača i kablja za napajanje.
3. Izbegavajte nepravilnu instalaciju i nikada ne postavljajte jedinicu tamo gde je dobra ventilacija nedostižna.
4. Ne dozvolite da predmeti ili tečnost uđu u otvore kućišta.
5. U slučaju problema, isključite jedinicu i pozovite servisera. Ne pokušavajte sami da je popravite ili uklonite zadnji poklopac.

Promene ili modifikacije koje nije odobrio mogu poništiti garanciju.

* Kada ne koristite ovaj televizor duži vremenski period, obavezno izvucite utikač iz utičnice za naizmjeničnu struju i iz antene radi vaše bezbednosti.

* Da biste sprečili strujni udar, nemojte koristiti ovaj utikač za napajanje sa produžnim kablom, utičnicom ili drugom utičnicom osim ako se oštrice mogu do kraja umetnuti kako bi se sprečilo izlaganje oštrice.

 
————— Ne pokušavajte sami da servisirate proizvod —————

Oprez

Da biste sprečili strujni udar, ne otvarajte kućište televizora.
Unutra nema delova koje korisnik može servisirati.

Važna bezbednosna uputstva

- 1) Pročitajte ova uputstva.
- 2) Sačuvajte ova uputstva.
- 3) Obratite pažnju na sva upozorenja.
- 4) Pratite sva uputstva.
- 5) Ne koristite ovu jedinicu blizu vode.
- 6) Čistite samo suvom krpom.
- 7) Ne blokirajte otvore za ventilaciju. Ventilaciju ne bi trebalo ometati pokrivanjem ventilacionih otvora stvarima kao što su novine, stolnjaci, zavese itd. Mora postojati minimalna udaljenost od 5 cm slobodnog prostora oko jedinice u svakom trenutku kako bi se osiguralo odgovarajuća ventilacija.
- 8) Ne postavljajte u blizini izvora toplote kao što su radijatori, grejne komore, peći ili drugi uređaji (uključujući pojačala) koji proizvode toplotu. Na ili blizu jedinice ne smeju se postavljati izvori otvorenog plamena kao što su upaljene sveće.
- 9) Zaštitite kabl za napajanje od gaženja ili priklještenja, posebno kod utikača, utičnica i mesta gde izlaze iz jedinice.
- 10) Koristite samo dodatke/pribor koji je naveo proizvođač.
- 11) Koristite samo sa kolicima, postoljem, stativom, držačem ili stolom koje je odredio proizvođač ili se prodaje uz jedinicu. Kada se koriste kolica, budite oprezni kada pomerate kombinaciju kolica/jedinice da biste izbegli povrede od prevrtanja.
- 12) Isključite ovu jedinicu iz struje tokom oluja sa grmljavinom ili kada se ne koristi duži vremenski period.
- 13) Sve servisiranje prepustite kvalifikovanom serviseru. Servisiranje je potrebno kada je jedinica oštećena na bilo koji način, kao što je oštećeni kabl za napajanje ili utikač, prolivena tečnost ili su predmeti upali u jedinicu, izložen kiši ili vlazi, ne radi normalno ili je pao.
- 14) Jedinicu ne treba izlagati kapanju ili prskanju i na jedinicu ne treba stavljati predmete napunjene tečnošću, kao što su vaze.
- 15) Postavite televizor na stabilnu, ravnu površinu. Ako to ne uradite, televizor može da padne i da izazove povrede.
- 16) Ne dozvolite maloj deci da se igraju okolo ili na televizoru. Nemojte da visite sa jedinice. Ako to ne učinite, televizor može da padne i da izazove povrede.
- 17) Nemojte dozvoliti maloj deci da se igraju plastičnom kesom koju ste dobili uz televizor kada ste ga otpakovali. Ako to ne učinite, može doći do gušenja, što može dovesti do smrti.
- 18) Izbegavajte nepravilnu instalaciju i nikada ne postavljajte jedinicu tamo gde je nemoguća dobra ventilacija. Prilikom postavljanja ove jedinice, preporuke za rastojanje se moraju održavati između garniture i zida, kao i unutar čvrsto zatvorenog prostora ili komada nameštaja. Držite se na minimumu prikazane smernice za razdaljinu za bezbedan rad.
- 19) Upozorenja za instalaciju
 - Nemojte naginjati jedinicu ulevo ili udesno ili prema nazad.
 - Uverite se da je kabl za napajanje van putanje pešačkog saobraćaja.
 - Jedinica će proizvoditi malu količinu toplote tokom rada. Uverite se da ima dovoljno prostora oko jedinice da omogućiti zadovoljavajuće hlađenje.
 - Neka dvoje ljudi uklone jedinicu iz kutije tako da ekran bude okrenut od vas. Moguće je da vaša odeća (kao što je kopča za kaiš ili dugme) može izgrebati prednji deo jedinice. Uradite isto kada premeštate jedinicu na drugu lokaciju.



- 20) Ova jedinica mora biti priključena na utičnicu sa zaštitnim uzemljenjem.
- 21) Napravite dovoljno prostora za umetanje i izvlačenje utikača. Postavite jedinicu što je moguće bliže utičnici. Glavnim napajanjem za ovu jedinicu se kontroliše umetanjem ili izvlačenjem utikača. Jedini način je fizičko isključivanje utikača, da potpuno isključite jedinicu iz izvora napajanja.
- 22) Baterije se ne smeju izlagati preteranoj toploti kao što je sunce, vatra ili slično.
- 23) Kada je ova jedinica priključena na zidnu utičnicu, uvek je u stanju pripravnosti čak i kada sve LED lampe nisu upaljene. Da biste isključili jedinicu, isključite jedinicu iz zidne utičnice.
- 24) Ako je kabl za napajanje oštećen, pre dalje upotrebe ga mora zameniti proizvođač, njegov serviser ili slično kvalifikovano lice kako bi se izbegla opasnost.
- 25) Uvek postavljajte TV na nameštaj koji može bezbedno da podrži TV. Uverite se da krajevi televizora ne nadvisuju ivicu nosećeg nameštaja.
- 26) Ne postavljajte televizor na visok nameštaj (na primer, ormariće ili police za knjige) bez pričvršćivanja i nameštaja i televizora za zid ili drugu odgovarajuću čvrstu potporu.
- 27) Ne postavljajte TV na tkaninu ili druge materijale postavljene između televizora i pratećeg nameštaja.
- 28) Kada se utikač za napajanje koristi kao uređaj za isključivanje, uređaj za isključivanje treba da ostane u funkciji.

VAŽNA INFORMACIJA

 
 
 
Televizori koji nisu postavljeni na dovoljno stabilnim lokacijama mogu predstavljati potencijalnu opasnost od pada. Da biste izbegli povrede, posebno dece, preduzmite sledeće jednostavne mere predostrožnosti:

- Postavite ovaj televizor samo na nameštaj koji može bezbedno da ga nosi.
- Koristite samo ormarić ili postolje koje preporučuje proizvođač televizora.
- Uverite se da televizor ne visi preko ivice nosećeg nameštaja.
- Ne postavljajte televizor na visok nameštaj (kao što su ormari ili police za knjige) bez pričvršćivanja i nameštaja i televizora na odgovarajući oslonac.
- Nemojte stavljati tkaninu ili druge materijale između televizora i pratećeg nameštaja.
- Ne dozvolite deci da se penju na nameštaj da bi došla do televizora ili njegovih komandi.

Rad na daljinskom upravljaču


Instaliranje baterija

1. Klizite u smeru koji pokazuje strelica na slici 1 ispod da biste otvorili poklopac baterija na poleđini daljinskog upravljača.
2. Ubacite dve AAA alkalne baterije u odeljak.
3. Vratite poklopac baterija.

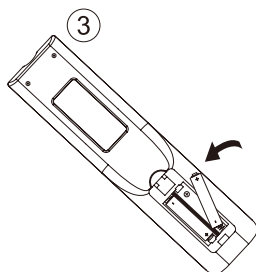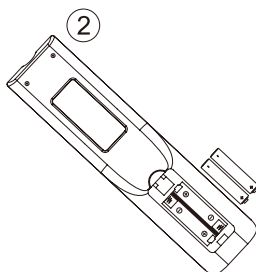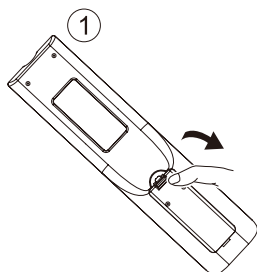

Preventivne mere

 
Uverite se da nema prepreka između daljinskog upravljača i televizora.

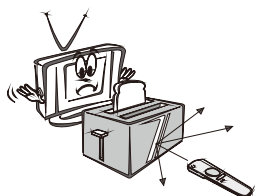


Pošto jako svetlo može da ometa signale, promenite položaj da biste upravljali daljinskim upravljačem ako se televizor ne može uključiti ili isključiti kako očekujete.



 Držite daljinski upravljač dalje od izvora toplote i vlažnih područja kako biste osigurali efikasan rad daljinskog upravljača.

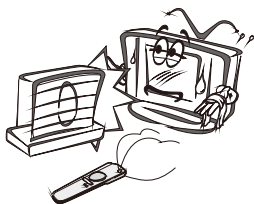

 Uverite se da su dve AAA 1,5V alkalne baterije pravilno napunjene.

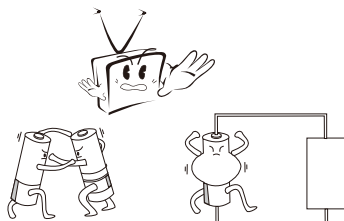

TV dugmad i interfejs terminala

TV dugmad

Napomena: Sledeće je samo funkcionalna šema, a stvarni položaj i raspored različitih modela mogu biti različiti.



 : Uključite/isključite napajanje.

IZVOR: Izbor ulaza eksternog signala.

MENU: Prikažite glavni MENU i potvrdite izbor stavke MENU.

CH+/-: Izbor kanala.


VOL+/-: Podešavanje jačine zvuka.

Terminal Interface

Napomena: Slede različiti terminalni interfejsi, stvarni položaj i raspored, broj različitih modela može biti različit.

	AV ulaz Ulaz spoljnog AV signala IOdgovarajući desni/levi zvučni kanal		Izlaz za SLUŠALICE Kada su slušalice priključene, zvučnici su onemogućeni (Neki modeli bez ovog interfejsa)
	HDMI ulaz Ulaz digitalnog signala sa HDMI video konektora.		USB ulaz Povežite USB uređaj ovde da biste reprodukovali njegove medijske datoteke
	ANT 75 Povežite antenski/cadle TV ulaz (75/VHF/UHF)		COAKSIAL Povežite SPDIF prijemnik. (Neki modeli bez ovog interfejsa)
	Rj45 Povežite Internet.		

 Daljinsko Upravljanje

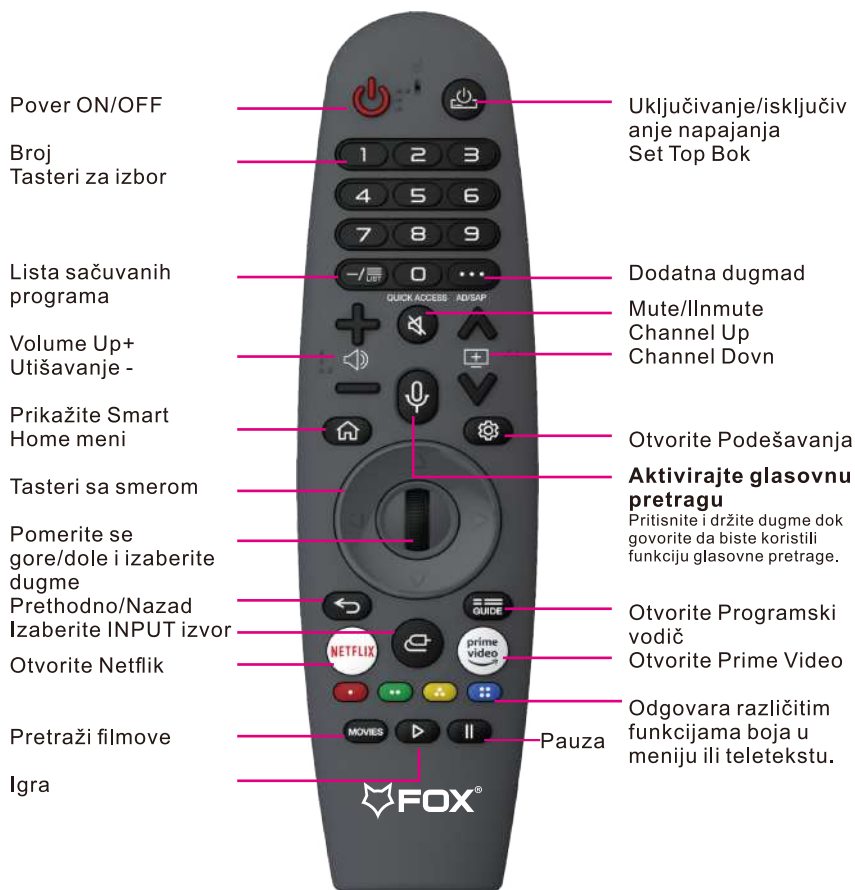


Beleška:


- 1) Slika je samo za referencu.
- 2) Slika, dugmad ili funkcije daljinskog upravljača mogu se razlikovati u zavisnosti od regiona, modela ili izvora.

Prva Instalacija

 Uđite na početnu stranicu nakon prve instalacije.

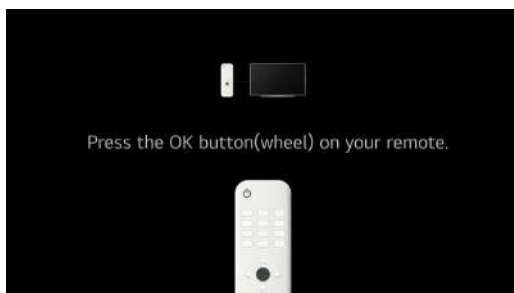

 Pritisnite dugme [◀]/[▶] za metod instalacije.

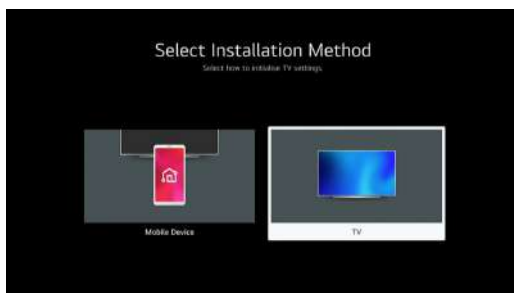


Pritisnite dugme [▼]/[▲] da izaberete Jezik.
Pritisnite dugme [▼]/[▲] da biste izabrali zemlju.




Pritisnite dugme [▼]/[▲] da biste izabrali Internet vezu.




 
Pritisnite dugme [▼]/[▲] da biste izabrali način gledanja televizije.

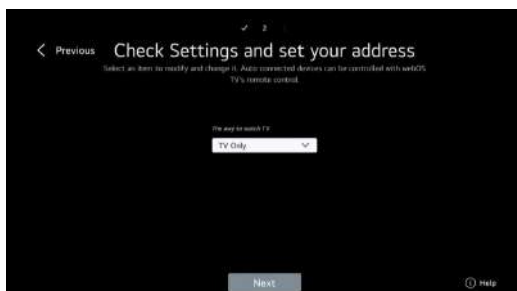

 Press [◀] / [▶] button to select TV Type.



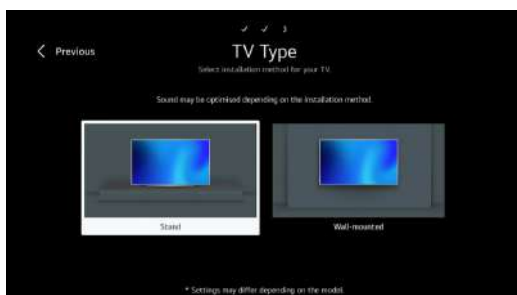


  Pritisnite dugme [▼]/[▲] da biste izabrali podešavanje programa.

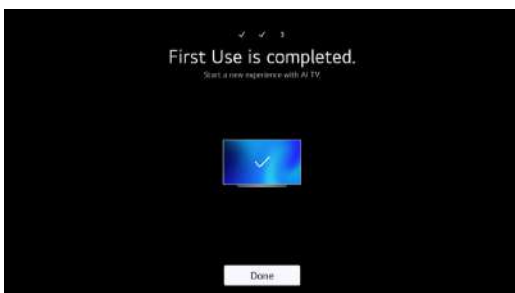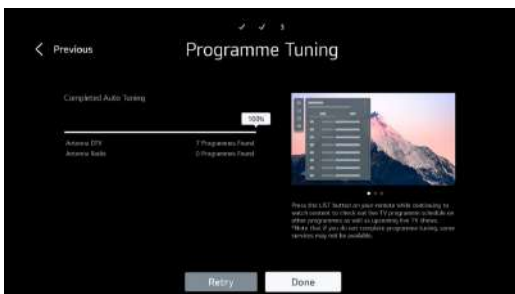

Početna Stranica

   Uđite na početnu stranicu nakon prve instalacije.
Na listi aplikacija izaberite aplikaciju koju želite da unesete.

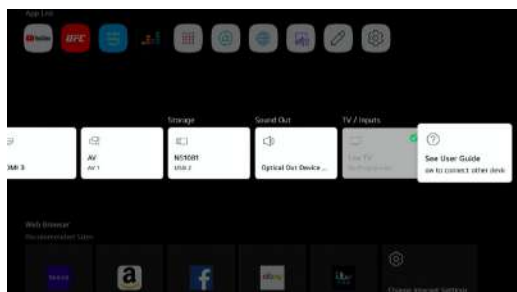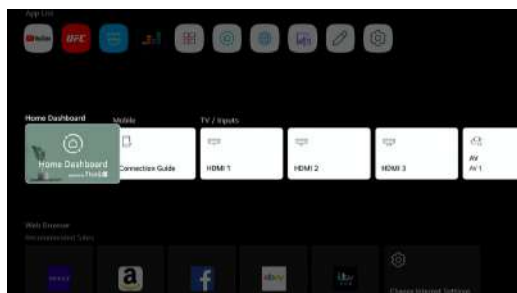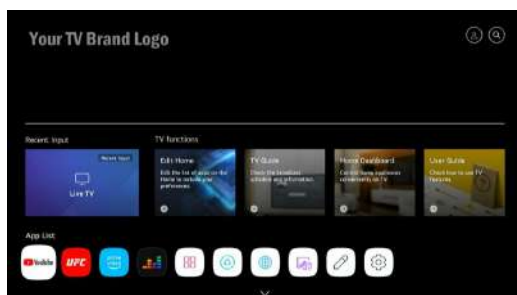

Korišćenje kućne kontrolne table

Možete odabrati ili kontrolisati uređaj (mobilni, eksterni uređaj, Home IoT uređaji, itd.) povezan na TV.

Pritisnite dugme ▼/▲/◀/▶ da biste izabrali.



TV/Input/Mobile

1. Možete da reprodukujete zvuk sa pametnog uređaja povezanog preko Bluetooth-a.

Pogledajte Povezivanje spoljnih uređaja → Reprodukcijski zvuk sa pametnog uređaja preko zvučnika televizora u Uputstvu za korisnike za više informacija o radnji.

2. Možete da proverite i izaberete spoljni uređaj povezan preko spoljnog ulaznog porta ili mreže.

Povežite mobilni uređaj

Možete da proverite i izaberete pametni uređaj povezan sa LG ThinK aplikacijom. Molimo pogledajte Povezivanje spoljnih uređaja —* Povezivanje pametnih uređaja u Uputstvu za korisnike za više informacija o radnji.

USB2

Možete da vidite i izaberete povezani uređaj za skladištenje.

Optički izlaz + TV zvučnik

Prikazuje se trenutno izabrani izlazni zvučnik i možete se kretati do ekrana podešavanja izlaznog zvučnika.

Kućni IOT uređaji

Možete proveriti i kontrolisati uređaj povezan preko Home LoT-a.

Pogledajte Povezivanje spoljnih uređaja → Povezivanje kućnih LoT uređaja u Uputstvo za korisnike za više informacija o akciji.



Možete lako da kontrolišete svoj uređaj unapred podešavanjem željenih operacija.



 
Izađite iz kućne kontrolne table.

TV Setting

Pritisnite dugme **MENU** da biste ušli u TV podešavanje.

Pritisnite dugme ◀ / ▶ da biste istakli željenu ikonu menija, a zatim pritisnite dugme OK da biste izabrali.

Brza Podešavanja

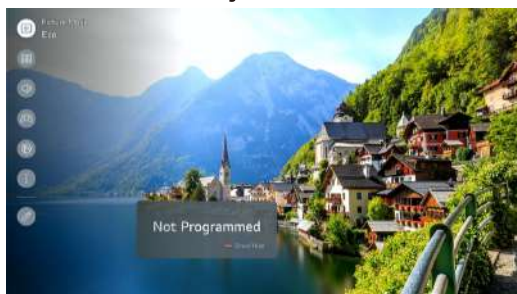

- ① Možete podesiti **Režim slike**.
- ② Možete podesiti **Režim zvuka**.
- ③ Možete odabrati **Sound Out**.
- ④ Možete podesiti **Optimizator igre**.
- ⑤ Pređite na ekran za **Connection**.

-
- ⑥ Možete podesiti više opcija.
- ⑦ Možete dodati/obrisati stavke brzih podešavanja ili promeniti njihov redosled.

Režim slike

Pritisnite dugme ▼/▲ da biste izabrali Živopisan/Standard/Eco/Cinema/Sports.

Živopisan	Izoštava sliku povećanjem kontrasta, osvetljenosti i oštine.
Standard	Podrazumevani režim, da bi korisnici iskusili slike visokog kvaliteta pod normalnim svetlom.
ECO	Funkcija uštede energije menja podešavanja na TV-u da bi smanjila potrošnju energije.
Cinema	Pogodan je za gledanje TV-a ili filmova u mračnoj prostoriji.
Sports	Pogodna slika za sportske igre. Izoštava sliku brzih pokreta kao što su šutiranje ili bacanje lopte.

Pritisnite dugme ◀/▶ za podešavanje.

Režim zvuka

Pritisnite dugme ▼/▲ da izaberete Standard/ Bioskop/ Clear Voice / Sport/ Music.

Standard	Optimizira zvuk za sve vrste sadržaja.
Bioskop	Optimizira zvuk za bioskope.
Clear Voice	Povećava jasnoću glasa.
Sports	Optimizira zvuk za sportske igre.
Music	Pojačajte visok ton i smanjite bas.

Izgovori

Pritisnite dugme ▼/▲ da biste izabrali Interni TV zvučnik/ Bluetooth uređaj/ Mobilni uređaj/ Optički uređaj/ HDMI ARC uređaj/ Žičane slušalice/ Optički izlazni uređaj+ Interni TV zvučnik/ Žičane slušalice + TV zvučnik.

Pritisnite dugme ◀/▶ da izaberete i pritisnite dugme OK za podešavanje.

Optimizator igara

 
Pritisnite dugme ▼/▲ da biste izabrali Optimizator igre.

Mreža

Ako konfigurirate podešavanja za mrežu, možete da koristite različite usluge kao što su onlajn sadržaji i aplikacije.

Žična veza (Ethernet)

Pritisnite dugme ▼/▲ da izaberete Žičanu vezu (Ethernet). Pritisnite dugme OK da biste ušli u podmeni i podešavanje.

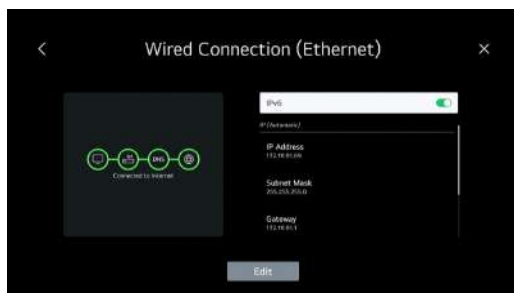

Vi-Fi veza

Pritisnite dugme ▼/▲ da izaberete Vi-Fi vezu. Pritisnite dugme OK da biste ušli u podmeni i podešavanje.



 
Sva podešavanja

Pritisnite dugme ▼/▲ da biste izabrali Slika/Zvuk/Opšte/Podrška.

Slika

Pritisnite dugme ▼/▲ da izaberete Slika. Pritisnite dugme OK da biste ušli u podmeni i podešavanje.

(opcija:Izaberite režim/odnos/napredna podešavanja)

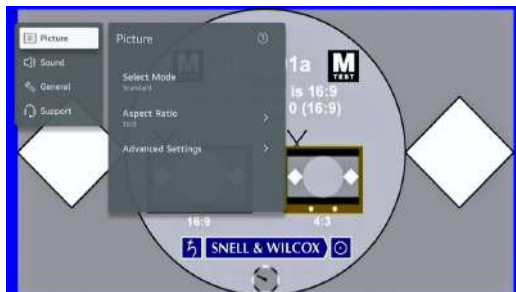

Izaberite Režim

Pritisnite dugme ▼/▲ da biste izabrali Vivid/Standard/Eco/Cinema/Sports.

Aspect Ratio

Možete promeniti veličinu ekrana u skladu sa vrstom sadržaja koji gledate.

Pritisnite dugme ▼/▲ da izaberete Aspect Ratio/ Just Scan.

Izbor korisnika

Pritisnite dugme ▼/▲ da izaberete Aspect Ratio.

(Opcionalno: 16:9/ Original/ Full Vide/ 4:3/ Vertikalni zum/ 4-smerni zum)

Samo skeniraj

Pritisnite dugme ▼/▲ da izaberete Samo skeniranje.

Ako **uključite** ovu funkciju, možete da gledate sadržaj u razmeri koja se nalazi u signalu emitovanja ili izvoru sadržaja. Ako ivica ekrana nije čista, **isključite** ga.

Napredna podešavanja

Pritisnite dugme ▼/▲ da izaberete Osvetljenost/Boja/Jasnoća/Primeni na sve ulaze/Resetuj.

Zvuk

Pritisnite dugme ▼/▲ da izaberete Zvuk. Pritisnite dugme OK da biste ušli u podmeni i podešavanje.

(Opcionalno: Izaberite režim/Izlaz zvuka/Napredna podešavanja)



Režim zvuka

Pritisnite dugme ▼/▲ da izaberete Standard/ Bioskop/ Clear Voice / Sport/ Muzika.

Izgovori

Pritisnite dugme ▼/▲ da izaberete Unutrašnji TV zvučnik/Koristi žičani zvučnik/Koristi bežični zvučnik/Koristi spoljne zvučnike sa TV zvučnikom.

Napredna podešavanja

Balans

Balansirani levi i desni kanali.

Pritisnite dugme OK da biste izabrali Balans. Pritisnite dugme ▼/▲ da biste podesili.

Ekvilajzer

Pritisnite dugme ▼/▲ da biste izabrali Ekvilajzer.

Pritisnite dugme OK da uđete u podmeni, a zatim pritisnite dugme ▼/▲/◀/▶ za podešavanje.

Primeni na sve ulaze

Pritisnite dugme ▼/▲ da biste izabrali Primeni na sve ulaze.

Resetovati

Možete resetovati podešavanja zvučnih efekata.

Pritisnite dugme ▼/▲ da izaberete Reset.

Vrsta instalacije TV-a

Pritisnite dugme ▼/▲ da izaberete tip instalacije televizora.

Pritisnite dugme ▼/▲ da izaberete Stand/ Wall-mounted.

Automatsko podešavanje jačine zvuka

Pritisnite dugme ▼/▲ da izaberete Auto Volume. Pritisnite dugme OK da izaberete On/Off.

DTV audio podešavanje

Pritisnite dugme ▼/▲ za odabir DTV audio podešavanja.

(Opcionalno: MPEG/ Dolbi Digital/ Dolbi Digital Plus/ HE-AAC/Auto)

Podešavanje podudaranja ekrana i zvuka

Pritisnite dugme ▼/▲ da biste izabrali Podešavanje ekrana i zvuka.

(Opcionalno: odlaganje zvučnika/zaobilaznica TV-a)

Audio format HDMI ulaza

Pritisnite dugme ▼/▲ da izaberete HDMI ulazni audio format.

Možete podesiti audio format za svaki HDMI ulaz. Kada glas koji se isporučuje preko HDMI porta nije sinhronizovan, podesite ga na **PCM**.

LG Sound Sinc

Pritisnite dugme ▼/▲ da biste izabrali LG Sound Sinc.

Povežite LG Sound Sinc uređaj na optički digitalni ulaz i podesite Sound Out na Optički.

Postavljanjem ove funkcije na Uključeno, možete podesiti jačinu zvuka povezanog LG Sound Sinc uređaja pomoću daljinskog upravljača za TV.

Digitalni izlaz zvuka

Pritisnite dugme ▼/▲ da izaberete Digital Sound Out.

(Opcionalno: PCM/Auto/Prolaz)

eARC podrška

Pritisnite dugme ▼/▲ da biste izabrali eARC podršku.

General

Označite stavku i pritisnite dugme OK da biste ušli u podmeni.
Pritisnite dugme ▼/▲ da biste izabrali Opšte.



AI Service

 
Možete omogućiti preporučene usluge na osnovu istorije korišćenja.
Pritisnite dugme ▼/▲ da izaberete AI Service. Pritisnite dugme OK da uđete u podmeni.

Optimizator igara

Pritisnite dugme ▼/▲ da biste izabrali Optimizator igre.

Programi

Pritisnite dugme ▼/▲ da biste izabrali Programi.
(Opcionalno: Podešavanje i podešavanja programa/Menadžer programa/Dual Mono/CI Information/Copi Programmes/HbbTV)

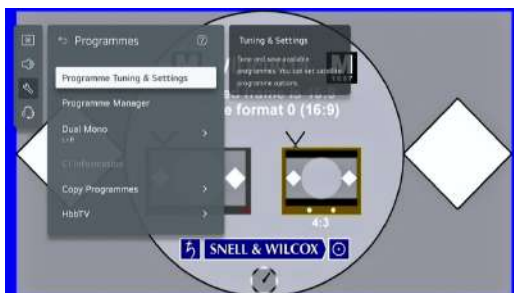

Uređaji

Pritisnite dugme ▼/▲ da izaberete Uređaji.
(Opcionalno: Upravljanje TV-om/Spoljni uređaji/HDMI podešavanja)

Mreža

Pritisnite dugme ▼/▲ da biste izabrali Mreža.

Sistem

Pritisnite dugme ▼/▲ da izaberete Sistem.

Jezik

Možete odabrati jezik menija koji se prikazuje na ekranu i audio jezik digitalnog emitovanja.

Pritisnite dugme ▼/▲ da izaberete Jezik. Pritisnite dugme OK da uđete u podmeni.



 
(OptionakMenu Language / Primarni audio jezik / Sekundarni audio jezik / Jezici tastature / Primarni jezik teleteksta / Sekundarni jezik teleteksta)

Pritisnite dugme ▼/▲ da izaberete meni i podesite jezik.

Lokacija

Možete da promenite podešavanja lokacije na vašem Smart TV-u.

Pritisnite dugme ▼/▲ da biste izabrali lokaciju. Pritisnite dugme OK da biste ušli u podmeni.

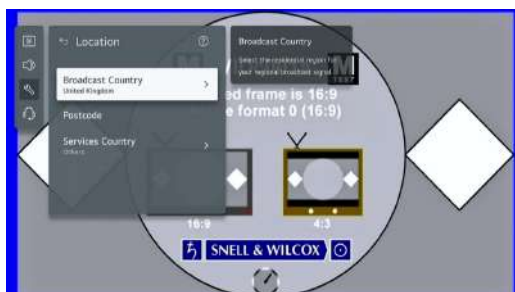

Broadcast Country

Možete podesiti zemlju emitovanja na svom TV-u.

Poštanski broj

Ova funkcija se koristi za podešavanje lokacije emitovanja na TV-u unosom vašeg poštanskog broja.

 
Services Country

Ako ne podesite Automatski, možete ručno da izaberete zemlju.

Vreme i tajmer

Možete proveriti vreme ili konfigurisati povezana podešavanja.

Pritisnite dugme ▼/▲ da izaberete Vreme. Pritisnite dugme OK da uđete u podmeni.

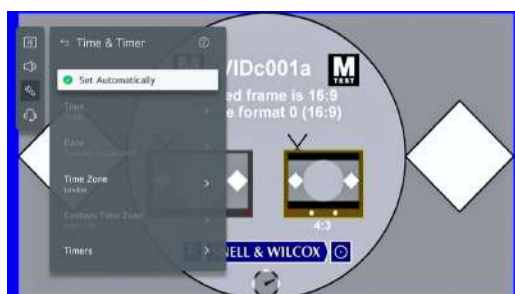

Podesi automatski

TV vreme se automatski podešava na vreme digitalnog emitovanja Informacije koje se šalju sa stanice za emitovanje ili vreme koje se šalje sa servera. Pritisnite dugme ▼/▲ da biste izabrali Automatski podesi. Pritisnite dugme **OK** da biste izabrali Uključeno/Isključeno.

Vreme / Datum / Vremenska zona

Možete ručno da podesite vreme i datum ako je automatski podešeno trenutno vreme netačno.

Pritisnite dugme ▼/▲ da izaberete Podesi vreme / Datum / Vremensku zonu. Pritisnite dugme **OK** da biste izabrali.

Prilagođena vremenska zona

 
Kada izaberete **Custom** u **vremenskoj zoni**, aktivira se meni **Custom Time Zone**. Pritisnite dugme ▼/▲ da izaberete prilagođenu vremensku zonu. Pritisnite dugme **OK** da biste izabrali.

Tajmeri

Pritisnite dugme ▼/▲ da izaberete Tajmeri. Pritisnite dugme **OK** da uđete u podmeni.

Sigurnost

Pritisnite dugme ▼/▲ da izaberete Bezbednost. Pritisnite dugme **OK** da uđete u podmeni.

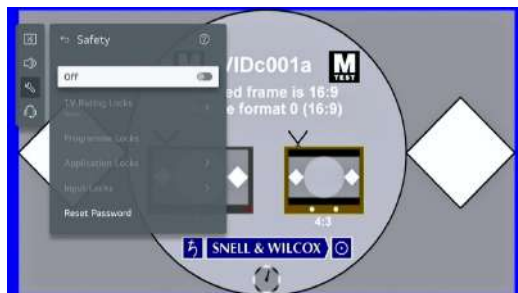


Sve opcije su dostupne samo kada je Bezbednost izabrana Uključeno.

Početna lozinka je postavljena kao „0000“.

Pritisnite dugme ▼/▲ da izaberete opciju, a zatim pritisnite dugme **OK** za podešavanje.


LG nalog

 Pritisnite dugme ▼/▲ da biste izabrali LG nalog. Pritisnite dugme OK da biste ušli u podmeni.

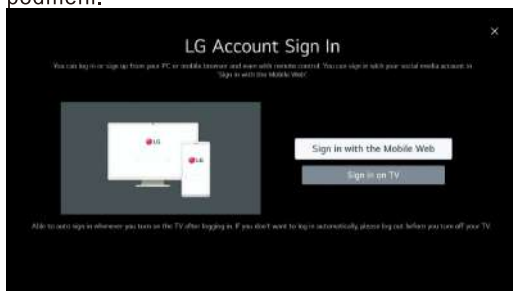

Dodatna podešavanja

 Pritisnite dugme ▼/▲ da izaberete Dodatne postavke. Pritisnite dugme OK da biste ušli u podmeni.

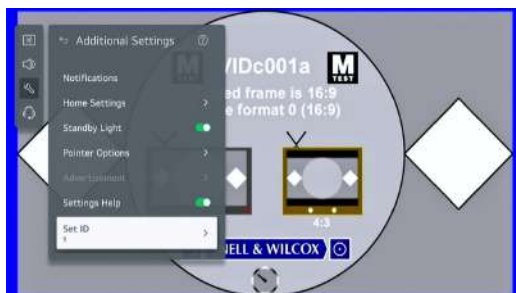


Resetujte na početna podešavanja

Pritisnite dugme ▼/▲ da izaberete Resetovanje na početna podešavanja. Pritisnite dugme OK da biste ušli u podmeni.

Vratite TV na početna podešavanja. Ovo će vratiti sva podešavanja na njihove podrazumevane vrednosti.


Nakon resetovanja, TV će se automatski isključiti i uključiti.

 Napomena: Ako je Bezbednost postavljena na Uključeno, trebalo bi da unesete lozinku za Resetovanje na početna podešavanja.

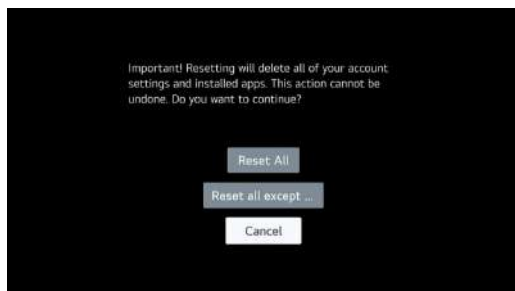

Podrška

 Označite stavku i pritisnite dugme OK da biste ušli u podmeni. Pritisnite dugme ▼/▲ da biste izabrali Podrška.

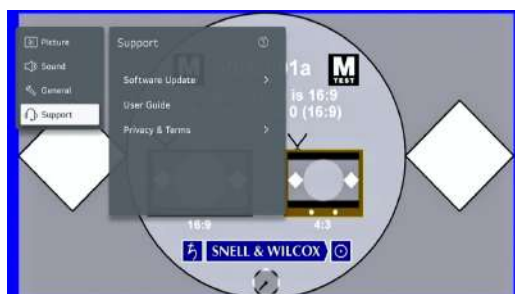

Ažuriranje softvera

Koristi ažuriranje softvera za proveru i dobijanje najnovije verzije. Pritisnite dugme ▼/▲ da izaberete Software Update. Pritisnite dugme OK da uđete u podmeni. Zatim pritisnite dugme ▼/▲ da izaberete i podesite.

Uputstvo za upotrebu

Pritisnite dugme ▼/▲ da izaberete Uputstvo za upotrebu. Pritisnite dugme OK da uđete u podmeni. Zatim pritisnite dugme ▼/▲ da izaberete i podesite.

Privatnost i uslovi

Pritisnite dugme ▼/▲ da izaberete Privatnost i uslovi. Pritisnite dugme OK da uđete u podmeni. Zatim pritisnite dugme ▼/▲ da izaberete i podesite.

Mediji

Povežite USB uređaj za skladištenje (USB HDD, USB stick) na USB port na TV-u da biste uživali u datotekama sadržaja sačuvanim na USB uređaju za skladištenje na vašem TV-u.

Pritisnite dugme ▼/▲ da biste izabrali Fotografija i video/Fotografija/Video/Muzika.


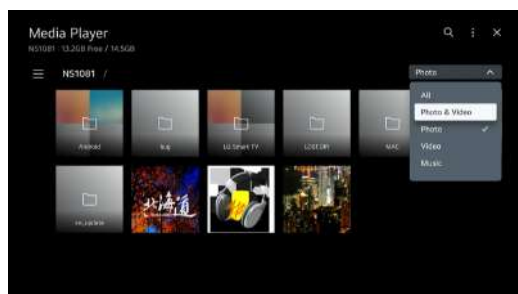 


Foto i video

 Možete da gledate fotografije i video zapise pomoću aplikacije Photo & Video.

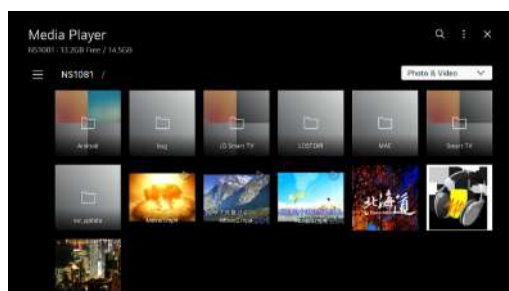

Photo

Odabirom fotografije u aplikaciji Photo & Video pokreće se foto plejer. Možete pogledati svoje sačuvane fotografije.



 
Video

Odabirom fotografije u aplikaciji Photo & Video pokreće se foto plejer. Možete pogledati svoje sačuvane video zapise.



Muzika

Muziku možete jednostavno puštati tako što ćete izabrati muzičke datoteke sačuvane u aplikaciji Muzika ili izabrati ikonu muzičkog plejera tokom reprodukcije sadržaja u aplikacijama kao što su Fotografija i video.

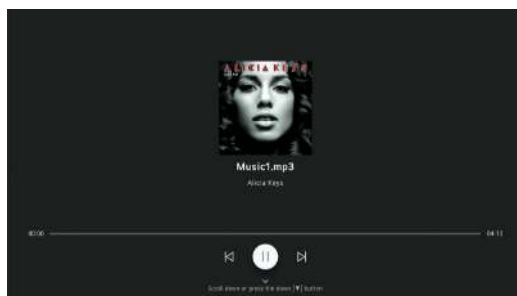

LG ThinQ

Možete da proverite i izaberete pametni uređaj povezan sa LG ThinQ aplikacijom i da se prijavite/odjavite na i sa LG ThinQ naloga koji ste kreirali na mobilnom telefonu.

Proverite internet vezu svog telefona i pokušajte ponovo.



Retry

Kad god bilo gde
Kontrolišite svoje kućne aparate daljinski uz LG ThinQ.



Skip

Next

ThinQ sve to radi čak i dok ste napolju

Uz ThinQ, možete da živite zgodan život sa svim automatskim



Skip

Next

Prave informacije u pravo vreme.

ThinQ vas obaveštava o trenutnom stanju vaših uređaja. Obaveštava vas o trenutnim obaveštenjima o događajima kao što je kraj ciklusa pranja.



Skip

Next

Dobijte izveštaj o statusu vaših uređaja.

Pametno detaljno procenite stanje vašeg proizvoda. Takođe možete dobiti vodič za rešavanje problema prilagođen rezultatima dijagnoze.



Sign In

**Welcome to
LG ThinQ.**



Sign in with LG

[Another account >](#)

Otkrijte kako povezani život sa ThinQ-om čini vaš život lakšim. Povežite mašinu za pranje veša, klima uređaj, TV i druge uređaje sa ThinQ aplikacijom. Sklonite se od užurbane rutine i uživajte u opušajućem kućnom životu uz pametni ThinQ.

■ Dobijajte trenutna obaveštenja

ThinQ aplikacija će vas obavještavati o svim obavještenjima koja su vam potrebna kako vaš veš ne bi mirisao na pljesniv ili da se vaša pica u rerni ne bi prekuvala. ThinQ će periodično sam dijagnostikovati stanje vaših proizvoda.

■ Kontrolišite svoj dom sa bilo kog mesta

Možete proveriti unutrašnju temperaturu u vašoj kući i uključiti klima uređaj čak i dok ste vani. Takođe možete daljinski pokrenuti mašinu za pranje veša i nastaviti sa procesom sušenja odmah po povratku kući.

■ Daljinski upravljač za TV u mom pametnom telefonu

Promenite TV kanale i prilagodite zvuk pomoću aplikacije ThinQ. Možete uživati u mobilnom sadržaju u galeriji pametnog telefona na TV ekranu. Takođe možete da koristite funkciju Magic Remote sa svojom aplikacijom.

※ Dostupnost proizvoda i usluga može da varira u zavisnosti od modela koje posedujete ili regiona/zemlje u kojoj živite.

■ ThinQ će automatski pristupiti trenutnom stanju vaših proizvoda

Pametno detaljno procenite stanje vaših proizvoda. Smart Diagnosis će uhvatiti probleme i pomoći vam da ih rešite.

Sledeće dozvole pristupa su neophodne za aplikaciju ThinQ.

Odlazni pozivi/Podešavanja poziva

Da biste kontaktirali LG servisni centar

Kontakti

Da biste verifikovali informacije o korisniku prilikom prijavljivanja u aplikaciju

Lokacija

Da biste dobili informacije o uređaju koji povezuje Vi-Fi kada dodajete uređaje

Da biste podesili i sačuvali lokaciju kuće u Upravljač domom

Da biste tražili informacije o vremenu na trenutnoj lokaciji

Kamera

Da napravite sliku profila

Da skenirate KR kodove i delite domove ili naloge

Da snimate fotografije i priložite ih u odeljak za podršku 1:1

Da uslikate račun o kupovini i sačuvate ga prilikom registracije dodatnih informacija o proizvodu

Fotografije, mediji i datoteke

Da biste koristili kapacitet skladištenja vašeg pametnog telefona kada preuzimate informacije o proizvodu

Da snimate fotografije i priložite ih u odeljak za podršku 1:1

Da uslikate račun o kupovini i sačuvate ga prilikom registracije dodatnih informacija o proizvodu

Mikrofon

Da biste proverili status proizvoda preko Smart Diagnosis

Lokalna mreža

Da biste dobili informacije o uređaju koji povezuje Vi-Fi kada dodajete uređaje

Bluetooth

Da biste koristili funkciju Scan Nearby

HomeKit

Da biste dodali proizvode zasnovane na IoT-u

Praćenje

Da biste pružili personalizovane informacije

 
Daljinski upravljač

Uključite i proverite status proizvoda kad god i gde god želite




Status Alerts

Dobijajte obaveštenja o izveštajima o statusu proizvoda čim se dogode

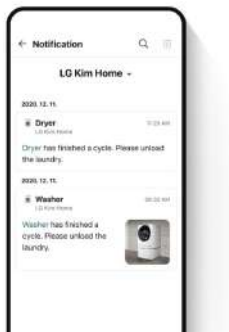

Pametna dijagnoza

 Pametno detaljno procenite stanje vašeg proizvoda

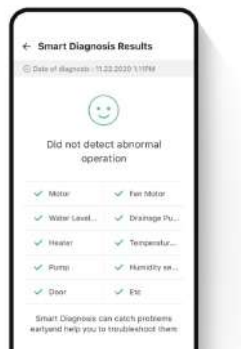


TV daljinski

ThinQ aplikacija je ponovo rođena kao daljinski upravljač za TV



Rad u režimima

 Prava funkcija radi u režimu prave situacije

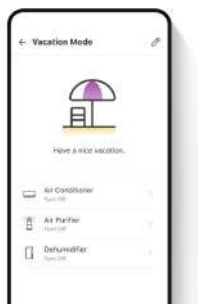

Pomoć

Nema struje	• Proverite da li je kabl za naizmeničnu struju na TV-u u plusu ili ne. Ako i dalje nema napajanja, izvucite utikač i ponovo ga uključite nakon 60 sekundi. I ponovo otvorite TV
Prijem signala nije ispravan	• Za izazivanje duple slike ili fantoma ako postoji visoka zgrada ili visokoplaninski okrugli TV. Možete podesiti efekat slike ručnim radom: pogledajte uputstvo za regulaciju nonija ili promenite smer spoljne antene. • Ako koristite unutrašnju antenu, pod određenim okolnostima, prijem će biti teži. Tako da možete promeniti smer antene da biste podesili efekat slike. Ako ne možete da promenite ni efekat prijema slike, morate koristiti spoljnu antenu.
Bez slike	• Proverite da li je antena na zadnjoj strani televizora pravilno povezana ili ne. • Pokušajte da izaberete druge kanale i proverite da li je problem u samom televizoru ili ne.
ali. Video je u redu bez zvuka	• Povećajte jačinu zvuka. • Proverite da li je TV u režimu isključenja zvuka ili ne i pritisnite dugme za isključivanje zvuka da bi se zvuk nastavio.
ali, zvuk je u redu greška u boji ili nema slike	• Povećajte kontrast i osvetljenost.
Statična slika snega i šum	• Proverite da li je antena na zadnjoj strani televizora povezana ili ne.
Nivo izlomljena linija	• Usisivač, kao što je fen za kosu, Moždna ometa električni uređaj, isključite ove vrste električnih uređaja, čistača i tako dalje.
Slika ili-Dual "simulakrum" Televizor ne reaguje sa daljinskim	• Moždna lokacija za antenu nije dobra. Upotrebom antene sa visokim snopom možete poboljšati kvalitet slike na ekranu. • Upravljajte daljinskim upravljačem direktno na senzor daljinskog upravljača na TV-u. Ako TV i dalje nema odgovora, proverite da li je plastična kesa na daljinskom upravljaču ili ne. I proverite da li je lokacija za bateriju ispravna. Zamenite novu bateriju. • TV će se prebaciti u STAND BI ako daljinski upravljač ne odgovori u roku od nekoliko minuta.
NEMA video ulaza (PC režim)	• Proverite da li je kabl ekrana povezan na VGA ispravan. • Proverite da li postoji krivina na kablu ekrana.
Vertikalno treptanje (PC režim)	• Uđite u glavni meni Koristite regulator sata za šum video ekrana da biste <u>eliminirali vertikalnu liniju</u>.
Horizontalno kopiranje (PC režim)	• Podesite horizontalni zvuk zvuka u glavnom meniju da biste obrisali horizontalnu liniju ripanje.
Ekran je previše svetao ili previše taman (PC režim)	• Podesite odnos kontrasta ili osvetljenost u glavnom meniju.
PC funkcija nema odgovora	• Proverite podešavanja računara u stanju kompatibilne rezolucije ekrana
Ripping linija u RCA povezivanju	• Molimo koristite kabl za povezivanje dobrog kvaliteta.
Problem i dalje postoji	• Isključite kabl za napajanje i sačekajte 30 sekundi, a zatim povežite Ako postoji neki problem sa našim televizorom, nemojte ga sami popravljati, obratite se korisničkom servisu.

Biće kompletna slika i osvetljenost će se smanjiti ako je TV u režimu Note. Zato vas molimo da ne držite televizor u istom stanju, statičnu sliku predugu. Meni ili ista slika koja ima veliku razliku u osvetljenosti i odnosu kontrasta predugu.

Napomena: TV panel je napravljen pomoću tehnologije visoke preciznosti koja vam daje fine detalje slike u živopisnim bojama. Povremeno se na ekranu može pojaviti nekoliko neaktivnih piksela kao fiksna tačka crvene, zelene, plave ili bele. Imajte na umu da ovo ne utiče na performanse proizvoda.



Nadamo se da ste pažljivo pročitali uputstva i da ćete ih se pridržavati.
Za više informacija o FOX uređajima posetite našu internet stranicu:

www.foxelectronics.rs

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda FOX, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/fox-televizor-43wos635f-akcija-cena/>