

Uputstvo za upotrebu (EN)

SAGE kuvalo za vodu SKE825BSS

Sage[®]



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/sage-kuvalo-za-vodu-ske825bss-akcija-cena/>

the Smart Kettle™

SKE825



EN USER GUIDE

Sage®

- 2 Sage® Recommends Safety First
- 5 Know your Sage® product
- 6 Features of your Sage® product
- 7 Operating your Sage® product
- 8 Care & Cleaning
- 9 Guarantee

SAGE® RECOMMENDS SAFETY FIRST

At Sage® we are very safety conscious. We design and manufacture appliances with your safety foremost in mind. We also ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

IMPORTANT SAFEGUARDS

**READ ALL INSTRUCTIONS
BEFORE USE AND SAVE
FOR FUTURE REFERENCE**

- A downloadable version of this document is also available at sageappliances.com
- Before using for the first time please ensure that your electricity supply is the same as shown on the rating label on the underside of the appliance. If you have any concerns please contact your local electricity company.
- Remove and safely discard any packaging materials before first use.
- To eliminate a choking hazard for young children, safely discard the protective cover fitted to the power plug.
- This kettle has been designed specifically for the purpose of boiling drinking quality water only. Under no circumstances should this product be used to boil any other liquids or foodstuffs.
- Position the appliance on a stable, heat resistant, level, dry surface away from the edge and do not operate on or near a heat source such as a hot plate, oven or gas hob.
- Do not operate the kettle on a sink drain board.
- Do not place the kettle on or near a hot gas burner, electric element or where it could touch a heated oven.
- Position the appliance at least 20cm from walls or heat / steam sensitive materials and provide adequate space above and on all sides for air circulation.
- Always ensure the kettle is properly assembled before use. Follow the instructions provided in this book.
- The kettle must be used only with the power base supplied.

SAGE® RECOMMENDS SAFETY FIRST

- This kettle is not intended to be operated by means of an external timer or separate remote control system.
- Do not touch hot surfaces. Use the handle for lifting and carrying the kettle.
- Do not place anything on top of the lid.
- Always ensure the appliance is turned OFF, unplugged at the power outlet and has been allowed to cool before cleaning, attempting to move or storing.
- Use caution when pouring water from the kettle, as boiling water and steam will scald. Do not pour water too quickly.
- Do not remove the kettle from the power base during operation. Ensure the kettle is switched to 'off' position after the water has boiled before removing the kettle from the power base.
- Do not move the kettle while it is switched on.
- Do not open the lid during operation.
- Do not overfill the kettle past the maximum water level mark. If the kettle is overfilled, boiling water may be ejected.
- Keep the kettle clean. Follow the cleaning instructions provided in this book.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before operating.
- Do not let power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- Children should not play with the appliance.
- The appliance can be used by children aged 8 or older and persons with reduced physical, sensory or mental capabilities or a lack of experience and knowledge, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Misuse may cause injury.
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- It is recommended to regularly inspect the appliance. To avoid a hazard do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Sage Service Centre for examination and/or repair.

- Any maintenance other than cleaning should be performed at an authorised Sage® service centre.
- This appliance is for household use only. Do not use the appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- The appliance and its cord should be kept out of reach of children aged 8 years and younger.
- Cleaning of the appliance should not be carried out by children unless they are 8 years or older and supervised.
- For safety reasons it is recommended you plug your Sage® appliance directly into

its own electrical outlet on a dedicated circuit separate from other appliances. If the electrical circuit is overloaded with other appliances, your appliance may not function properly. Using in conjunction with a power strip or extension cord is not recommended.



WARNING

Do not operate the kettle on an inclined surface. Do not move the kettle while it is switched on.



The symbol shown indicates that this appliance should not be disposed of in normal household waste. It should be taken to a local authority waste collection centre designated for this purpose or to a dealer providing this service. For more information, please contact your local council office.



To protect against electric shock, do not immerse the kettle base, power base, power cord or power plug in water or allow moisture to come in contact with these parts. Avoid spilling water onto the power base's connector.

**FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS**

KNOW YOUR SAGE® PRODUCT



- A. Removable scale filter
- B. Premium quality brushed stainless steel
- C. BPA Free* dual water windows
- D. 1.7 litre / 7 cup capacity
- E. 5 temperature settings
- F. BPA-Free* Soft opening lid with viewing window
- G. Stainless steel handle with lid release button

- H. START / CANCEL button
- I. 20 minute Keep Warm function
- J. Multi-directional cord-free power base with power cord storage.

NOT SHOWN

Fast boil 2400W

Safety auto cut off

Boil dry protection

*Sage® makes its BPA free claim for this product based on independent laboratory testing performed for all the food contact plastic materials of the product per EU Commission regulation No. 10/2011.



Rating Information

230-240 V ~ 50 Hz 2200-2400 W

FEATURES OF YOUR SAGE® PRODUCT

VARIABLE TEMPERATURE CONTROL

GREEN TEA	WHITE TEA	OOLONG TEA	COFFEE	BLACK TEA
80°C	85°C	90°C	95°C	100°C

NOTE

This product is not calibrated for commercial or scientific use. Temperatures may vary +/-3 °C degrees, being within range for optimal brewing for each type of tea or coffee.

KEEP WARM FUNCTION

The Smart Kettle™ offers a convenient KEEP WARM function that can be used before, during or on completion of the water heating cycle. If the 100° button is selected when using the KEEP WARM function, the boiled water will remain at approximately 95° Celsius for 20 minutes.



To activate the KEEP WARM function, first press the desired water temperature button from the five options on the control panel. Then press the KEEP WARM button, followed by the START / CANCEL button to commence heating the water. Alternatively, the KEEP WARM button can be activated at any time during the heating cycle and/or within one minute after the heating cycle has completed.

If the kettle is removed from the power base during the KEEP WARM function the kettle will automatically switch off.

OPERATING YOUR SAGE® PRODUCT

BEFORE FIRST USE

Remove and safely discard any packaging material or promotional labels attached to your kettle. It is recommended that before first use to fill the kettle to the maximum level, bring to the boil by selecting the BOIL 100° button, then discard the water.

OPERATION OF YOUR KETTLE

1. Fill with the desired amount of water.

NOTE

Always fill the kettle between the minimum (500ml) and maximum (1700ml) marks on the water window.

2. Ensure the lid is closed and locked firmly into place. Position the kettle securely onto the power base. Insert the power plug into a 230/240 power outlet and switch on.

NOTE

If the START / CANCEL button is pressed (before selecting a temperature button), the START / CANCEL button surround will illuminate in red and the 100° button surround will illuminate and the kettle will start heating.

3. Select the desired temperature. The selected button and the START / CANCEL button surround will illuminate in white.
4. Press the START / CANCEL button. Do not remove the kettle from the power base during operation. Ensure the kettle has switched off after the water has boiled or the selected temperature has been reached before removing the kettle from the power base. If the kettle is removed from the power base during the KEEP WARM function the kettle will automatically switch off.
5. When the kettle has heated the water to the selected temperature, 3 beeps will sound.
6. If the KEEP WARM function has been selected, the KEEP WARM button surround will remain illuminated in red, the selected temperature button surround will remain illuminated in white, and the kettle will maintain the desired setting for 20 minutes.

SAFETY BOIL DRY PROTECTION

The kettle is fitted with a safety device, which protects against overheating should the appliance be operated with insufficient water. If this occurs the kettle will stop heating. Switch Off at the power point and allow kettle to cool before refilling. The safety device will automatically reset when the kettle has cooled down.

Always switch off at the power outlet and unplug the appliance from the power outlet before cleaning.

REMOVABLE FILTER

The Smart Kettle™ features a removable mesh filter to remove scale deposits for cleaner water. To clean the scale deposits from the filter, remove the filter by opening the lid and sliding the filter up and out of the kettle.

The filter can be cleaned by placing under running hot water and rubbing with a cleaning cloth or brush. To replace the filter, simply slide the filter down into the slot behind the spout of the kettle and push back into position.

NOTE

The filter could become damaged with time, so please check regularly and replace if found damaged.

CARE & CLEANING

DESCALING

Mineral deposits in tap water may cause the kettle interior and water window to discolour over time.

We recommend the use of Sage® “the Descaler” to remove scale build up and stains.

To order, visit www.sageappliances.com



WARNING

Causes skin irritation. Wash hands thoroughly after handling. Wear protective gloves/protective clothing/eye protection/face protection.

DIRECTIONS FOR USE

1. Empty 1 sachet (25g) into 1L of warm water. Stir to dissolve.
2. Pour into kettle.
3. Leave stand for 5 minutes.
4. After 5 minutes, discard the solution.
5. Rinse the kettle twice with fresh clean water.

TO CLEAN THE EXTERIOR

The outside of the kettle should be wiped with a damp cloth then polished with a soft, dry cloth.

NOTE

Do not use chemicals, steel wool, or abrasive cleaners to clean the inside or outside of the kettle.

STORAGE

Ensure the kettle is switched off, clean and dry before storing. Ensure that the lid is closed and locked securely into place. Wrap the power cord around the power cord storage under the power base. Stand the kettle upright on the power base. Do not store anything on top.

GUARANTEE

2 YEAR LIMITED GUARANTEE

Sage Appliances guarantees this product for domestic use in specified territories for 2 years from the date of purchase against defects caused by faulty workmanship and materials. During this guarantee period Sage Appliances will repair, replace, or refund any defective product (at the sole discretion of Sage Appliances).

All legal warranty rights under applicable national legislation will be respected and will not be impaired by our guarantee. For full terms and conditions on the guarantee, as well as instructions on how to make a claim, please visit www.sageappliances.com.

NOTE

NOTE

GBR

BRG Appliances Limited
Unit 3.2, Power Road Studios,
114 Power Road, London, W4 5PY
Freephone (UK Landline): 0808 178 1650
Mobile Calls (National Rate): 0333 0142 970

DEU

AUT

Sage Appliances GmbH
Campus Fichtenhain 48, 47807 Krefeld,
Deutschland
Deutschland: 0800 505 3104
Österreich: 0800 80 2551

FRA

Sage Appliances France SAS
Siège social: 66 avenue des Champs
Élysées – 75008 Paris
879 449 866 RCS Paris
France: 0800 903 235

IRE

Ireland
1800 932 369

NLD

Netherlands
0800 020 1741

ITA

Italy
800 909 773

ESP

Spain
900 838 534

PTR

Portugal
0800 180 243

POL

Poland
00800 121 8713

BEL

Belgium
0800 54 155

CHE

Switzerland
0800 009 933

LUX

Luxembourg
0800 880 72

DNK

Denmark
080 820 827

SWE

Sweden
0200 123 797

FIN

Finland
0800 412 143

NOR

Norway
80 024 976



www.sageappliances.com

Registered in England & Wales No. 8223512
Registered in Germany No. HRB 81309 (AG Düsseldorf)
Registered in France No. 879 449 866 RCS

EN Due to continued product improvement, the products illustrated or photographed in this document may vary slightly from the actual product.

DE Aufgrund unserer kontinuierlichen Produktverbesserungen kann die hier gezeigte Abbildung geringfügig vom tatsächlichen Produkt abweichen.

FR En raison de leur amélioration continue, les produits représentés ou photographiés dans le présent document peuvent différer légèrement du produit réel.

NL Vanwege voortdurende productverbeteringen, kunnen de afgebeelde producten in dit document licht afwijken van het eigenlijke product.

IT A causa del continuo miglioramento dei prodotti, il prodotto descritto o illustrato in questo documento può variare leggermente rispetto al prodotto reale.

ES Perfectionamos nuestros productos continuamente, por lo que el artículo podría diferir ligeramente de la ilustración o la fotografía en este documento.

PT Devido à melhoria contínua dos produtos, os produtos ilustrados ou fotografados neste documento podem variar ligeiramente do produto real.

PL Ze względu na stale przeprowadzane ulepszenia, produkty przedstawione na ilustracjach lub zdjęciach w tym dokumencie mogą różnić się od używanego produktu.

DA På grund af løbende produktudvikling kan de illustrerede eller fotograferede produkter i dette dokument variere en smule fra det faktiske produkt.

SV På grund av kontinuerlig produktförbättring kan produkterna som visas i illustrationerna och fotografierna i detta dokument skilja sig något från den faktiska produkten.

FI Jatkuvan tuotekehittelyn seurauksena kuvituksen tuotteet eivät välttämättä ole täysin samanlaisia kuin varsinaiset tuote.

NO På grunn av kontinuerlig produktutvikling kan produktene som er vist eller avfotografert i dette dokumentet, variere noe fra det faktiske produktet.

Copyright BRG Appliances 2022

SKE825 UK UG1 C22

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Sage, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/sage-kuvalo-za-vodu-ske825bss-akcija-cena/>