

Uputstvo za upotrebu (EN)

DELL laptop XPS 9530 (NOT22385)



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/dell-laptop-xps-9530-not22385-akcija-cena/>

XPS 15 9530

Setup and Specifications



Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Chapter 1: Set up your XPS 15 9530.....	4
Chapter 2: Views of XPS 15 9530.....	6
Right.....	6
Left.....	6
Top.....	7
Display.....	9
Bottom.....	10
Chapter 3: Specifications of XPS 15 9530.....	11
Dimensions and weight.....	11
Processor.....	11
Chipset.....	12
Operating system.....	12
Memory.....	12
External ports.....	13
Internal slots.....	13
Wireless module.....	13
Audio.....	14
Storage.....	14
Media-card reader.....	15
Keyboard.....	15
Camera.....	15
Touchpad.....	16
Power adapter.....	16
Battery.....	17
Display.....	18
Fingerprint reader.....	19
GPU—Discrete.....	19
Operating and storage environment.....	19
Chapter 4: Dell low blue light display.....	20
Chapter 5: Keyboard shortcuts of XPS 15 9530.....	21
Chapter 6: Getting help and contacting Dell.....	23

Set up your XPS 15 9530

NOTE: The images in this document may differ from your computer depending on the configuration you ordered.

1. Connect the power adapter and press the power button.

NOTE: You can charge your computer by connecting the power adapter to one of the Thunderbolt 4 (USB4) Type-C ports or to the USB 3.2 Gen 2 Type-C port located on your computer.



NOTE: The battery may go into power-saving mode during shipment to conserve charge on the battery. Ensure that the power adapter is connected to your computer when it is turned on for the first time.

2. Follow the on-screen instructions to complete the Windows setup.
3. Locate and use Dell apps from the Windows Start menu—Recommended.

Table 1. Locate Dell apps


Resources	Description
	My Dell Centralized location for key Dell applications, help articles, and other important information about your computer. It also notifies you about the warranty status, recommended accessories, and software updates if available.
	SupportAssist SupportAssist proactively and predictively identifies hardware and software issues on your computer and automates the engagement process with Dell Technical support. It addresses performance and stabilization issues, prevents security threats, monitors, and detects hardware failures. For more information, see <i>SupportAssist for Home PCs User's Guide</i> at www.dell.com/serviceabilitytools . Click SupportAssist and then, click SupportAssist for Home PCs .

Table 1. Locate Dell apps (continued)

Resources	Description
	 NOTE: In SupportAssist, click the warranty expiry date to renew or upgrade your warranty.
	Dell Update Updates your computer with critical fixes and latest device drivers as they become available. For more information on using Dell Update, search in the Knowledge Base Resource at www.dell.com/support .
	Dell Digital Delivery Download software applications, which are purchased but not preinstalled on your computer. For more information on using Dell Digital Delivery, search in the Knowledge Base Resource at www.dell.com/support .

Views of XPS 15 9530

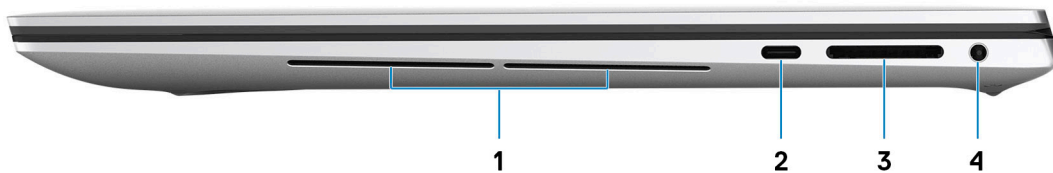Right



1. Right woofer

Enhances low-frequency audio output.

2. USB 3.2 Gen 2 (Type-C) port with DisplayPort and Power Delivery

Connect peripherals such as external storage devices, printers, and external displays. Provides data transfer rate of up to 10 Gbps for USB 3.2 Gen 2x1 port.

Supports DisplayPort and also enables you to connect an external display using a display adapter.

NOTE: A USB Type-C to DisplayPort adapter (sold separately) is required to connect a DisplayPort device.

Supports Power Delivery that enables two-way power supply between devices. Provides up to 5 V/1.50 A power output

3. SD-card slot

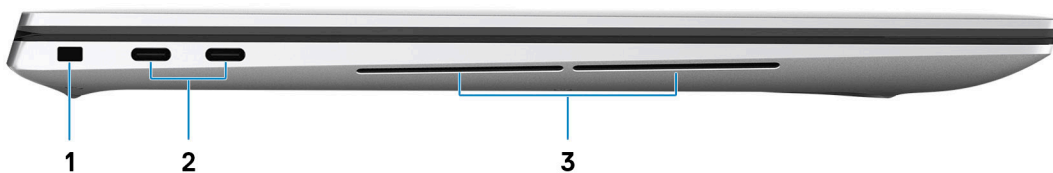
Reads from and writes to the SD card. The computer supports the following card types:

- Secure Digital (SD)
- Secure Digital High Capacity (SDHC)
- Secure Digital Extended Capacity (SDXC)

4. Universal audio jack

Connect headphones or a headset (headphone and microphone combo).

Left



1. Security-cable slot (wedge-shaped)

Connect a security cable to prevent unauthorized movement of your computer.

2. Thunderbolt 4 (USB4) Type-C port with Power Delivery (2)

Supports USB4 Gen 3x2, DisplayPort 1.4a and Thunderbolt 4. Enables you to connect to an external display using a display adapter. Provides data transfer rates up to 40 Gbps for USB4 Gen 3x2 Thunderbolt 4. Supports Power Delivery that enables two-way power supply between devices. Provides up to 5 V/3 A power output that enables faster charging.

NOTE: A USB Type-C to DisplayPort adapter (sold separately) is required to connect a DisplayPort device.

NOTE: A 40 Gbps-certified cable is required to achieve the maximum performance of 40 Gbps.

NOTE: Non-Thunderbolt USB-C devices connected to this port can only transfer data at speeds up to USB 3.2 Gen 2x1 (10 Gbps).

NOTE: Thunderbolt 4 supports two 4K displays or one 8K display.

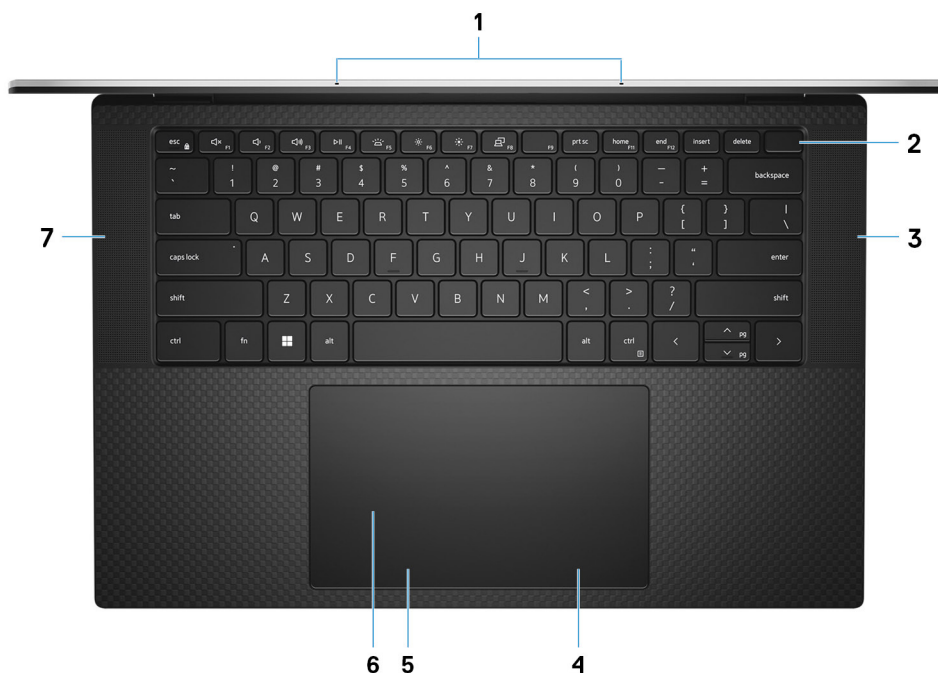
NOTE: USB4 is backward compatible with USB 3.2, USB 2.0, and Thunderbolt 3.

NOTE: You can connect a Dell docking station to the Thunderbolt 4 ports. For more information, see the knowledge base article [000124295](https://www.dell.com/support/article/000124295) at www.dell.com/support.

3. Left woofer

Enhances low-frequency audio output.

Top



1. Microphones (2)

Provide digital sound input for audio recording, voice calls, and so on.

2. Power button with fingerprint reader

Press to turn on the computer if it is turned off, in sleep state, or in hibernate state.

When the computer is turned on, press the power button to put the computer into sleep state; press and hold the power button for 10 seconds to force shut-down the computer.

If the power button has a fingerprint reader, place your finger on the power button steadily to log in.

NOTE: You can customize the power-button behavior in Windows.



NOTE: In Windows, Windows Hello supports a defined number of fingerprints per account. For more information about configuring your fingerprint reader with Windows Hello, search in the Knowledge Base Resource at www.dell.com/support.

3. Right speaker

Provides audio output.

4. Right-click area

Press to right-click.

5. Left-click area

Press to left-click.

6. Touchpad

Move your finger on the touchpad to move the mouse pointer. Tap to left-click and two fingers tap to right-click.

7. Left speaker

Provides audio output.

Display



1. Infrared emitter

Emits infrared light, which enables the infrared camera to sense and track motion.

2. Ambient-light sensor

The sensor detects the ambient light and automatically adjusts the keyboard backlight and display brightness.

3. RGB-infrared camera

This combined camera supports both infrared Windows Hello facial recognition and standard RGB imaging for photos and videos.

4. Camera-status light

Turns on when the camera is in use.

5. Infrared emitter

Emits infrared light, which enables the infrared camera to sense and track motion.

6. Battery-status light

Indicates the battery-charge status.

Solid white—Power adapter is connected and the battery has more than 5% charge.

Amber—Computer is running on battery and the battery has less than 5% charge.

Off—Power adapter is disconnected or the battery is fully charged.

Bottom



1. Service Tag label

The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.

Specifications of XPS 15 9530

Dimensions and weight

The following table lists the height, width, depth, and weight of your XPS 15 9530.

Table 2. Dimensions and weight

Description	Values
Height:	
Front height	18 mm (0.71 in.)
Rear height	11.65 mm (0.46 in.)
Width	344.72 mm (13.57 in.)
Depth	230.14 mm (9.06 in.)
Weight  NOTE: The weight of your computer depends on the configuration ordered and manufacturing variability.	1.92 kg (4.22 lb) for non-touchscreen display 1.96 kg (4.31 lb) for OLED touchscreen display

Processor

The following table lists the details of the processors supported by your XPS 15 9530.

Table 3. Processor

Description	Option one	Option two	Option three
Processor type	13 th Generation Intel Core i5-13500H	13 th Generation Intel Core i7-13700H	13 th Generation Intel Core i9-13900H
Processor wattage	45 W	45 W	45 W
Processor core count	12	14	14
Processor thread count	16	20	20
Processor speed	Up to 4.70 GHz	Up to 5 GHz	Up to 5.40 GHz
Processor cache	18 MB	24 MB	24 MB
Discrete graphics	- Intel Arc A370M Graphics - NVIDIA GeForce RTX 4050, 6 GB GDDR6	- Intel Arc A370M Graphics - NVIDIA GeForce RTX 4050, 6 GB GDDR6 - NVIDIA GeForce RTX 4060, 8 GB GDDR6 - NVIDIA GeForce RTX 4070, 8 GB GDDR6	- NVIDIA GeForce RTX 4060, 8 GB GDDR6 - NVIDIA GeForce RTX 4070, 8 GB GDDR6

Chipset

The following table lists the details of the chipset supported by your XPS 15 9530.

Table 4. Chipset

Description	Values
Chipset	Intel 600 Series
Processor	13 th Generation Intel Core i5/i7/i9
DRAM bus width	64-bit
Flash EPROM	64 MB
PCIe bus	Up to PCIe Gen 4

Operating system

Your XPS 15 9530 supports the following operating systems:

- Windows 11 Home, 64-bit
- Windows 11 Pro, 64-bit

Memory

The following table lists the memory specifications of your XPS 15 9530.

Table 5. Memory specifications

Description	Values
Memory slots	Two-SODIMM slots
Memory type	DDR5
Memory speed	4800 MT/s
Maximum memory configuration	64 GB
Minimum memory configuration	16 GB
Memory size per slot	8 GB, 16 GB, 32 GB
Memory configurations supported	• 16 GB, 2 x 8 GB, DDR5, 4800 MT/s, dual-channel • 32 GB, 2 x 16 GB, DDR5, 4800 MT/s, dual-channel • 64 GB, 2 x 32 GB, DDR5, 4800 MT/s, dual-channel

External ports

The following table lists the external ports on your XPS 15 9530.

Table 6. External ports

Description	Values
USB ports	- One USB 3.2 Gen 2 (Type-C) port with DisplayPort and Power Delivery - Two Thunderbolt 4 USB Type-C ports with Power Delivery  NOTE: To charge the computer, connect the USB Type-C power adapter to the primary Thunderbolt 4 port.
Audio port	One universal audio jack
Video port/ports	USB Type-C port with DisplayPort Alt mode and Thunderbolt 4
Media-card reader	One SD-card slot
Power-adapter port	DC-IN through one of the three USB Type-C ports
Security-cable slot	1 wedge-shaped lock slot

Internal slots

The following table lists the internal slots of your XPS 15 9530.

Table 7. Internal slots

Description	Values
M.2	Two M.2 2280 slots for solid-state drive  NOTE: To learn more about the features of different types of M.2 cards, search in the Knowledge Base Resource at www.dell.com/support.

Wireless module

The following table lists the Wireless Local Area Network (WLAN) module that is supported on your XPS 15 9530.

Table 8. Wireless module specifications

Description	Values
Model number	Intel AX211
Transfer rate	Up to 2400 Mbps
Frequency bands supported	2.4 GHz/5 GHz
Wireless standards	- WiFi 802.11a/b/g - Wi-Fi 4 (WiFi 802.11n) - Wi-Fi 5 (WiFi 802.11ac) - Wi-Fi 6 (WiFi 802.11ax)

Table 8. Wireless module specifications (continued)

Description	Values
Encryption	• 64-bit/128-bit WEP • AES-CCMP • TKIP
Bluetooth wireless card	Bluetooth 5.3
	 NOTE: The version of the Bluetooth wireless card may vary depending on the operating system that is installed on your computer.

Audio

The following table lists the audio specifications of your XPS 15 9530.

Table 9. Audio specifications

Description		Values
Audio controller		Realtek ALC3281
Stereo conversion		Supported
Internal audio interface		High definition audio interface
External audio interface		Universal audio jack
Number of speakers		Two
Internal-speaker amplifier		Supported
External volume controls		Keyboard shortcut controls
Speaker output:		
	Average speaker output	Tweeters (2 W x 2); Woofers (3 W x 2)
	Peak speaker output	2.5 W x 2 + 3.5 W x 2 = 12 W
Subwoofer output		Supported
Microphone		Digital-array microphones

Storage

This section lists the storage options on your XPS 15 9530.

Your XPS 15 9530 supports two M.2 2280 solid-state drives.

Table 10. Storage specifications

Storage type	Interface type	Capacity
M.2 2280 solid-state drive	PCIe Gen4 x4 NVMe, up to 64 Gbps	Up to 8 TB

Media-card reader

The following table lists the media cards supported by your XPS 15 9530.

Table 11. Media-card reader specifications

Description	Values
Media-card type	One SD-card slot
Media-cards supported	- Secure Digital (SD) - Secure Digital High Capacity (SDHC) - Secure Digital Extended Capacity (SDXC)
NOTE: The maximum capacity supported by the media-card reader varies depending on the standard of the media card installed in your computer.	

Keyboard

The following table lists the keyboard specifications of your XPS 15 9530.

Table 12. Keyboard specifications

Description	Values
Keyboard type	Standard backlit keyboard
Keyboard layout	QWERTY
Number of keys	- United States and Canada: 79 keys - United Kingdom: 80 keys - Japan: 83 keys
Keyboard size	X = 19.05 mm key pitch Y = 18.05 mm key pitch
Keyboard shortcuts	Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key. NOTE: You can define the primary behavior of the function keys (F1–F12) changing Function Key Behavior in BIOS setup program. For more information, see keyboard shortcuts Keyboard shortcuts.

Camera

The following table lists the camera specifications of your XPS 15 9530.

Table 13. Camera specifications

Description	Values
Number of cameras	One

Table 13. Camera specifications (continued)

Description		Values
Camera type		HD RGB+IR camera
Camera location		Front
Camera sensor type		CMOS-sensor technology
Camera resolution:		
	Still image	0.90 megapixel
	Video	1280 x 720 (HD) at 30 fps
Infrared camera resolution:		
	Still image	0.20 megapixel
	Video	576 x 360 (VGA) at 30 fps
Diagonal viewing angle:		
	Camera	78.50 degrees
	Infrared camera	78.50 degrees

Touchpad

The following table lists the touchpad specifications of your XPS 15 9530.

Table 14. Touchpad specifications

Description		Values
Touchpad resolution:		
	Horizontal	1770
	Vertical	1039
Touchpad dimensions:		
	Horizontal	150.90 mm (5.94 in.)
	Vertical	90 mm (3.54 in.)
Touchpad gestures		For more information about touchpad gestures available on Windows, see the Microsoft knowledge base article at support.microsoft.com .

Power adapter

The following table lists the power adapter specifications of your XPS 15 9530.

Table 15. Power adapter specifications

Description	Values
Type	130 W USB Type-C

Table 15. Power adapter specifications (continued)

Description		Values
Input voltage		100 VAC–240 VAC
Input frequency		50 Hz–60 Hz
Input current (maximum)		1.80 A
Output current (continuous)		6.50 A
Rated output voltage		20 VDC
Temperature range:		
	Operating	0°C to 40°C (32°F to 104°F)
	Storage	-40°C to 70°C (-40°F to 158°F)
 CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.		

Battery

The following table lists the battery specifications of your XPS 15 9530.

Table 16. Battery specifications

Description		Values
Battery type		6-cell, 86 Wh "smart" lithium-ion
Battery voltage		11.40 VDC
Battery weight (maximum)		0.34 kg (0.75 lb)
Battery dimensions:		
	Height	77.70 mm (3.06 in.)
	Width	295.20 mm (11.62 in.)
	Depth	7.56 mm (0.30 in.)
Temperature range:		
	Operating	0°C to 70°C (32°F to 158°F)
	Storage	-20°C to 65°C (-4°F to 149°F)
Battery operating time		Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.
Battery charging time (approximate)  NOTE: Control the charging time, duration, start and end time, and so on using the Dell Power Manager application. For more information about Dell Power Manager, search in the Knowledge Base Resource at www.dell.com/support .		2 hours (Express charge), 3 hours (Standard charge) when the computer is off.
Coin-cell battery		Not supported

Table 16. Battery specifications (continued)

Description	Values
 CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.	
 CAUTION: Dell recommends that you charge the battery regularly for optimal power consumption. If your battery charge is completely depleted, connect the power adapter, turn on your computer, and then restart your computer to reduce the power consumption.	

Display

The following table lists the display specifications of your XPS 15 9530.

Table 17. Display specifications

Description		Option one	Option two
Display type		Full High Definition (FHD+)	OLED 3.5K Touch
Touch options		No	Touch support, with 10 touch points
Display-panel technology		Wide Viewing Angle (WVA), Eyesafe	Wide Viewing Angle (WVA), Eyesafe
Display-panel dimensions (active area):			
	Height	210.24 mm (8.28 in.)	210.21 mm (8.28 in.)
	Width	336.38 mm (13.24 in.)	336.34 mm (13.24 in.)
	Diagonal	396.24 mm (15.60 in.)	396.24 mm (15.60 in.)
Display-panel native resolution		1920 x 1200	3456 x 2160
Luminance (typical)		500 nits	400 nits
Megapixels		2.30	7.46
Color gamut		100% sRGB	DCI-P3 100% (typical)
Pixels Per Inch (PPI)		145	261
Contrast ratio (min.)		1650:1 (typical)	• SDR - 80,000:1 (typical) • HDR - 124,000:1 (typical)
Response time (max.)		35 ms	2 ms
Refresh rate		60 Hz	60 Hz
Horizontal view angle		85 +/- degrees	88 +/- degrees
Vertical view angle		85 +/- degrees	88 +/- degrees
Pixel pitch		0.18 mm	0.10 mm
Power consumption (maximum)		4.41 W	8.74 W
Anti-glare vs glossy finish		Anti-glare	Anti-reflective

Fingerprint reader

The following table lists the fingerprint-reader specifications of your XPS 15 9530.

 **NOTE:** The fingerprint reader is located on the power button.

Table 18. Fingerprint reader specifications

Description	Values
Fingerprint-reader sensor technology	Capacitive
Fingerprint-reader sensor resolution	500 dpi
Fingerprint-reader sensor pixel size	108 x 88

GPU—Discrete

The following table lists the specifications of the discrete Graphics Processing Unit (GPU) supported by your XPS 15 9530.

Table 19. GPU—Discrete

Controller	Memory size	Memory type
Intel Arc A370M Graphics	4 GB	GDDR6
NVIDIA GeForce RTX 4050	6 GB	GDDR6
NVIDIA GeForce RTX 4060	8 GB	GDDR6
NVIDIA GeForce RTX 4070	8 GB	GDDR6

Operating and storage environment

This table lists the operating and storage specifications of your XPS 15 9530.

Airborne contaminant level: G1 as defined by ISA-S71.04-1985

Table 20. Computer environment

Description	Operating	Storage
Temperature range	0°C to 35°C (32°F to 95°F)	-40°C to 65°C (-40°F to 149°F)
Relative humidity (maximum)	10% to 90% (non-condensing)	0% to 95% (non-condensing)
Vibration (maximum)*	0.66 GRMS	1.30 GRMS
Shock (maximum)	140 G†	160 G†
Altitude range	-15.20 m to 3048 m (-49.87 ft to 10000 ft)	-15.20 m to 10668 m (-49.87 ft to 35000 ft)

 **CAUTION:** Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.

* Measured using a random vibration spectrum that simulates user environment.

† Measured using a 2 ms half-sine pulse when the hard drive is in use.

Dell low blue light display

 **WARNING:** Prolonged exposure to blue light from the display may lead to long-term effects such as eye strain, eye fatigue, or damage to the eyes.

The ComfortView feature on Dell laptops and displays is designed to minimize blue light emitted from the display for better eye comfort.

To reduce the risk of eye strain after looking at the laptop's display for an extended period of time, it is recommended that you:

1. Set the laptop's display at a comfortable viewing distance between 20 inches and 28 inches (50 cm and 70 cm) from your eyes.
2. Blink frequently to moisten your eyes, or wet your eyes with water.
3. Take a break for 20 minutes every two hours.
4. Look away from your display, and gaze at a distant object at 20 ft (609.60 cm) away for at least 20 seconds during each break.

Keyboard shortcuts of XPS 15 9530

NOTE: Keyboard characters may differ depending on the keyboard language configuration. Keys used for shortcuts remain the same across all language configurations.

Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. The symbol shown on the lower part of the key refers to the character that is typed out when the key is pressed. If you press shift and the key, the symbol shown on the upper part of the key is typed out. For example, if you press **2**, **2** is typed out; if you press **Shift + 2**, **@** is typed out.

The keys **F1-F12** at the top row of the keyboard are function keys for multi-media control, as indicated by the icon at the bottom of the key. Press the function key to invoke the task represented by the icon. For example, pressing **F1** mutes the audio (refer to the table below).





However, if the function keys **F1-F12** are needed for specific software applications, multi-media functionality can be disabled by pressing **Fn + esc**. Subsequently, multimedia control can be invoked by pressing **Fn** and the respective function key. For example, mute audio by pressing **Fn + F1**.

NOTE: You can also define the primary behavior of the function keys (**F1-F12**) by changing **Function Key Behavior** in BIOS setup program.

Table 21. List of keyboard shortcuts

Function key	Redefined key (for multimedia control)	Behavior
 F1	fn +  F1	Mute audio
 F2	fn +  F2	Decrease volume
 F3	fn +  F3	Increase volume
 F4	fn +  F4	Play/Pause
 F5	fn +  F5	Toggle keyboard backlight
 F6	fn +  F6	Decrease brightness
 F7	fn +  F7	Increase brightness

Table 21. List of keyboard shortcuts (continued)

Function key	Redefined key (for multimedia control)	Behavior
	 + 	Switch to external display
	 + 	Print screen
	 + 	Home
	 + 	End

The **Fn** key is also used with selected keys on the keyboard to invoke other secondary functions.

Table 22. List of keyboard shortcuts

Function key	Behavior
 + 	Pause/Break
 + 	Toggle scroll lock
 + 	System request
 + 	Open application menu
 + 	Toggle Fn-key lock

Getting help and contacting Dell

Self-help resources

You can get information and help on Dell products and services using these self-help resources:

Table 23. Self-help resources

Self-help resources	Resource location
Information about Dell products and services	www.dell.com
My Dell app	
Tips	
Contact Support	In Windows search, type <code>Contact Support</code> , and press Enter.
Online help for operating system	www.dell.com/support/windows
Access top solutions, diagnostics, drivers and downloads, and learn more about your computer through videos, manuals and documents.	Your Dell computer is uniquely identified by a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, enter the Service Tag or Express Service Code at www.dell.com/support. For more information on how to find the Service Tag for your computer, see Locate the Service Tag on your computer.
Dell knowledge base articles for a variety of computer concerns	1. Go to www.dell.com/support. 2. On the menu bar at the top of the Support page, select Support > Knowledge Base. 3. In the Search field on the Knowledge Base page, type the keyword, topic, or model number, and then click or tap the search icon to view the related articles.

Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see www.dell.com/contactdell.

 **NOTE:** Availability varies by country/region and product, and some services may not be available in your country/region.

 **NOTE:** If you do not have an active Internet connection, you can find contact information about your purchase invoice, packing slip, bill, or Dell product catalog.

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda Dell, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/dell-laptop-xps-9530-not22385-akcija-cena/>