

Uputstvo za upotrebu (EN)

MSI zakrivljeni monitor 34" VA PRO MP341CQ E12



msi



Tehnoteka je online destinacija za upoređivanje cena i karakteristika bele tehnike, potrošačke elektronike i IT uređaja kod trgovinskih lanaca i internet prodavnica u Srbiji. Naša stranica vam omogućava da istražite najnovije informacije, detaljne karakteristike i konkurentne cene proizvoda.

Posetite nas i uživajte u ekskluzivnom iskustvu pametne kupovine klikom na link:

<https://tehnoteka.rs/p/msi-zakrivljeni-monitor-34-va-pro-mp341cq-e12-akcija-cena/>



PRO Series

LCD Monitor

PRO MP341CQ E12 (3PB2)
PRO MP341CQW E12 (3PB2)

User Guide

Contents

- Getting Started3
 - Package Contents 3
 - Installing the Monitor Stand..... 4
 - Adjusting the Monitor 5
 - Monitor Overview 6
 - Connecting the Monitor to PC..... 8
- OSD Setup.....9
 - OSD Keys 9
- OSD Menus11
 - Professional 11
 - Image..... 14
 - Input Source..... 14
 - PIP/PBP..... 15
 - Navi Key..... 15
 - Settings..... 16
- Specifications17
- Preset Display Modes19
- Troubleshooting.....21
- Safety Instructions22
- TÜV Rheinland Certification24
- ENERGY STAR Certification24
- Regulatory Notices.....25

Getting Started

This chapter provides you with the information on hardware setup procedures. While connecting devices, be careful in holding the devices and use a grounded wrist strap to avoid static electricity.

Package Contents

Monitor	PRO MP341CQ E12, PRO MP341CQW E12
Documentation	Quick Start Guide
Accessories	Stand with Screw(s)
	Stand Base with Screw(s)
	Stand Cover
	Power Cord
Cables	DisplayPort Cable (Optional)




Important

- Contact your place of purchase or local distributor if any of the items is damaged or missing.
- Package contents may vary by country and model.
- The included power cord is exclusively for this monitor and should not be used with other products.


Installing the Monitor Stand

1. Leave the monitor in its protective foam packaging. Align the stand bracket to the monitor groove.
2. Tighten the stand bracket with screws.
3. Connect the base to the stand and tighten the base screw to secure the base.
4. Align and push the stand cover towards the monitor groove until it locks in place.
5. Make sure the stand assembly is properly installed before setting the monitor upright.

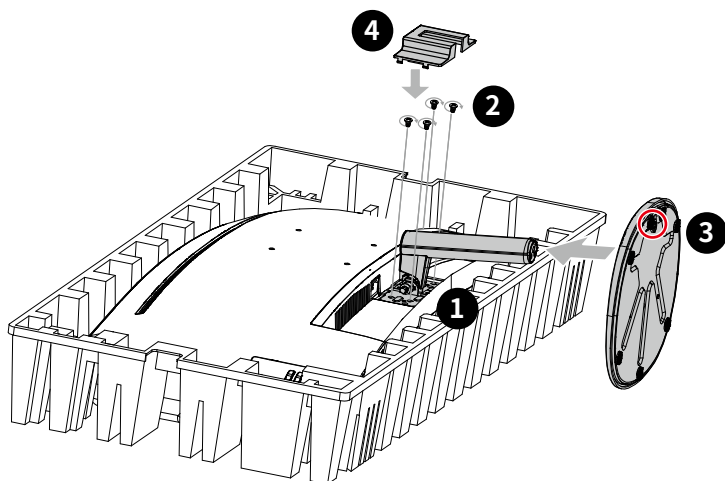

Important

- Place the monitor on a soft, protected surface to avoid scratching the display panel.
- Do not use any sharp objects on the panel.
- This product comes with NO protective film to be removed by the user! Any mechanical damages to the product including removal of the polarizing film may affect the warranty!

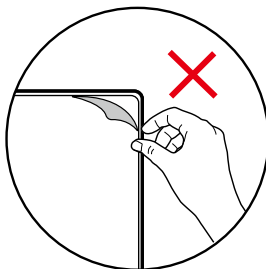


Adjusting the Monitor

This monitor is designed to maximize your viewing comfort with its adjustment capabilities.




Important

Avoid touching the display panel when adjusting the monitor.

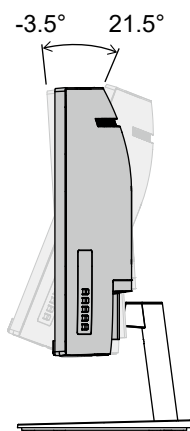


Monitor Overview

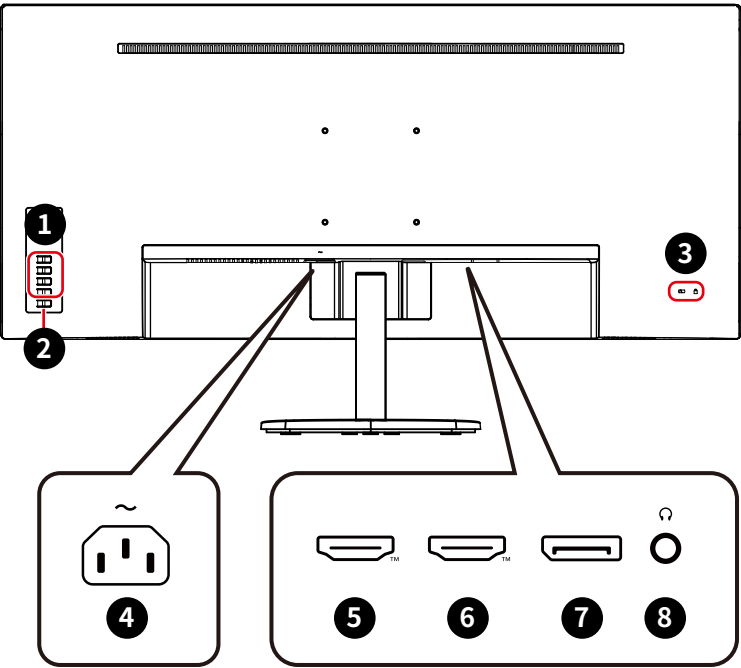

1	OSD Keys
2	Power Button
3	Kensington Lock
4	Power Jack
5	HDMI™ Connector HDMI™ HIGH-DEFINITION MULTIMEDIA INTERFACE Supports HDMI™ CEC, 3440x1440@100Hz as specified in HDMI™ 2.0b.  Important <i>To ensure optimal performance and compatibility, please use only HDMI™ cables certified with the official HDMI™ logo when connecting this monitor. For more information, please visit https://www.hdmi.org/resource/cables.</i>
6	HDMI™ Connector HDMI™ HIGH-DEFINITION MULTIMEDIA INTERFACE Supports 3440x1440@100Hz as specified in HDMI™ 2.0b.  Important <i>To ensure optimal performance and compatibility, please use only HDMI™ cables certified with the official HDMI™ logo when connecting this monitor. For more information, please visit https://www.hdmi.org/resource/cables.</i>
7	DisplayPort Supports 3440x1440@120Hz as specified in DisplayPort 1.4a.
8	Headphone Jack

Connecting the Monitor to PC

1. Turn off your computer.
2. Connect the video cable from the monitor to your computer.
3. Connect the power cord to the monitor power jack. (Figure A)
4. Plug the power cord into the electrical outlet. (Figure B)
5. Turn on the monitor. (Figure C)
6. Power on the computer and the monitor will auto detect the signal source.

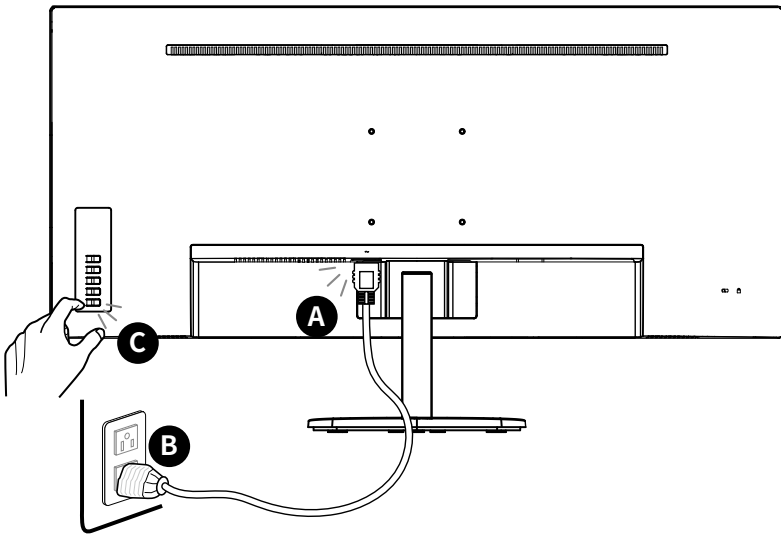

OSD Setup

This chapter provides you with essential information on OSD Setup.




Important

All information is subject to change without prior notice.


OSD Keys

The monitor comes with a set of OSD Keys that help to control the On-Screen Display (OSD) menu.

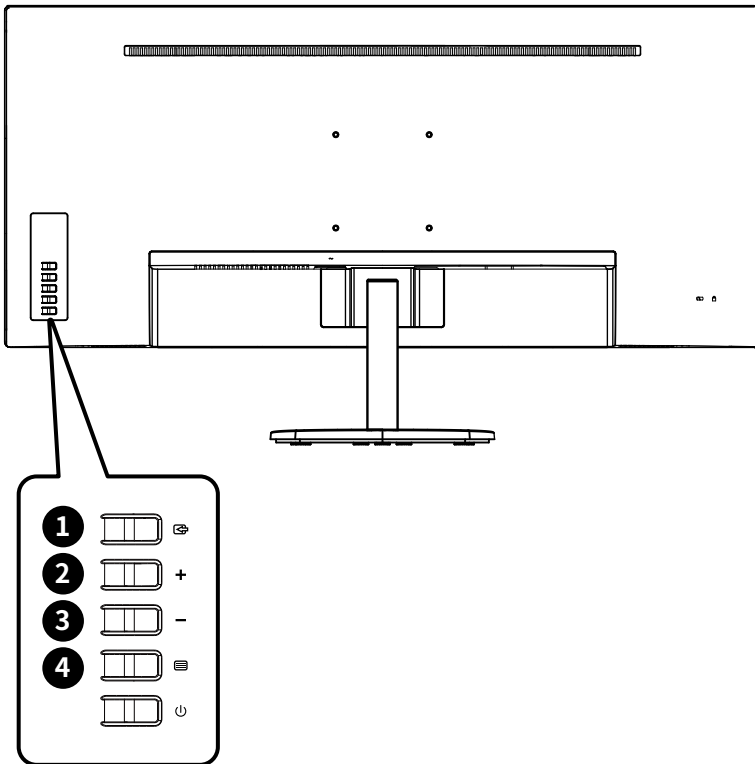

OSD Keys		Hot Key (When OSD is OFF)	OSD Setup (When OSD is ON)
1	SOURCE / EXIT	• Selecting the video input from external sources	• Returning to the previous menu • Exiting from the OSD Main Menu
2	VOLUME / +	• Activating the Volume control	• Adjusting function values
3	Eco Mode / -	• Activating Eco Mode	
4	MENU / ENTER	• Activating the OSD Main Menu • To lock/unlock the OSD, press and hold the MENU button while the monitor is off and then press the power button to turn the monitor on.	• Confirming the selection

OSD Menu

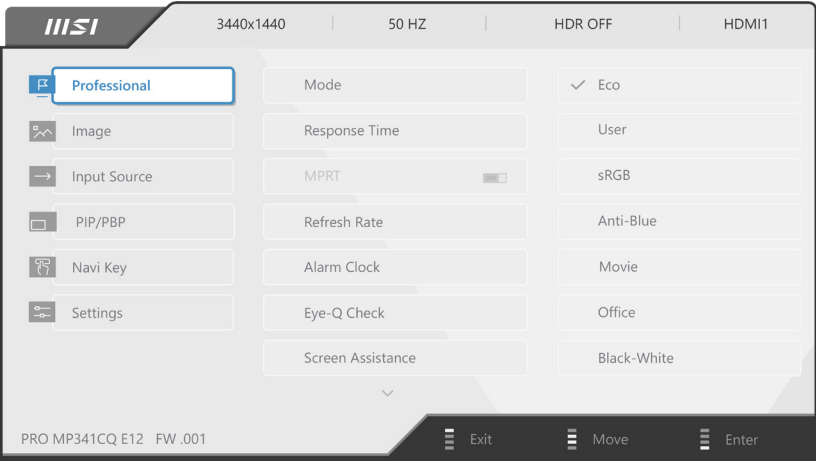

Important

The following settings will be grayed out when HDR signals are received:

- MPRT
- Low Blue Light
- HDCR
- Brightness
- Contrast
- Color Temperature
- sRGB
- PIP/PBP

Professional

1st Level Menu	2nd/3rd Level Menu	Description
Mode	Eco	• Use Up or Down Button to select and preview mode effects. • Press the Middle Button to confirm and apply your mode type. • Mode defaults to Eco for SDR mode and User for HDR mode.
	User	
	sRGB	
	Anti-Blue	
	Movie	
	Office	
	Black-White	
Response Time	Normal	• Users can adjust Response Time in any mode. • Response time cannot be enabled at the following resolutions and refresh rates: • HDMI™ 1920x1080@120Hz • HDMI™ 2560x1440@120Hz • HDMI™ 2560x1080@120Hz
	Fast	
	Fastest	

1st Level Menu	2nd/3rd Level Menu		Description											
MPRT	OFF		- MPRT is available when the refresh rate is over 85Hz. - Activating MPRT will affect:<table><tr><th>Affected Function</th><th>Function Status</th></tr><tr><td>» Brightness</td><td rowspan="2">Unable to select</td></tr><tr><td>» Response Time</td></tr><tr><td>» HDCR</td><td rowspan="2">Set to OFF</td></tr><tr><td>» PIP/PBP</td></tr><tr><td>» Adaptive-Sync</td><td rowspan="2">Set to Auto</td></tr><tr><td>» Screen Size</td></tr></table>	Affected Function	Function Status	» Brightness	Unable to select	» Response Time	» HDCR	Set to OFF	» PIP/PBP	» Adaptive-Sync	Set to Auto	» Screen Size
	Affected Function	Function Status												
	» Brightness	Unable to select												
	» Response Time													
» HDCR	Set to OFF													
» PIP/PBP														
» Adaptive-Sync	Set to Auto													
» Screen Size														
ON														
Refresh Rate	Location	Left Top	- Location is adjustable in OSD Menu. Press the Middle Button to confirm and apply your Refresh Rate Location. - This monitor follows and works at the Operating System' s preset Screen Refresh Rate.											
		Right Top												
		Left Bottom												
		Right Bottom												
	OFF													
	ON													
Alarm Clock	Location	Left Top	- After setting the time, press the Middle Button to activate the timer. - Users have to manually restore their preset Alarm Clock after any AC power loss and reconnection.											
		Right Top												
		Left Bottom												
		Right Bottom												
	OFF													
	15:00	00:01 ~ 99:59												
	30:00													
	45:00													
	60:00													
	Eye-Q Check	OFF		- Select OFF to disable Eye-Q Check. - Activating Eye-Q Check will affect:<table><tr><th>Affected Function</th><th>Function Status</th></tr><tr><td>» Info. On Screen</td><td rowspan="3">Set to OFF</td></tr><tr><td>» Refresh Rate</td></tr><tr><td>» Alarm Clock</td></tr></table>	Affected Function	Function Status	» Info. On Screen	Set to OFF	» Refresh Rate	» Alarm Clock				
Affected Function		Function Status												
» Info. On Screen		Set to OFF												
» Refresh Rate														
» Alarm Clock														
Amsler Grid		Select Amsler Grid to check your central vision field.												
Astigmatism		Select Astigmatism to check your blurred vision.												
Posture Correction		Select Posture Correction to improve your posture when sitting.												

1st Level Menu	2nd/3rd Level Menu	Description								
Screen Assistance	None	Users can select the color of the crosshair.								
										
Screen Size	Auto	Users can adjust Screen Size in any mode, any resolution and any screen refresh rate.								
	4:3									
	16:9									
	21:9									
	1:1									
Adaptive-Sync	OFF	- Adaptive-Sync prevents screen tearing. - When Adaptive-Sync is set to ON, it is mandatory to enable HDMI™ VRR. - Activating Adaptive-Sync will affect:<table border="1" data-bbox="589 818 924 946"><thead><tr><th>Affected Function</th><th>Function Status</th></tr></thead><tbody><tr><td>» MPRT</td><td>Set to OFF</td></tr><tr><td>» PIP/PBP</td><td>Set to OFF</td></tr><tr><td>» Screen Size 1:1</td><td>Set to Auto</td></tr></tbody></table>	Affected Function	Function Status	» MPRT	Set to OFF	» PIP/PBP	Set to OFF	» Screen Size 1:1	Set to Auto
	Affected Function		Function Status							
» MPRT	Set to OFF									
» PIP/PBP	Set to OFF									
» Screen Size 1:1	Set to Auto									
ON										
HDMI™ Console Mode	OFF	Activating HDMI™ Console Mode will affect:<table border="1" data-bbox="589 994 924 1106"><thead><tr><th>Affected Function</th><th>Function Status</th></tr></thead><tbody><tr><td>» PIP/PBP</td><td>Set to OFF</td></tr><tr><td>» Screen Size 1:1</td><td>Set to Auto</td></tr></tbody></table>	Affected Function	Function Status	» PIP/PBP	Set to OFF	» Screen Size 1:1	Set to Auto		
	Affected Function		Function Status							
» PIP/PBP	Set to OFF									
» Screen Size 1:1	Set to Auto									
ON										

Image

1st Level Menu	2nd/3rd Level Menu		Description						
Brightness	0-100		Properly adjust Brightness according to the surrounding lighting.						
Contrast	0-100		Properly adjust Contrast to relax your eyes.						
Sharpness	0-5		Sharpness improves clarity and details of images.						
Image Enhancement	OFF		Image Enhancement enhances image edges to improve their acutance.						
	Weak								
	Medium								
	Strong								
	Strongest								
Low Blue Light	OFF		- Low Blue Light protects your eyes against blue light. When enabled, Low Blue Light adjusts the screen color temperature to a more yellow glow. - When Mode is set to Anti-Blue, it is mandatory to enable Low Blue Light.						
	ON								
HDCR	OFF		- HDCR enhances image quality by increasing the contrast of images. - Activating HDCR will affect: <table><tr><th>Affected Function</th><th>Function Status</th></tr><tr><td>» Brightness</td><td>Unable to select</td></tr><tr><td>» MPRT</td><td>Set to OFF</td></tr></table>	Affected Function	Function Status	» Brightness	Unable to select	» MPRT	Set to OFF
	Affected Function	Function Status							
	» Brightness	Unable to select							
» MPRT	Set to OFF								
	ON								
Color Temperature	Cool		- Use Up or Down Button to select and preview mode effects. - Press the Middle Button to confirm and apply your mode type. - Users can adjust Color Temperature in Customization mode.						
	Normal								
	Warm								
	Customization	R (0-100)							
		G (0-100)							
B (0-100)									

Input Source

1st Level Menu	2nd Level Menu	Description
HDMI™1		Users can adjust Input Source in any mode.
HDMI™2		
DP		
Auto Scan	OFF	- Users can use the Navi Key to select Input Source at below status: - While “Auto Scan” is set to “OFF” with the monitor at power saving mode; - While “No Signal” message box is shown on the monitor.
	ON	

PIP/PBP

1st Level Menu		2nd/3rd Level Menu		Description																
OFF				- PIP (Picture in Picture) allows users to simultaneously display multiple video sources on one screen. One program is displayed on the full screen at the same time as one or more other programs are displayed in inset windows. - PBP (Picture by Picture) is a similar feature that displays two input sources side-by-side on the screen. - Display Switch allows users to switch between primary and secondary input sources. - If there is only one signal input, the Display Switch and Audio Switch will be grayed out. - Activating PIP/PBP will affect:<table><tr><th>Affected Function</th><th>Function Status</th></tr><tr><td>» HDMI™ Console Mode</td><td>Unable to select</td></tr><tr><td>» Adaptive-Sync</td><td>Set to OFF</td></tr><tr><td>» MPRT</td><td></td></tr><tr><td>» Response Time</td><td>Set to OFF & unable to select</td></tr><tr><td>» HDMI™ CEC</td><td></td></tr><tr><td>» PIP: Screen Size 1:1</td><td>Set to Auto & unable to select</td></tr><tr><td>» PBP: Screen Size</td><td></td></tr></table>	Affected Function	Function Status	» HDMI™ Console Mode	Unable to select	» Adaptive-Sync	Set to OFF	» MPRT		» Response Time	Set to OFF & unable to select	» HDMI™ CEC		» PIP: Screen Size 1:1	Set to Auto & unable to select	» PBP: Screen Size	
Affected Function	Function Status																			
» HDMI™ Console Mode	Unable to select																			
» Adaptive-Sync	Set to OFF																			
» MPRT																				
» Response Time	Set to OFF & unable to select																			
» HDMI™ CEC																				
» PIP: Screen Size 1:1	Set to Auto & unable to select																			
» PBP: Screen Size																				
PIP	Source	HDMI™1																		
		HDMI™2																		
		DP																		
	PIP Size	Small																		
		Medium																		
		Large																		
	Location	Left Top																		
		Right Top																		
		Left Bottom																		
		Right Bottom																		
Display Switch																				
Audio Switch																				
PBP	Source 1	HDMI™1																		
		HDMI™2																		
		DP																		
	Source 2	HDMI™1																		
		HDMI™2																		
		DP																		
	Display Switch																			
	Audio Switch																			

Navi Key

1st Level Menu	2nd Level Menu	Description
 + -	OFF	All Navi Key items can be adjusted via OSD Menus.
	Brightness	
	Mode	
	Alarm Clock	
	Input Source	
	PIP/PBP Mode	
	Refresh Rate	
	Info. On Screen	
	Audio Volume	

Settings

1st Level Menu	2nd Level Menu	Description				
Language	繁體中文	- Users have to press the Middle Button to confirm and apply the Language setting. - Language is an independent setting. Users' own language setting will override the factory. When users set Reset to Yes, Language will not be changed.				
	English					
	Français					
	Deutsch					
	Italiano					
	Español					
	한국어					
	日本語					
	Русский					
	Português					
	简体中文					
	Bahasa Indonesia					
	Türkçe					
	(More languages coming soon)					
Transparency	0~5	Users can adjust Transparency in any mode.				
OSD Time Out	5~30s	Users can adjust OSD Time Out in any mode.				
Power Button	OFF	When set to OFF, users can press the power button to turn off the monitor.				
	Standby	When set to Standby, users can press the power button to turn off the panel and backlight.				
HDMI™ CEC	OFF	- HDMI™ CEC (Consumer Electronics Control) supports Sony PlayStation®, Nintendo® Switch™, Xbox Series X S consoles and various audio-visual devices that are CEC-capable. - If HDMI™ CEC is set to ON: - The monitor will automatically power on when the CEC device is turned on. - The CEC device will enter power saving mode when the monitor is turned off. - When Sony PlayStation®, Nintendo® Switch™, or Xbox Series X S console is connected, Mode will be automatically set to default modes and can be adjusted to users' preferred modes later.				
	ON					
Info. On Screen	OFF	- The information of the monitor status will be shown on the right side of the screen. - Activating Info. On Screen will affect:<table><tr><th>Affected Function</th><th>Function Status</th></tr><tr><td>» Eye-Q Check</td><td>Set to OFF</td></tr></table>	Affected Function	Function Status	» Eye-Q Check	Set to OFF
	Affected Function		Function Status			
» Eye-Q Check	Set to OFF					
ON						
Audio Volume	0-100	Users can adjust Audio Volume in any mode.				
Reset	YES	Users can Reset and restore settings to original OSD Default in any mode.				
	NO					

Specifications*

Monitor	PRO MP341CQ E12	PRO MP341CQW E12
Size	34 inch	
Curvature	Curve 1500R	
Panel Type	VA	
Resolution	3440 x 1440 (UWQHD)	
Aspect Ratio	21:9	
Brightness	Typical SDR 300 nits	
Contrast Ratio	3500:1	
Refresh Rate	120Hz	
Response Time	• 1ms (MPRT) • 4ms (GtG, Min.)	
I/O	• 2 x HDMI™ Connector • 1 x DisplayPort • 1 x Headphone Jack	
View Angles	178°(H) , 178°(V)	
DCI-P3**/ sRGB	91% / 98%	
Surface Treatment	Anti-glare	
Display Colors	1.07B, 10 bits (8 bits + FRC)	
Speaker	2W x 2	
Monitor Power Options	100~240 Vac, 50/60 Hz, 1.5 A	
Power Consumption (Typical)	Power On < 65 W Standby < 0.5 W Power Off < 0.3 W	
Adjustment (Tilt)	-3.5° ~ 21.5°	
Kensington Lock	Yes	
VESA Mounting	• Plate Type: 100 x 100 mm • Screw Type: M4 x 10 mm • Thread Diameter: 4 mm • Thread Pitch: 0.7 mm • Thread Length: 10 mm	
Dimension (W x D x H)	809.34 x 469.54 x 237 mm	
Weight	Net	7.1 kg
	Gross	11.1 kg

Monitor	PRO MP341CQ E12	PRO MP341CQW E12
Operating Environment	• Temperature: 0°C to 40°C • Humidity: 20% to 90%, non-condensing • Altitude: 0 ~ 5000m	
Storage Environment	• Temperature: -20°C to 60°C • Humidity: 10% to 90%, non-condensing	

* Some technical specifications of the device may be subject to change by the manufacturer. Please verify the specifications with the seller or the manufacturer's representative.

** Based on CIE1976 test standards.

Preset Display Modes



- All information is subject to change without prior notice.
- HDMI™ VRR (Variable Refresh Rate) synchronizes with Adaptive-Sync (ON/ OFF). For VRR ON/OFF status, please check Adaptive-Sync.

HDMI™ Console Mode OFF

Standard	Resolution		HDMI™	DP
QHD	2560x1440	@60Hz	V	V
		@120Hz	V	V
UWQHD	3440x1440	@50Hz	V	
		@60Hz		V
		@100Hz	V	V
		@120Hz		V
Video Timing Resolution	720p		V	V
	1080p	@60Hz	V	V
		@120Hz	V	V
	2560x1080p	@60Hz	V	
		@120Hz	V	
HDMI™ VRR			V	

HDMI™ Console Mode ON

Standard	Resolution		HDMI™	DP
QHD	2560x1440	@60Hz	V	V
		@120Hz	V	V
UWQHD	3440x1440	@50Hz	V	
		@60Hz		V
		@100Hz	V	V
		@120Hz		V
Video Timing Resolution	720p		V	V
	1080p	@60Hz	V	V
		@120Hz	V	V
	2160p	@60Hz	V	
	2560x1080p	@60Hz	V	
		@120Hz	V	
HDMI™ VRR			V	

PIP Mode (Not Support HDR)

Standard	Resolution		HDMI™	DP
QHD	2560x1440	@60Hz	V	V
		@120Hz	V	V
UWQHD	3440x1440	@50Hz	V	
		@60Hz		V
		@100Hz	V	V
		@120Hz		V
Video Timing Resolution	720p		V	V
	1080p	@60Hz	V	V
		@120Hz	V	V
	2560x1080p	@60Hz	V	
		@120Hz	V	

PBP Mode (Not Support HDR)

Standard	Resolution		HDMI™	DP
QHD	2560x1440	@60Hz	V	V
Video Timing Resolution	720p		V	V
Used for PBP Full Screen	1720x1440	@60Hz	V	

Troubleshooting

The power LED is off.

- Press the monitor power button again.
- Check if the monitor power cable is properly connected.

No image.

- Check if the computer graphics card is properly installed.
- Check if the computer and monitor are connected to electrical outlets and are turned on.
- Check if the monitor signal cable is properly connected.
- The computer may be in Standby mode. Press any key to activate the monitor.

The screen image is not properly sized or centered.

- Refer to Preset Display Modes to set the computer to a setting suitable for the monitor to display.

No Plug & Play.

- Check if the monitor power cable is properly connected.
- Check if the monitor signal cable is properly connected.
- Check if the computer and graphics card are Plug & Play compatible.

The icons, font or screen are fuzzy, blurry or have color problems.

- Avoid using any video extension cables.
- Adjust brightness and contrast.
- Adjust RGB color or tune color temperature.
- Check if the monitor signal cable is properly connected.
- Check for bent pins on the signal cable connector.

The monitor starts flickering or shows waves.

- Change the refresh rate to match the capabilities of your monitor.
- Update your graphics card drivers.
- Keep the monitor away from electrical devices that may cause electromagnetic interference (EMI).

Safety Instructions

- Read the safety instructions carefully and thoroughly.
- All cautions and warnings on the device or User Guide should be noted.
- Refer servicing to qualified personnel only.

Power

- Make sure that the power voltage is within its safety range and has been adjusted properly to the value of 100~240V before connecting the device to the power outlet.
- If the power cord comes with a 3-pin plug, do not disable the protective earth pin from the plug. The device must be connected to an earthed mains socket-outlet.
- Please confirm the power distribution system in the installation site shall provide the circuit breaker rated 120/240V, 20A (maximum).
- Always disconnect the power cord or switch the wall socket off if the device would be left unused for a certain time to achieve zero energy consumption.
- Place the power cord in a way that people are unlikely to step on it. Do not place anything on the power cord.
- If this device comes with an adapter, use only the MSI provided AC adapter approved for use with this device.

Environment

- To reduce the possibility of heat-related injuries or of overheating the device, do not place the device on a soft, unsteady surface or obstruct its air ventilators.
- Use this device only on a hard, flat and steady surface.
- To prevent the device from tipping over, secure the device to a desk, wall or fixed object with an anti-tip fastener that helps to properly support the device and keep it safe in place.
- To prevent fire or shock hazard, keep this device away from humidity and high temperature.
- Do not leave the device in an unconditioned environment with a storage temperature above 60°C or below -20°C, which may damage the device.
- The maximum operating temperature is around 40°C.
- When cleaning the device, be sure to remove the power plug. Use a piece of soft cloth rather than industrial chemical to clean the device. Never pour any liquid into the opening; that could damage the device or cause electric shock.
- Always keep strong magnetic or electrical objects away from the device.

- If any of the following situations arises, get the device checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the device.
 - The device has been exposed to moisture.
 - The device does not work well or you can not get it working according to the User Guide.
 - The device has dropped and damaged.
 - The device has obvious sign of breakage.

TÜV Rheinland Certification

TÜV Rheinland Low Blue Light Certification

Blue light has been shown to cause eye fatigue and discomfort. MSI now offers monitors with TÜV Rheinland Low Blue Light certification to ensure users' eye comfort and well-being. Please follow the instructions below to reduce the symptoms from extended exposure to the screen and blue light.



Low Blue Light
(Software
Solution)
Flicker Free

www.tuv.com

- Place the screen 20 – 28 inches (50 – 70 cm) away from your eyes and a little below eye level.
- Consciously blinking the eyes every now and then will help to reduce eye strain after extended screen time.
- Take breaks for 20 minutes every 2 hours.
- Look away from the screen and gaze at a distant object for at least 20 seconds during breaks.
- Make stretches to relieve body fatigue or pain during breaks.
- Turn on the optional Low Blue Light function.

TÜV Rheinland Flicker Free Certification

- TÜV Rheinland has tested this product to ascertain whether the display produces visible and invisible flicker for the human eye and therefore strains the eyes of users.
- TÜV Rheinland has defined a catalogue of tests, which sets out minimum standards at various frequency ranges. The test catalogue is based on internationally applicable standards or standards common within the industry and exceeds these requirements.
- The product has been tested in the laboratory according to these criteria.
- The keyword “Flicker Free” confirms that the device has no visible and invisible flicker defined in this standard within the range of 0 - 3000 Hz under various brightness settings.
- The display will not support Flicker Free when Anti Motion Blur/MPRT is enabled. (The availability of Anti Motion Blur/MPRT varies by products.)

ENERGY STAR Certification

ENERGY STAR is a program run by the U.S. Environmental Protection Agency (EPA) and U.S. Department of Energy (DOE) to promote energy efficiency. This product qualifies for ENERGY STAR in the “factory default” settings through which power savings will be achieved. Changing the factory default picture settings or enabling other features will increase power consumption, which could exceed the limits necessary to qualify for ENERGY STAR rating.



For more information on ENERGY STAR, refer to <https://www.energystar.gov/>.

Regulatory Notices

CE Conformity

This product has been tested and found to comply with the harmonized standards for Information Technology Equipment published under Directives of Official Journal of the European Union.



FCC-B Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the measures listed below:



- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice 2

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

MSI Computer Corp.

901 Canada Court, City of Industry, CA 91748, USA

(626) 913-0828

www.msi.com

WEEE Statement

European Union: This symbol on the product indicates that this product cannot be discarded as municipal waste. Instead, it is your responsibility to dispose of your waste electrical and electronic equipment by handing it over to a designated collection point for recycling. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



Chemical Substances Information

In compliance with chemical substances regulations, such as the EU REACH Regulation (Regulation EC No. 1907/2006 of the European Parliament and the Council), MSI provides the information of chemical substances in products at:
<https://csr.msi.com/global/index>

RoHS Statement

Japan JIS C 0950 Material Declaration

A Japanese regulatory requirement, defined by specification JIS C 0950, mandates that manufacturers provide material declarations for certain categories of electronic products offered for sale after July 1, 2006.

<https://csr.msi.com/global/Japan-JIS-C-0950-Material-Declarations>

India RoHS

This product complies with the “India E-waste (Management and Handling) Rule 2016” and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

Turkey EEE Regulation

Conforms to the EEE Regulations of the Republic Of Turkey.

Ukraine Restriction of Hazardous Substances

The equipment complies with requirements of the Technical Regulation, approved by the Resolution of Cabinet of Ministry of Ukraine as of 10 March 2017, № 139, in terms of restrictions for the use of certain dangerous substances in electrical and electronic equipment.

Vietnam RoHS

As from December 1, 2012, all products manufactured by MSI comply with Circular 30/2011/TT-BCT temporarily regulating the permitted limits for a number of hazardous substances in electronic and electric products.

Green Product Features

- Reduced energy consumption during use and stand-by
- Limited use of substances harmful to the environment and health
- Easily dismantled and recycled
- Reduced use of natural resources by encouraging recycling
- Extended product lifetime through easy upgrades
- Reduced solid waste production through take-back policy

Environmental Policy

- The product has been designed to enable proper reuse of parts and recycling and should not be thrown away at its end of life.
- Users should contact the local authorized point of collection for recycling and disposing of their end-of-life products.
- Visit the MSI website <https://csr.msi.com/global/pevn_ewaste> and locate a nearby distributor for further recycling information.
- Please visit <<https://us.msi.com/page/recycling>> for information regarding the recycling of your product in the US.



Warning!

Overuse of screens is likely to affect eyesight.

Recommendations:

1. Take a 10-minute break for every 30 minutes of screen time.
2. Children under 2 years of age should have no screen time. For children aged 2 years and over, screen time should be limited to less than one hour per day.

Copyright and Trademarks Notice

msi

MSI

微星

微星科技
MICRO-STAR INTERNATIONAL



Copyright © Micro-Star Int'l Co., Ltd. All rights reserved. The MSI logo used is a registered trademark of Micro-Star Int'l Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.



The terms HDMI™, HDMI™ High-Definition Multimedia Interface, HDMI™ Trade dress and the HDMI™ Logos are trademarks or registered trademarks of HDMI™ Licensing Administrator, Inc.

Technical Support

If a problem arises with your product and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please visit <https://www.msi.com/support/> for further guidance.

Ovaj dokument je originalno proizveden i objavljen od strane proizvođača, brenda MSI, i preuzet je sa njihove zvanične stranice. S obzirom na ovu činjenicu, Tehnoteka ističe da ne preuzima odgovornost za tačnost, celovitost ili pouzdanost informacija, podataka, mišljenja, saveta ili izjava sadržanih u ovom dokumentu.

Napominjemo da Tehnoteka nema ovlašćenje da izvrši bilo kakve izmene ili dopune na ovom dokumentu, stoga nismo odgovorni za eventualne greške, propuste ili netačnosti koje se mogu naći unutar njega. Tehnoteka ne odgovara za štetu nanесenu korisnicima pri upotrebi netačnih podataka. Ukoliko imate dodatna pitanja o proizvodu, ljubazno vas molimo da kontaktirate direktno proizvođača kako biste dobili sve detaljne informacije.

Za najnovije informacije o ceni, dostupnim akcijama i tehničkim karakteristikama proizvoda koji se pominje u ovom dokumentu, molimo posetite našu stranicu klikom na sledeći link:

<https://tehnoteka.rs/p/msi-zakrivljeni-monitor-34-va-pro-mp341cq-e12-akcija-cena/>